



SERVICE MANUAL

BE-3B CHASSIS

MODEL	COMMANDER	DEST.	CHASSIS NO.	MODEL	COMMANDER	DEST.	CHASSIS NO.
KV-B2931A	RM-833	Italian	SCC-G81P-A	KV-B2931D	RM-833	AEP	SCC-G77P-A
KV-B2933B	RM-833	French	SCC-G85M-A	KV-B2933E	RM-833	Spanish	SCC-G82N-A

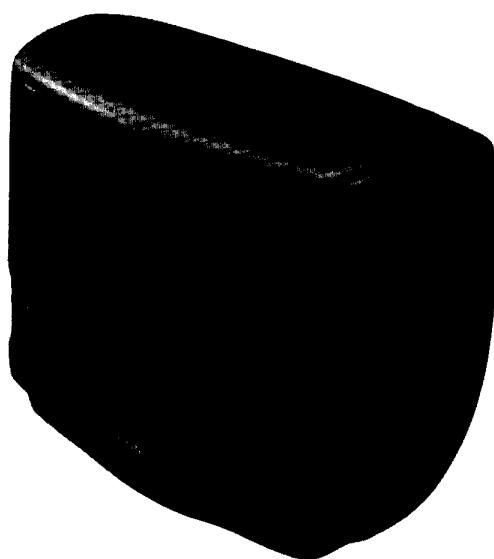

TRINITRON® COLOUR TV
SONY®

ITEM MODEL	Television System	Stereo System	Channel Coverage	Color System
Italian	B/G/H	GERMAN Stereo	PAL B/G/H VHF: E2-E12 UHF: E21-E69 CABLE TV (1): S1-S41 CABLE TV (2): S01-S05, M1-M10 ,U1-U10 ITALIA VHF: A-H2	PAL NTSC 3.58/NTSC 4.43 (Video In)
French	B/G/H, L, I	GERMAN/NICAM Stereo	PAL B/G/H VHF: E2-E12 UHF: E21-E69 CABLE TV (1): S1-S41 CABLE TV (2): S01-S05, M1-M10 ,U1-U10 ITALIA VHF: A-H2 SECAM L VHF: F02-F10 UHF: F21-F69 CABLE(France) VHF: B-Q UHF: S21-S41 I UHF: B21-B69	PAL, SECAM NTSC 3.58/NTSC 4.43 (Video In)
AEP	B/G/H, D/K	GERMAN Stereo	PAL B/G/H VHF: E2-E12 UHF: E21-E69 CABLE TV (1): S1-S41 CABLE TV (2): S01-S05, M1-M10 ,U1-U10 ITALIA VHF: A-H2 SECAM D/K VHF: R01-R12 UHF: R21-R60	PAL, SECAM NTSC 3.58/NTSC 4.43 (Video In)
Spanish	B/G/H	GERMAN/NICAM Stereo	PAL B/G/H VHF: E2-E12 UHF: E21-E69 CABLE TV (1): S1-S41 CABLE TV (2): S01-S05, M1-M10 ,U1-U10 ITALIA VHF: A-H2	PAL, SECAM NTSC 3.58/NTSC 4.43 (Video In)

MODEL	Italian	French	AEP	Spanish
Power Consumption	106W	105Wh	105W	105W

Specifications

Picture tube Super Trinitron
Approx. 72 cm (29 inches)
(Approx. 68 cm picture measured diagonally)
110° -deflection

Input/Output Terminals

[REAR]

- 1 21-pin Euro connector (CENELEC standard)
 - Inputs for audio and video signals
 - inputs for RGB
 - outputs of TV video and audio signals
- 2/➤ 2 21-pin Euro connector
 - inputs for audio and video signals
 - inputs for S video
 - outputs for audio and video signals (selectable)

[FRONT]

- 3 Video input-phonon jack
- ≤ 3 Audio inputs-phonon jacks
- 3 S video input - 4-pin DIN
- Ω Headphone jack - Stereo minijack

Sound output 2x30W (Music power)
Approx. 751 x 578 x 530 mm
Weight Approx. 48.5 kg

Supplied accessories RM-833 Remote Commander (1)
IEC designation R6 battery (1)
Other features Fastext/TOP-Text
Nicom



[RM-833]

Remote control system infrared control
Power requirements 1.5V dc
1 battery IEC designation
R6 (size AA)
Dimensions Approx. 65 x 222 x 21 mm (w/h/d)
Weight Approx. 157g (Not including battery)

Design and specifications are subject to change without notice.

Model name Item	KV-B2931A	KV-B2933B	KV-B2931D	KV-B2933E
Pal Comb	OFF	OFF	OFF	OFF
PIP	OFF	OFF	OFF	OFF
RGB Priority	ON	ON	OFF	OFF
Scart 1	ON	ON	ON	ON
Scart 2	ON	ON	ON	ON
Front in (3)	ON	ON	ON	ON
Scart 4	OFF	OFF	OFF	OFF
Projector	OFF	OFF	OFF	OFF
AKB in 16:9 mode	ON	ON	ON	ON
Norm B/G/H	ON	ON	ON	ON
Norm I	OFF	ON	OFF	OFF
Norm D/K	OFF	OFF	ON	OFF
Norm AUS	OFF	OFF	OFF	OFF
Norm L	OFF	ON	OFF	OFF
Norm SAT	OFF	OFF	OFF	OFF
Norm M	OFF	OFF	OFF	OFF
TOP-Text	ON	ON	ON	ON
Nicam stereo	OFF	ON	OFF	ON
Language Preset	Italian	French	German	Spanish

21 pin connector (→ 1 / 2)

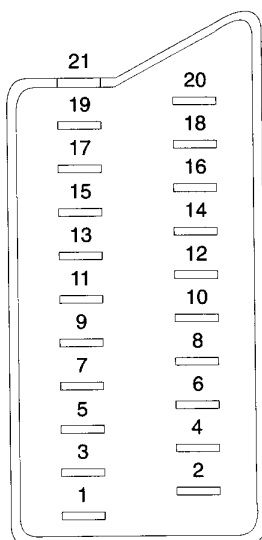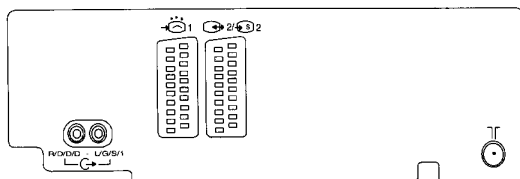

Pin No	1	2	Signal	Signal level
1	○	○	Audio output B (right)	Standard level: 0.5Vrms Output impedance: less than 1kohm*
2	○	○	Audio input B (right)	Standard level: 0.5Vrms Input impedance: More than 10kohms*
3	○	○	Audio output A (left)	Standard level: 0.5Vrms Output impedance: less than 1kohm*
4	○	○	Ground (audio)	
5	○	○	Ground (blue)	
6	○	○	Audio input A (left)	Standard level: 0.5Vrms Input impedance: More than 10kohms*
7	○	●	Blue input	0.7V±3dB, 75ohms, positive
8	○	○	Function select (AV control)	High state (9.5—12V): Part mode Low state (0—2V): TV mode Input impedance: More than 10kohms Input capacitance: Less than 2nF
9	○	○	Ground (green)	
10	○	○	Open	
11	○	●	Green	Green signal: 0.7V±3dB. 75ohms, positive
12	○	○	Open	
13	○	○	Ground (red)	
14	○	○	Ground (blanking)	
15	○	—	Red input	0.7V±3dB, 75ohms, positive
	—	○	(S signal) chroma input	0.3V±3dB, 75ohms, positive
16	○	●	Blanking input (Ys signal)	High state (1—3V) Low state (0—0.4V) Input impedance: 75ohms
17	○	○	Ground (video output)	
18	○	○	Ground (video input)	
19	○	○	Video output	1V±3dB, 75ohms, positive Sync: 0.3V(-3, +10dB)
20	○	—	Video input	1V±3dB, 75ohms, positive Sync: 0.3V(-3, +10dB)
	—	○	Video Input/Y (S signal)	1V±3dB, 75ohms, positive Sync: 0.3V(-3, +10dB)
21	○	○	Common ground (plug, shield)	

○ Connected ● Not Connected (open) * at 20Hz - 20kHz

Pin No	Signal	Signal level
1	Ground	
2	Ground	
3	Y (S signal) input	1V ± 3dB 75 ohm , positive Sync. 0.3V -3/+10 dB
4	C (S signal) input	0.3V ± 3dB 75 ohm , positive Sync.




TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>	<u>Section</u>	<u>Title</u>	<u>Page</u>
1. GENERAL			5. DIAGRAMS		
	Getting Started	6	5-1.	Block Diagram	25
	Advanced TV Operations	7	5-2.	Circuit Boards Location	30
	Advanced Presetting Functions	8	5-3.	Schematic Diagrams and Printed Wiring Boards	30
	Teletext Operation	9		* H1 Board	31
	Connecting Other Equipment	10		* H2 Board	31
	For Your Information	10		* H3 Board	31
2. DISASSEMBLY				* F1 Board	32
2-1.	Speaker Cover Removal	11		* D Board	35
2-2.	Rear Cover Removal	11		* A Board	40
2-3.	Chassis Assy Removal	12		* C Board	50
2-4.	Service Position	12		* VM Board	52
2-5.	A Board Removal	13		* D2 Board	52
2-6.	Extension Board	13	5-4.	Semiconductors	55
2-7.	Picture Tube Removal	14			
3. SET-UP ADJUSTMENTS			6. EXPLODED VIEWS		
3-1.	Beam Landing	15	6-1.	Chassis	57
3-2.	Convergence	16	6-2.	Picture Tube	58
3-3.	Focus	18			
3-4.	White Balance	18	7. ELECTRICAL PARTS LIST		59
4. CIRCUIT ADJUSTMENTS					
4-1.	Electrical Adjustments	19			
4-2.	Test Mode 2 :	20			
4-3.	BE-3B Self Diagnostic Software	23			

CAUTION

SHORT CIRCUIT THE ANODE OF THE PICTURE TUBE AND THE ANODE CAP TO THE METAL CHASSIS, CRT SHIELD, OR CARBON PAINTED ON THE CRT, AFTER REMOVING THE ANODE.

WARNING !!

AN ISOLATION TRANSFORMER SHOULD BE USED DURING ANY SERVICE TO AVOID POSSIBLE SHOCK HAZARD, BECAUSE OF LIVE CHASSIS.
THE CHASSIS OF THIS RECEIVER IS DIRECTLY CONNECTED TO THE AC POWER LINE.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY SHADING AND MARK  ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND, IN THE PARTS LIST ARE CRITICAL FOR SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION

APRES AVOIR DECONNECTE LE CAP DE L'ANODE, COURT-CIRCUITER L'ANODE DU TUBE CATHODIQUE ET CELUI DE L'ANODE DU CAP AU CHASSIS METALLIQUE DE L'APPAREIL, OU AU COUCHE DE CARBONE PEINTE SUR LE TUBE CATHODIQUE OU AU BLINDAGE DU TUBE CATHODIQUE.

ATTENTION !!

AFIN D'EVITER TOUT RISQUE D'ELECTROCUTION PROVENANT D'UN CHÂSSIS SOUS TENSION, UN TRANSFORMATEUR D'ISOLEMENT DOIT ETRE UTILISÉ LORS DE TOUT DÉPANNAGE. LE CHÂSSIS DE CE RÉCEPTEUR EST DIRECTEMENT RACCORDÉ À L'ALIMENTATION SECTEUR.


ATTENTION AUX COMPOSANTS RELATIFS À LA SÉCURITÉ!!

LES COMPOSANTS IDENTIFIÉS PAR UNE TRAME ET PAR UNE MARQUE  SUR LES VUES EXPLOSÉES ET LES LISTES DE PIÉCES SONT D'UNE IMPORTANCE CRITIQUE PUR LA SÉCURITÉ DU FONCTIONNEMENT. NE LES REMPLACER QUE PAR DES COMPOSANTS SONY DONT LE NUMÉRO DE PIÉCE EST INDIQUÉ DANS LE PRÉSENT MANUEL OU DANS DES SUPPLÉMENTS PUBLIÉS PAR SONY.

SECTION 1 GENERAL

Getting Started

Inserting the Battery Into the Remote Commander

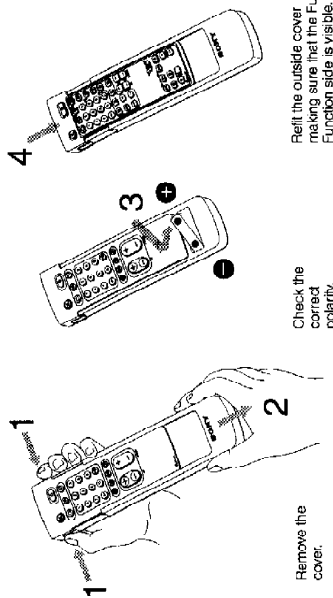

Refit the outside cover making sure that the Full Function side is visible.


Check the correct polarity.

About Battery Life

Under normal operation, a battery will last up to half a year. Always remember to dispose of used battery in an environmental friendly way.

Connecting the Aerial

Connect the aerial to the T socket at the rear of the TV. (cable not supplied)

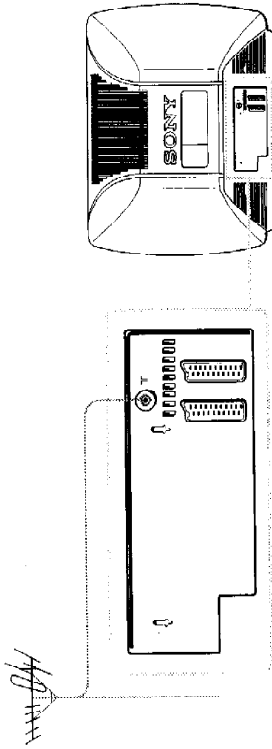

The operating instructions mentioned here are partial abstracts from the Operating Instruction Manual. The page numbers of the Operating Instruction Manual remain as in the manual.

Choosing a Language

(See inside of front cover and back cover)

1 Depress **1** on the TV.
The TV turns on. If the standby indicator **1** on the TV is lit, press **1** or any number button **1** on the Remote Commander.

2 Press **MENU** on the Remote Commander.
The SELECT LANGUAGE screen appears.

3 Press one of the colour buttons on the Remote Commander to select a language (Press the white button to display other language alternatives). The SELECT LANGUAGE screen clears and all subsequent menus appear in the chosen language.



Note: From the second time when you turn on the TV the MENU screen appears instead of the SELECT LANGUAGE screen. Press the yellow button then press the white button to redisplay the SELECT LANGUAGE screen.

Tuning in to Channels

You can tune in up to 100 channels to programme positions either automatically or manually.

A single button press allows all receivable channels to be tuned. Use if you are unfamiliar with the channel numbers of stations.

Use if you are familiar with the channel numbers of stations.

Choose the more appropriate way for you.

Tuning in to Channels Automatically

There are two possibilities for auto tuning:

A. On the TV: hold down **1** on the front of the TV for 2 seconds
Note: the button **1** for Automatic Presetting of channels is protected to prevent accidental usage. Use the tip of a pencil to press it.

B. On the Remote Commander: as follows

1 Press **MENU**.

2 Press the white button.

3 Hold down the red button **1** for 2 seconds.


Note: Press the green button **1** to cancel.

Tuning in to Channels Manually

1 Press **MENU**.
The MENU screen appears.


2 Press the white button **1** to select PRESET.

The PRESET screen appears.



3 Press the green button **1** to select MANUAL TUNING.

The MANUAL TUNING screen appears.



Basic TV Operations

Turning the TV on and off

Turning on
Depress **ON** on the TV.

Turning off temporarily

Press **OFF** on the Remote Commander.
The TV enters standby mode and the standby indicator **ON** on the front of the TV lights up.

Turning on again

Press **ON**, **PROGR +/-**, or one of the number buttons **1** on the Remote Commander.

Turning off completely

Depress **OFF** on the TV.
Note: It is recommended to use **OFF** to turn off the TV. This could help you save energy.

Selecting TV Programmes

Press **PROGR +/-** or press the number buttons **1**.

To select a double-digit number

Press **PROGR +/-** then the number buttons **1**.

Adjusting the Volume

Press **+** or **-**.

Muting the Sound

Press **M**.

To resume normal sound, press **M** again.

Displaying the On-screen Indications

Press **OSI** once to display the on-screen indications.
Press again to make the indications disappear.

Operating the TV Using the Buttons on the TV

With the buttons on the TV, you can adjust or select the functions as follows:

Press **+** or **-** to adjust the volume.

Press **P +/-** to select programme numbers or to turn the TV on from the standby mode.

Press **CH** to select the input source.

Press **BD** to preset channels automatically.

4 Press the number buttons **0** or **MENU +/-** **0** to select a programme position.
If you use the number buttons **0**, enter a double-digit number, (eg. for programme number 4, first press 0, then 4).

5 Press the green button **0**.

Note: Use **MENU +/-** to select TV system.

You can alternatively select input sources which may be assigned to programme positions.

The display changes as follows:

B/G $\Rightarrow$ D/K $\Rightarrow$ A/V $\Rightarrow$ R/SB $\Rightarrow$ A/2 $\Rightarrow$ A/G $\Rightarrow$ Y/C3

6 Press the green button **0**.

Note: If a video input source is selected in step 5, this is now stored.

Refer to step 4 to tune other programme positions.

7 If you have selected B/G in step 5, press the red button **0** to select C (regular channel) or S (cable channel).

8 Press the number buttons **0** or **MENU +/-** **0** to select the channel number.
If you use the number buttons **0**, enter a double-digit number, (eg. for channel 23, first press 2, then 3).

9 Press the green button **0** to store.

Note: If you want to preset other channels, repeat steps 4 to 9.

10 Press **MENU** **0** twice to return to the normal screen.

Note: You can skip unused programme positions when selecting programmes with the **PROGR +/-** buttons **0**.

Press the red button **0** to skip in step 4. However, the skipped programmes may still be called up when you use the number buttons.

Advanced TV Operations

Operating the Menu System

You can adjust picture and sound, preset channels to programme positions and utilise other convenient features by using the following menu system.

Press:	to:
1 MENU 0	enter the MENU screen
2 a colour button 0	select an item you want to change (the selected item is marked by a triangle)
3 MENU +/- 0	change (or adjust) the contents of the item
4 MENU 0	return to the MENU screen
5 MENU 0 again	return to the normal screen

Press **MENU** **0** once or twice whenever you want to return to the normal screen.

Note: When selecting menus, the picture becomes darker. If, however, an item in the PICTURE ADJUSTMENT menu is selected, normal level of TV picture is restored to allow the best adjustment.

Adjusting the Picture and Sound

Although picture and sound are adjusted at the factory you can adjust them to suit your own taste.

1 Press **MENU** **0**.

The MENU screen appears.

2 Press the red button **0** to select PICTURE or the green button **0** to select SOUND.

3 Press the respective colour button **0** to select an item.

4 Press **MENU +/-** **0** to adjust.

5 Press **MENU** **0** twice or wait until the menu displays disappear automatically to return to the normal screen.

PICTURE ADJUSTMENT

(First Page)



Press colour button	Effect
Red: For Picture 0	Less ——— More
Green: For Colour 0	Less ——— More
Yellow: For Brightness 0	Darker ——— Brighter
Blue: For Sharpness 0	Softer ——— Sharper
White:	Next page of PICTURE ADJUSTMENT

PICTURE ADJUSTMENT

(Second Page)

PICTURE ADJUSTMENT
• COLOUR TONE NORMAL • HORIZONTAL NORMAL • VERTICAL NORMAL • BACK • BRIGHTNESS
SELECT COLOUR BUTTON CHANGE BY MENU +/-

Press colour button	Effect
Red: For Colour Tone	Normal → Warm (reddish colour tone) → Cool (bluish colour tone)
Green: For Format	Normal: Normal setting 16:9 Wide screen effect
Yellow: For Picture Rotation (only for KV-B2931D)	Normal: Normal setting -5 ~ +5: Adjust the picture slant which may be caused by the earth magnetism
Blue: For Hue control (only for NTSC video signals)	Reddish ——— Greenish
White:	Back to first page of PICTURE ADJUSTMENT

Note: Press →←← on the Remote Commander to reset to the factory preset levels for picture and sound.

SOUND ADJUSTMENT

(First Page)

SOUND ADJUSTMENT
• BASS • TREBLE • BASS • TREBLE • BASS • TREBLE
SELECT COLOUR BUTTON ADJUST BY MENU +/-

Press colour button	Effect
Red: For Volume	Less ——— More
Green: For Treble	Less ——— More
Yellow: For Bass	Less ——— More
Blue: For Balance	More left — more right
White:	Next page of SOUND ADJUSTMENT

SOUND ADJUSTMENT

(Second Page)

SOUND ADJUSTMENT
• SPACE SOUND OFF • 4: STEREO • 4: STEREO • 4: STEREO • 4: STEREO
SELECT COLOUR BUTTON CHANGE BY MENU +/-

Press colour button	Effect
Red: For Space Sound	OFF: normal sound ON: for a special acoustic sound effect
Green: For Loudness	OFF: normal sound ON: when listening to low volume sound
Yellow: For Stereo/Dual	Stereo → Mono A (left channel) → Mono B (right channel) → Mono
Blue: For Reset	Resets picture and sound to the factory preset levels.
White:	Back to first page of SOUND ADJUSTMENT

Note: Press →←← on the Remote Commander to reset to the factory preset levels for picture and sound.

Using Special Features

With your TV you can utilise special features such as Parental Lock or Sleep Timer.

- Press MENU**
The MENU screen appears.
- Press the yellow button**
to select FEATURES.
- Press the respective colour button**
to select an item.
- Press MENU +/-**
to change.
- Press MENU**
twice or wait until the menu displays
disappear automatically to return to the normal screen.

FEATURES

FEATURES
• SLEEP TIMER OFF • PARENTAL LOCK OFF • TV BUTTON LOCK OFF • LANGUAGE • LANGUAGE
SELECT COLOUR BUTTON CHANGE BY MENU +/-

Press colour button	Effect
Red: For Sleep Timer (Automatic switch off function)	OFF → 0:30 → 1:00 → 1:30 → 2:00 (hours) After the selected time the TV set switches itself automatically into standby mode.
Green: For Parental Lock (For preventing children from watching programmes which you consider unsuitable)	OFF: Normal setting ON: The TV-channels you are watching is now blocked. In this way you can prevent undesirable broadcasts from appearing on the screen.
Yellow: For TV Button Lock	OFF: Normal setting ON: The buttons on the TV do not function anymore. (The Remote Commander still operates)
Blue: For Demo Mode	ON: A sequence of menu pictures is displayed. Press any button on the Remote Commander to stop the function.
White: For Language	The SELECT LANGUAGE screen appears

Advanced Presetting Functions

Exchanging Programme Positions

You can exchange the programme positions to a preferred order (example: exchange programme 09 (channel C21) with programme 15 (channel C24)).

- Press MENU**
The MENU screen appears.
- Press the white button**
The PRESET screen appears.
- Press the yellow button**
The PROG. EXCHANGE SCREEN appears.
- Press the white button**
repeatedly until the desired
programme number (09) appears.
- Press the red or the green button**
repeatedly until the
desired channel number (C24) appears.
- Press the white button**
to store.
Now the exchange has been completed. Channel C24 is
tuned in to programme 09 and channel C21 is tuned in to
programme 15.
- Press MENU**
twice to return to the normal screen.

PROG. EXCHANGE
• BIG CH - SONY • NEXT CHANNEL • STORE • SELECT COLOUR BUTTON

Editing Programme Names

In case of channels, which broadcast VPS signals, programme names are usually stored automatically during presetting of channels. You can also edit the programme names up to five letters.

- Press MENU**
The MENU screen appears.
- Press the white button**
The PRESET screen appears.
- Press the blue button**
The EDIT PROG. NAME screen appears.
The first character flashes.

EDIT PROG. NAME
• BIG CH - SONY • NEXT LETTER • STORE • CHANGE BY MENU +/-

4 Press MENU +/- to edit the first letter.

The first letter changes as follows
A ↔ B ↔ ... ↔ Z ↔ 1 ↔ ... 9 ↔ * ↔ (space).

5 Press the red button to move to the next letter.

6 Repeat steps 4 to 5, until the fifth letter is chosen.

7 Press the green button.

The programme name is stored, and the normal screen appears. To edit another programme name, repeat steps 1 to 7.

Fine Tuning

You can adjust the receiving conditions by the FINE TUNE function.

1 Press MENU.


The MENU screen appears.

2 Press the white button.

The PRESET screen appears.

3 Press the white button again.

The FINE TUNE screen appears.



4 Press MENU +/- to adjust the receiving condition.

5 Press the red button to store the adjustment, or press the green button not to store.

Now the normal screen appears. If you have pressed the green button, the fine-tuned condition is cancelled once you choose another programme.

Note: If the FINE TUNE screen disappears automatically before you press the red button, the fine-tuned condition is not stored. Repeat steps 1 to 5.

Tuning in to a Channel Temporarily

You can tune in to a channel temporarily, even when it has not been preset.

1 Press C on the Remote Commander.

For cable channels press C twice. The indication "C" (or "S" for cable channels) appears on the screen.

2 Enter a double digit channel number using the number buttons (e.g. for channel 23, first press 2, then 3).

The channel appears.

However, the channel is not stored.

Teletext Operation

TV stations broadcast teletext programmes via the TV channels. For basic operation of teletext, use the simple side of the Remote Commander. For the advanced features of teletext, use the buttons indicated in green on the full function side of the Remote Commander.

Basic Teletext Operation

Switching Teletext on and off

1 Select the channel which carries the teletext service you wish to view.

2 Press to display Teletext.

If no teletext signal is broadcast, the indication F.I.O. is displayed on a black screen.



3 Input three digits for the page number using the number buttons.

The numbers are displayed on the screen and the requested page appears in a few seconds.

Note: If you make a mistake, type in any three digits, then re-enter the correct page number.

4 Press to return to the TV mode.

Notes:

- To change the teletext channels, first press to return to the TV mode, then repeat steps 1 to 3.
- If the signal of a TV channel is weak, teletext errors may occur.

Advanced Teletext Operation

Using Fastext

With Fastext you can access pages with one button press. When a Fastext page is broadcast, a colour-coded menu will appear at the bottom of the screen. The colours of this menu correspond to the red, green, yellow and blue buttons on the Remote Commander.

Press the corresponding colour button on the Remote Commander which corresponds to the colour coded menu. The page will be displayed in a few seconds.

Requesting the Index page

Press . The Index page appears.

Accessing the next or preceding page

Press (PAGE -) or (PAGE +). The next or the preceding page appears on the screen.

Superimposing the teletext display on the TV picture

Press once if you are in text mode or press twice if in TV mode.

To return to the normal teletext display press twice.



Preventing a teletext page from being updated or changed

Press (HOLD). The HOLD symbol (H) appears on the screen and the selected subpage is held until you press to cancel.

Entering the teletext display

Press once to enlarge the upper half. Press twice to enlarge the lower half. Press again to restore the normal display.



Revealing concealed information (e.g. answers to a quiz)

Press (REVEAL). The information is revealed. Press again to conceal the information.

Watching TV while waiting for a requested page to be displayed

1 Request a new teletext page.

2 Press (TEXT CL).

The TV programme is displayed and the symbol is displayed at the top of the page.

Note: When the requested page is available the page number is displayed at the top of the screen.

3 Press to view the page.

To cancel the request

Display the teletext page, then press . The request is now canceled. Press to resume TV mode.

Using the Favourite Page system

You can store up to four of your favourite teletext pages per programme with the help of the Favourite page system. In this way you have quick access to the pages you watch frequently.

Storing the Favourite Pages

1 Select the page you would like to store using the number buttons.

2 Press twice.

The colour prompts at the bottom of the screen flash.

3 Press any of the colour buttons on the Remote Commander to store the selected page.

The page is now stored on this button.

Repeat steps 1 to 3 for the other 3 pages available.

Displaying the Favourite pages

1 Press twice.

2 Press the colour button corresponding to the colour prompt onto which the desired page is stored.

The page is requested (it may take a few seconds to be received).

Note: Step 1 must be taken before every 'favourite' page selection otherwise the normal Fastext facility operates.

Using the Time Function in the TV mode

Press to request the time. Press again to cancel the request.

Note: This function is available only when teletext is broadcast.

Connecting Other Equipment

You can connect optional audio/video equipment to this TV such as VCRs, video disc players, cameras or stereo systems.

Connector	Acceptable input signal	Available output signal
— 1 1	Audio/video and RGB signal from TV tuner	Audio/video signal from TV tuner
— 2 2	Audio/video and S-video signal from selected source (AV2/YC2)	Audio/video signal from selected source
— 3 3	Audio/video signal	No outputs
— 3 3	Audio/S-video signal	No outputs

To watch a video input picture, press **◀▶** until the desired video input appears.
To return to the normal TV picture, press **▶▶** repeatedly or press **○**.
If you have a decoder, connect 1 to — 1.

Connecting a VCR Using the TV Aerial Terminal

Connect the aerial output of the VCR to the aerial terminal of the TV. It is recommended to tune in the VCR signal to programme number "77". For details, see "Tuning in to Channels Manually" on page 20.

S video input (Y/C input)
Video signals may be separated into Y (luminance or brightness) and C (chrominance) signals.
Separating the Y and C signals prevents them from interfering with each other and therefore improves the picture quality (especially luminance). This TV is equipped with 2 video input terminals through which these signals can be input directly.

Checking and Selecting the Input and Output Sources Using the Menu

You can display a menu screen to see which input and output source are selected. You can also change the selecting using this menu.


Checking the Input and Output Sources

1 Press **MENU**.

The MENU screen appears.

2 Press the blue button **▶** to select INPUT/OUTPUT.

The INPUT/OUTPUT screen appears.

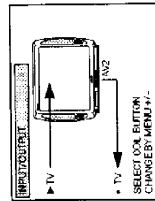

Selecting an Input Signal

Press the red button **▶** to select INPUT. Press **MENU** **▶** to select the desired input source.

You can select among the following sources:

TV **▶** AV1 **▶** RGB **▶** AV2 **▶** YC2 **▶** AV3 **▶** YC3

Selecting an Output Signal

The G-21-49 2 connector **▶** outputs the source input from the other connectors. Press the green button **▶** to select OUTPUT. Press **MENU** **▶** to select the desired output source.

You can select among the following sources:

TV **▶** AV1 **▶** AV2 **▶** YC2 **▶** AV3 **▶** YC3

Note: Press **▶** twice or wait until the menu display disappears automatically to return to the normal screen.

Remote Control of Other Sony Equipment

You can use the TV Remote Commander to control most Sony remote-controlled video equipment such as Beta 8 mm or VHS VCRs or video disc players.

Tuning the Remote Commander to the equipment

1 Set the VTR 1/2/3 MDP selector **▶** according to the equipment you want to control:

- VTR 1: Beta 8 mm VCR
- VTR 2: Beta VCR
- VTR 3: VHS VCR
- MDP: Video Disc Player

2 Use the buttons **▶** to operate the additional equipment.

Note:

- If your video equipment is furnished with a COMMAND MODE selector, set this selector to the same position as the VTR 1/2/3 MDP selector on the TV Remote Commander.
- If the equipment does not have a certain function, the corresponding button on the Remote Commander will not operate.
- When you use the **▶** (record) button, make sure to press this button and the one to the right of it simultaneously.

Using Headphones

You can utilise headphones. Connect them to the headphone jack **▶**, then the sound from the speakers goes off.

Note: You can't control the sound adjustment except for volume.

For your Information

Troubleshooting

Here are some simple solutions to problems which may affect the picture and sound.

No picture (screen is dark), no sound

- Plug the TV in.
- Press **▶** on the TV (if the standby indicator **▶** is lit, press **▶** or any number button **▶** on the Remote Commander).
- Check if the selected video source is on.
- Turn the TV off for three or four seconds and then turn it on again using **▶**.

Poor or no picture (screen is dark), but good sound

- Press **MENU** **▶** to enter the MENU screen, and press the red button **▶**, then adjust **▶** and **▶**.

Good picture but no sound

- Press **▶** + **▶**.
- If **▶** is displayed on the screen, press **▶**.


No colour for colour programmes

- Press **MENU** **▶** to enter the MENU screen, and press the red button **▶**, then adjust **▶**.

Remote Commander does not function


- Replace the battery.

If you continue to have problems, have your TV serviced by qualified personnel. Never open the casing yourself.

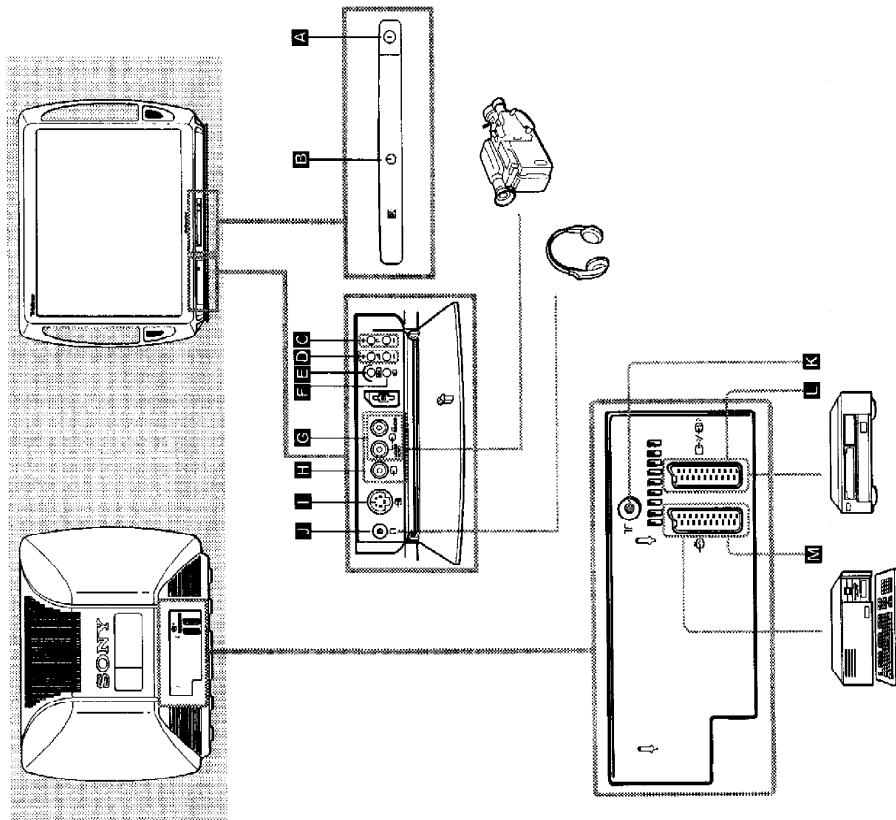


SECTION 2 DISASSEMBLY


2-1. SPEAKER COVER REMOVAL

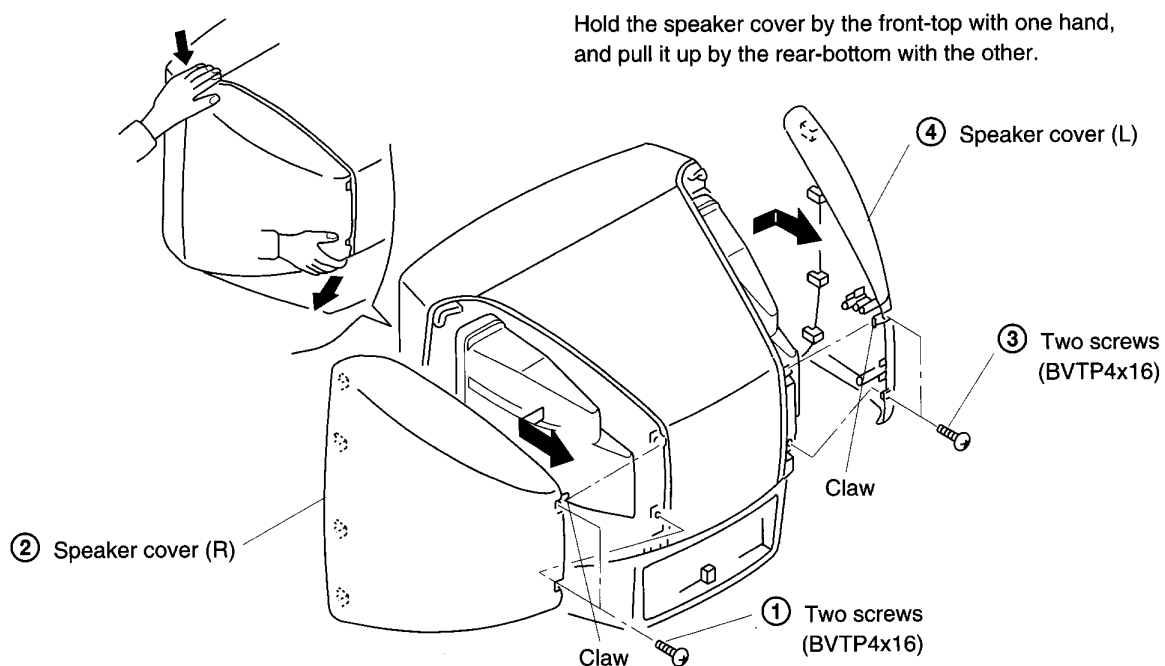


2-2. REAR COVER REMOVAL

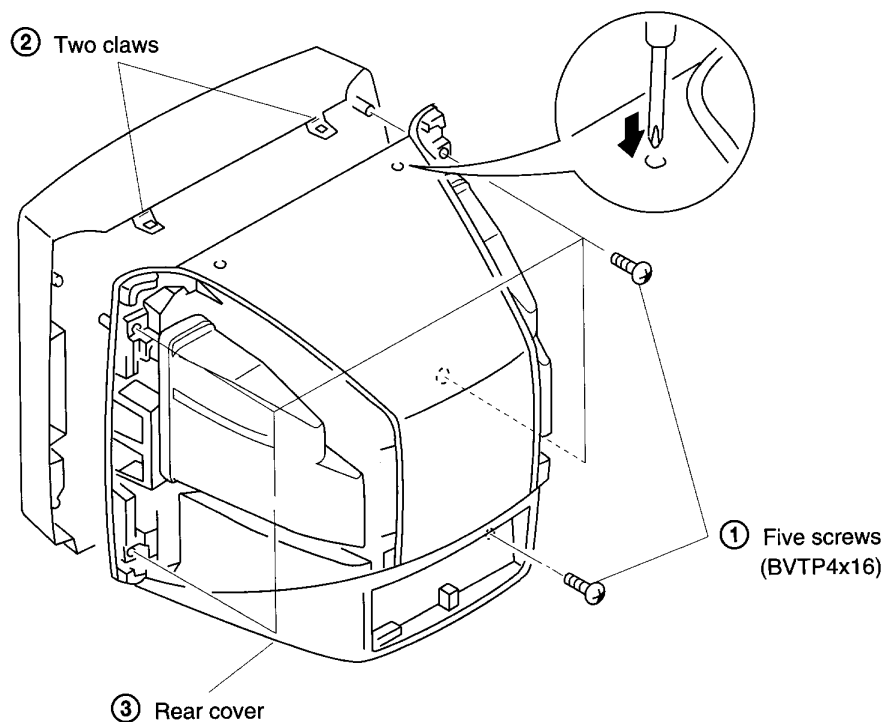


2-3. CHASSIS ASSY REMOVAL

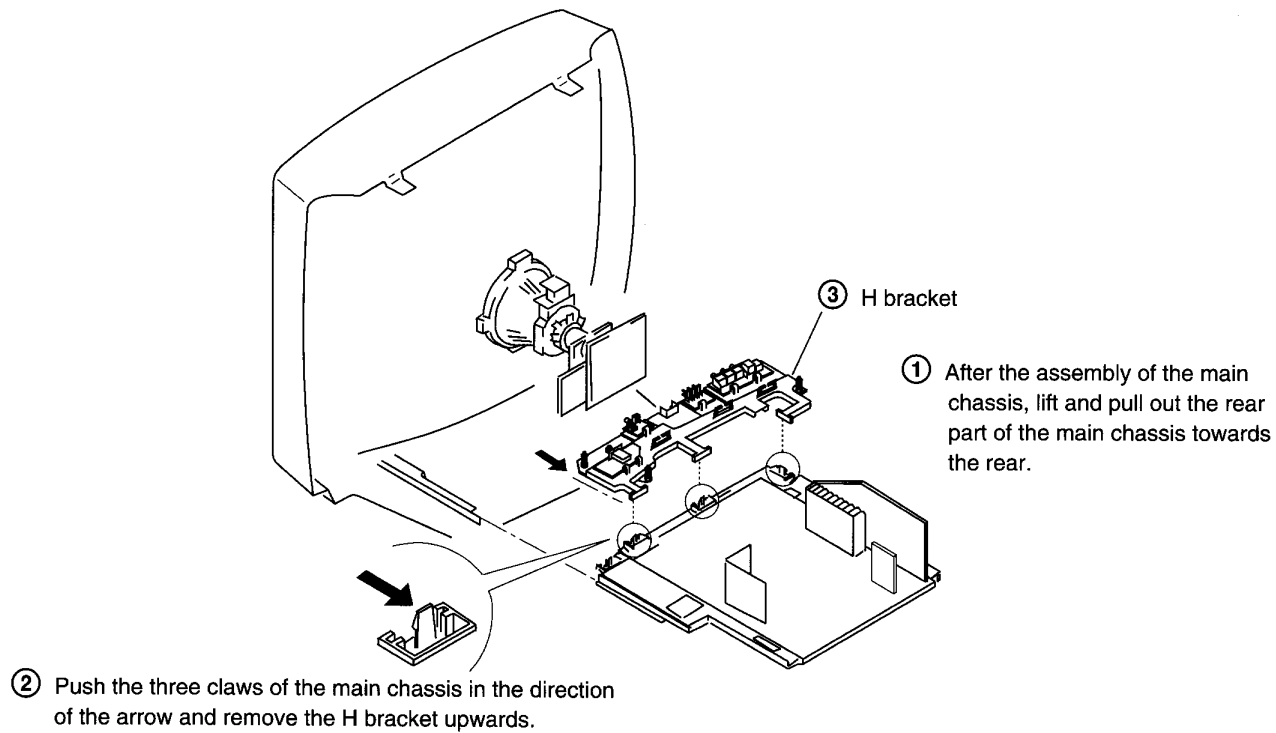


2-4. SERVICE POSITION

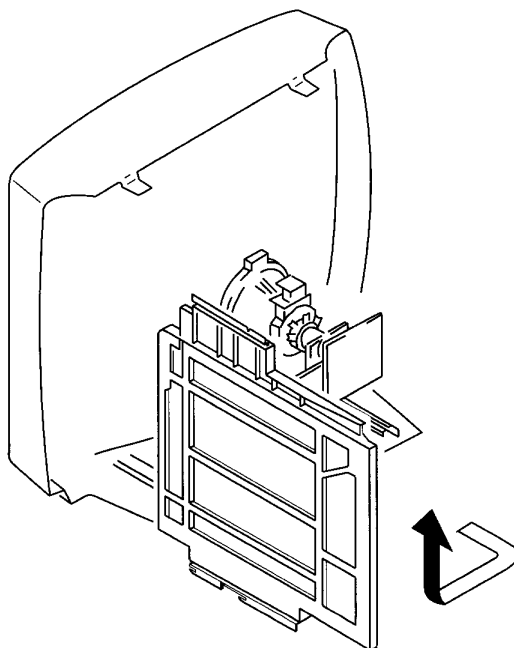


2-5. A BOARD REMOVAL

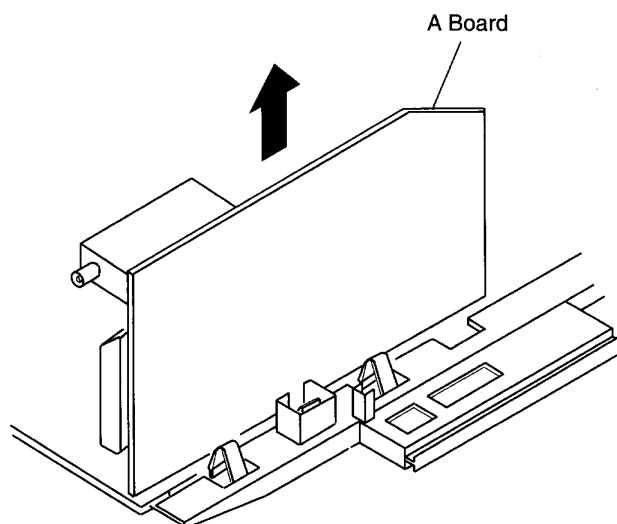

2-6. EXTENSION BOARD

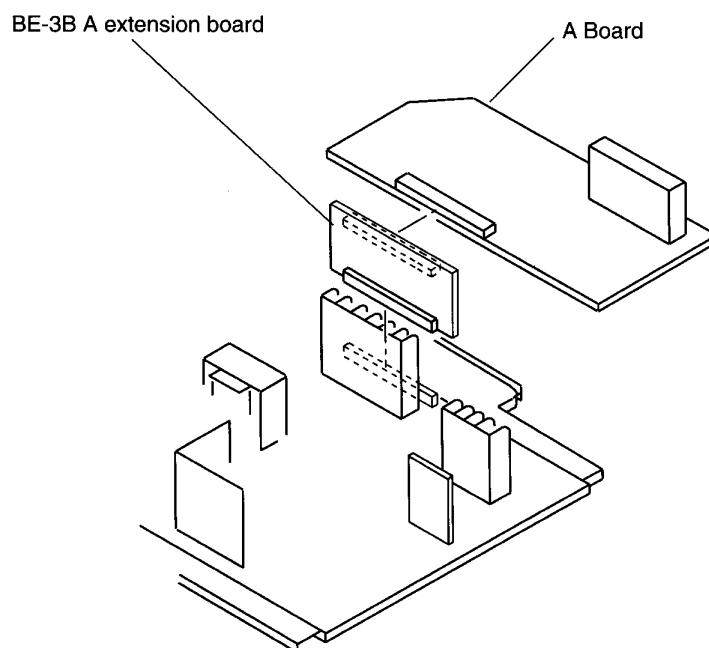

2-7. PICTURE TUBE REMOVAL

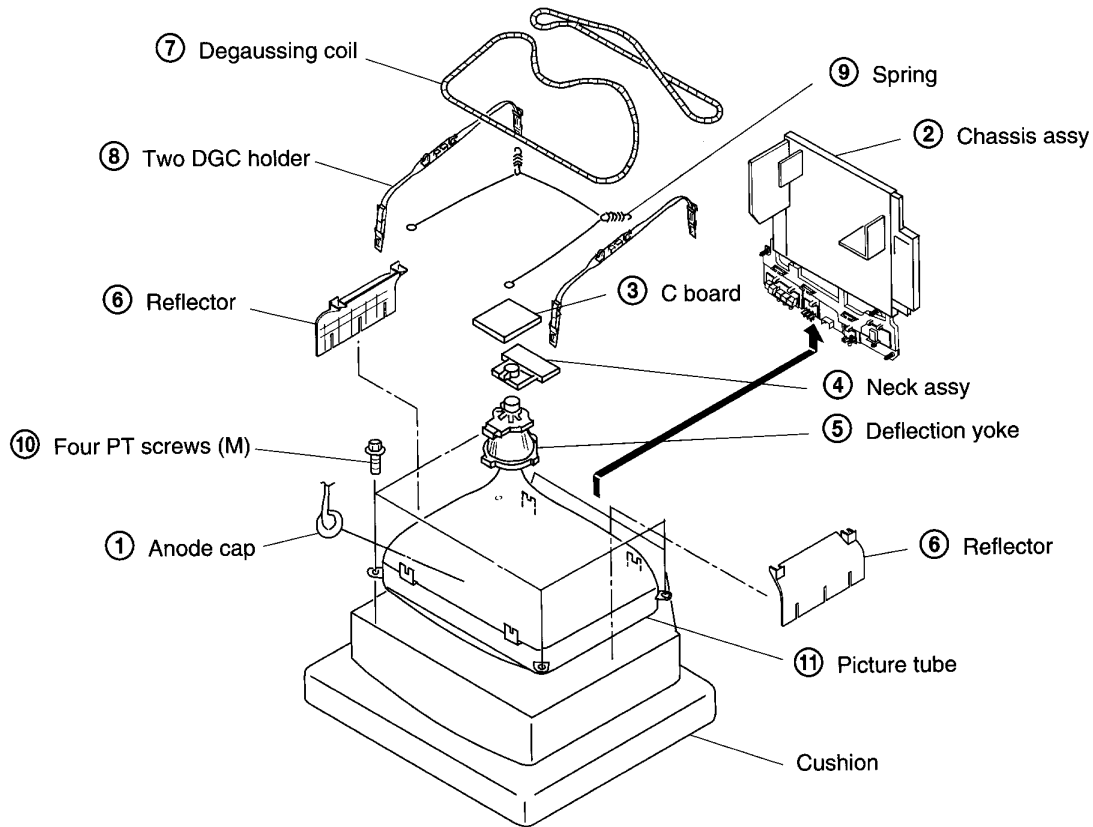

• REMOVAL OF ANODE-CAP


Note: Short circuit the anode of the picture tube and the anode cap to the metal chassis, CRT shield or carbon paint on the CRT, after removing the anode.

* REMOVING PROCEDURES.

-
- ① Turn up one side of the rubber cap in the direction indicated by the arrow (a)
 - ② Using a thumb pull up the rubber cap firmly in the direction indicated by the arrow (b)
 - ③ When one side of the rubber cap is separated from the anode button, the anode-cap can be removed by turning up the rubber cap and pulling it up in the direction of the arrow (c)

• HOW TO HANDLE AN ANODE-CAP

- ① Don't damage the surface of anode-cap with sharp shaped material !
- ② Don't press the rubber hardly not to hurt inside of anode-caps !
A metal fitting called as shatter-hook terminal is built into the rubber.
- ③ Don't turn the foot of rubber over hardly !
The shatter-hook terminal will stick out or damage the rubber.

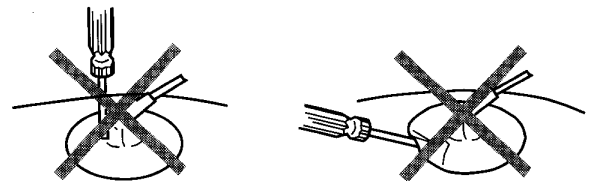

SECTION 3

SET - UP ADJUSTMENTS

- When complete readjustment is necessary or a new picture tube is installed, carry out the following adjustments.
- Unless there are specific instructions to the contrary, carry out these adjustments with the rated power supply.
- Unless there are specific instructions to the contrary, set the controls and switches to these settings :

● Contrast 80% (or remote control normal)
 ☆ Brightness 50%

- Carry out the following adjustments in this order :

1. Beam landing
2. Convergence
3. Focus
4. White balance

Note: Testing equipment required.

1. Colour bar/pattern generator
2. Degausser
3. DC power supply
4. Digital multimeter
5. Oscilloscope

Preparation:

- In order to reduce the influence of geomagnetism on the set's picture tube, face it east or west.
- Switch on the set's power and degauss with the degausser.

3-1. BEAM LANDING

- Input the white signal with the pattern generator.
 CONTRAST } normal
 BRIGHTNESS }
- Position neck assy as shown in Fig.3-2.
- Set the pattern generator raster signal to red.
- Move the deflection yoke forward and adjust with the purity control so that the red is at the centre and the blue and the green take up equally sized areas on each side. (See Fig. 3-1 - 3-3)
- Move the deflection yoke forward and adjust so that the entire screen becomes red. (See Fig. 3-1)
- Switch the raster signal to blue, then to green and verify the condition.
- When the position of the deflection yoke has been decided, fasten the deflection yoke with the screws.
- If the beam does not land correctly in all the corners, use a magnet to adjust it. (See Fig. 3-4)

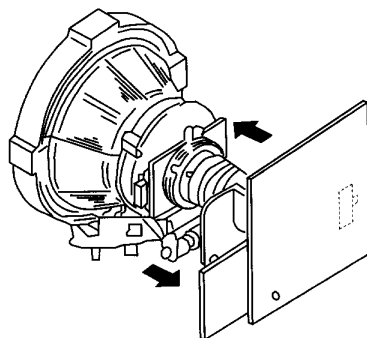


Fig. 3-1

Fig. 3-2

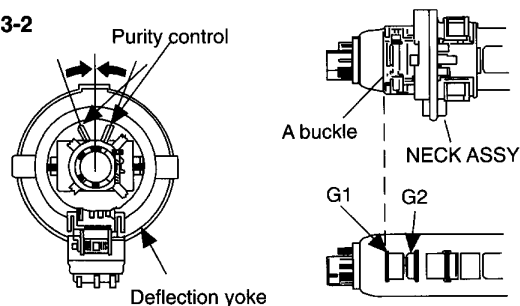


Fig. 3-3

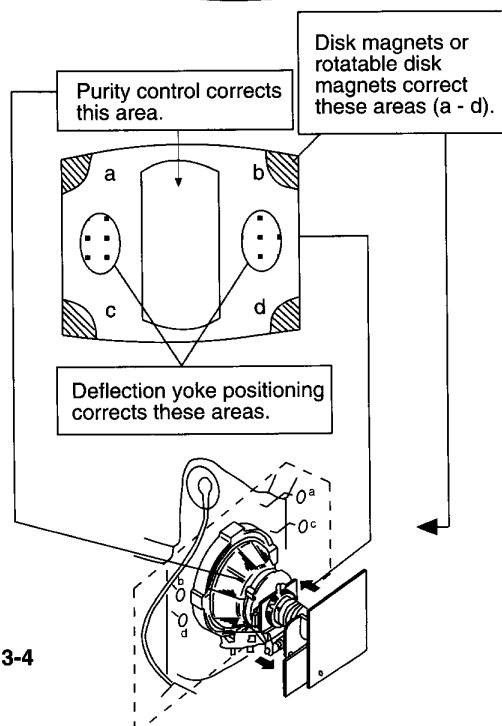
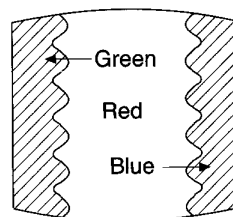



Fig. 3-4

3-2. CONVERGENCE

Preparation:


- Before starting this adjustment, adjust the focus, horizontal size, and vertical size.
- Minimize the brightness setting.
- Provide a dot pattern.

(1) Horizontal and vertical static convergence




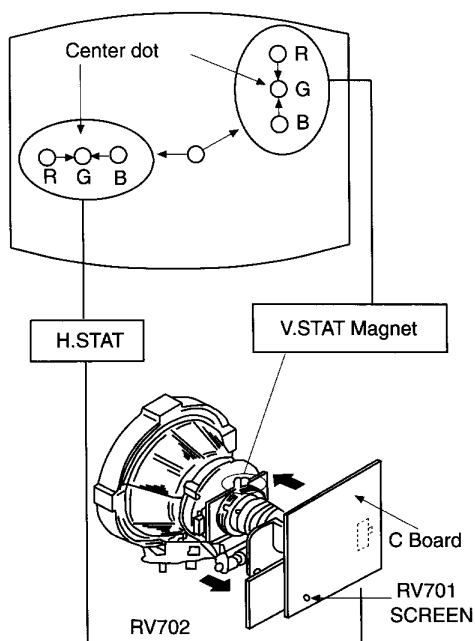


1. (Moving horizontally), adjust the H.STAT control so that the red, green, and blue points are on top of each other at the centre of the screen.
2. (Moving vertically), adjust the V.STAT magnet so that the red, green, and blue points are on top of each other at the centre of the screen.
3. If the H.STAT variable resistor cannot bring the red, green, and blue points together at the centre of the screen, adjust the horizontal convergence with the H.STAT variable resistor and the V.STAT magnet in the manner given below.
(In this case, the H.STAT variable resistor and the V.STAT magnet influence each other)


- Tilt the V.STAT magnet and adjust the static convergence by opening or closing the V.STAT magnet.

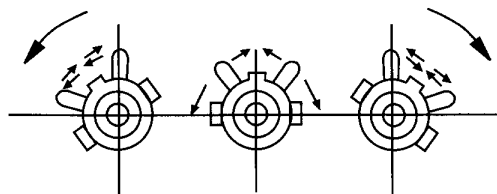


4. If the V.STAT magnet is moved in the direction of the (a) and (b) arrows, the red, green, and blue points move as shown below.

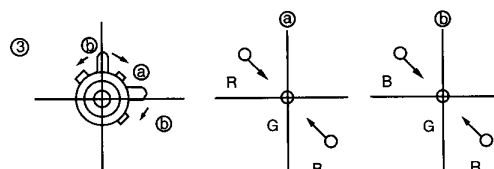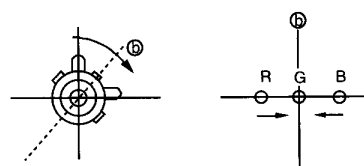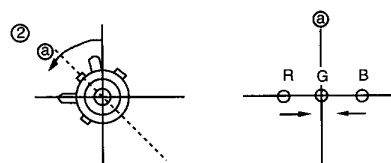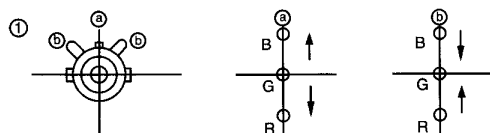

- Operation of BMC (Hexapole) Magnet

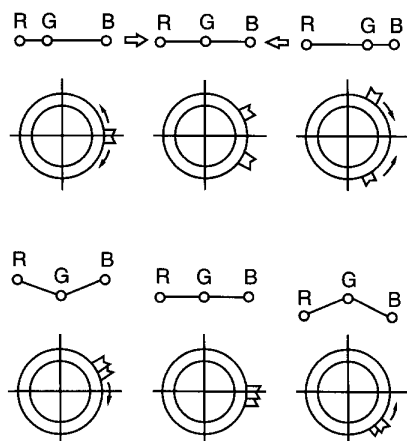

- The respective dot position resulting from moving each magnet interact, so be sure to perform adjustment while tracking.
Use the H.STAT VR to adjust the red, green, and blue dots so they coincide at the centre of the screen (by moving the dots in the horizontal direction).

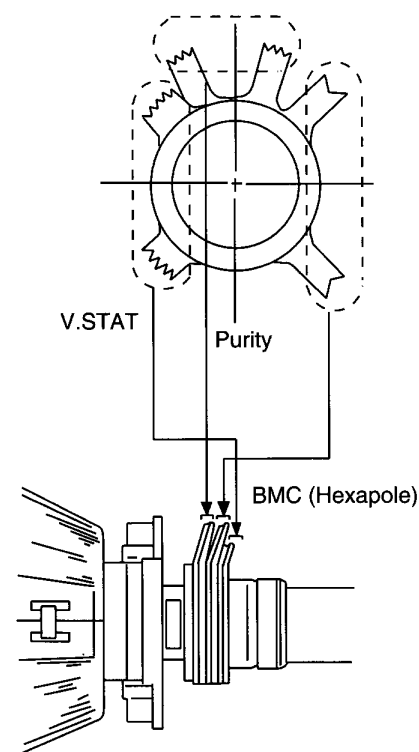


(2) Dynamic convergence adjustment.

Preparation:



- Before starting this adjustment, adjust the horizontal static convergence and the vertical static convergence.
- Slightly loosen the deflection yoke screws.

- Remove the deflection yoke spacer.
- Move the deflection yoke as shown in the figure below and optimize the convergence.
- Tighten the deflection yoke screws.
- Re-install the deflection yoke spacer.

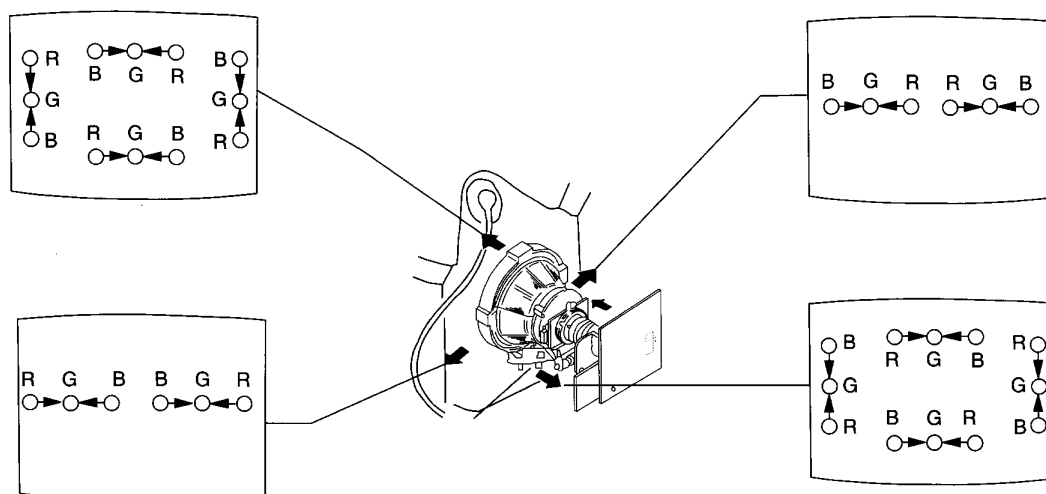


(3) Screen corner convergence.

If you are unable to adjust the corner convergence properly, correct them with the use of permalloy assemblies.

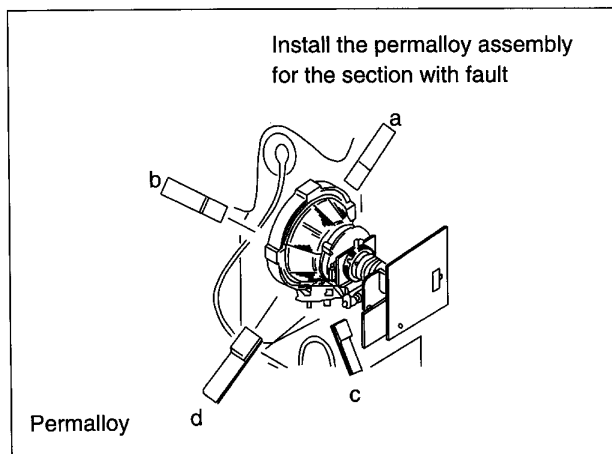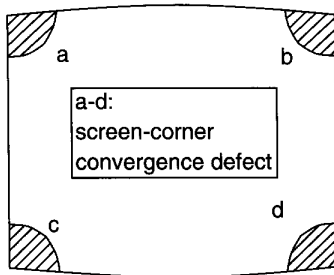**3-3. FOCUS**

Adjust the focus to optimize the screen.

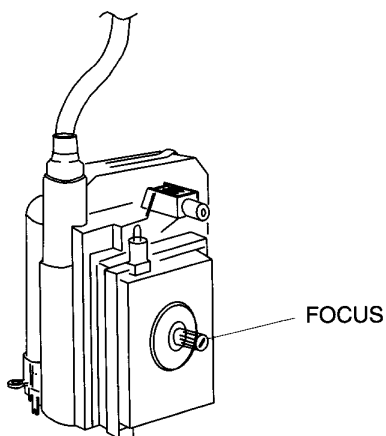**3-4. WHITE BALANCE****Screen G2 Setting**

1. Input the dot signal from the pattern generator.
2. Set the picture brightness control to its lowest level.
3. Apply 180V DC to the R,G, and B cathodes with an external power supply.
4. While watching the picture, adjust G2 control RV701 (Screen) to the point just before the return lines disappear.

White balance adjustment

1. Receive an all-white signal.
2. Enter into service mode. (Refer to the section 4 "Electrical Adjustment" on how to enter service mode.)
3. Select TDA8366 1 on menu.

DEVICE : TDA8366 1

STAT : 12

- ☐ NEXT
- ☐ PREVIOUS
- ☐ OK

USE COLOUR KEYS
SONY TEST MENU.

4. Press the White button on the Remote Commander to enter into the device Menu.
5. Press the Red button 10 times "Next" "Next" "Next" to select HWB RED, adjust to 032.
6. Press the Red button to select HWB GREEN, adjust with the + and - menu buttons so that the white balance becomes optimum.
7. Press the Red button to select HWB BLUE, adjust with the + and - menu buttons so that the white balance becomes optimum.
8. Press the TV button twice on the Remote Commander to store the data and return to TV operation.

SECTION 4


CIRCUIT ADJUSTMENTS

4-1. ELECTRICAL ADJUSTMENTS

Service adjustment to this model can be performed with the supplied remote commander RM-833.

HOW TO ENTER INTO SERVICE MODE

1. Turn on the main power switch of the set and enter into standby mode.
2. Press the following sequence of buttons on the Remote Commander.

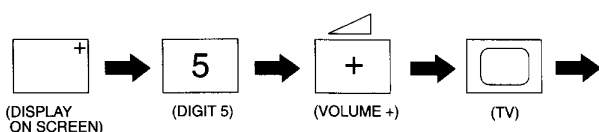

“TT” will appear in the top right corner of the screen. Other status information will also be displayed.

3. Press the **MENU** button on the Remote Commander to obtain the menu on the screen.

DEVICE NAME

STAT : xxxx

☐ NEXT

☐ PREVIOUS

☐ OK

USE COLOUR KEYS
SONY TEST MENU.

4. Press the Red (Next) and Green (Previous) buttons to select the device corresponding to the adjustment item from the table. Then press the White button (OK).

DEVICE NAME

00 ADJUSTMENT : xxx

☐ NEXT

☐ PREVIOUS

SELECT COL.BUTTON
CHANGE BY MENU +/-

5. Press the Red (Next) or Green (previous) buttons to select the adjustment item. Then press the and buttons to change the data to comply with each standard.
6. Turn off the power to quit the service mode when adjustments are completed.

Initial Conditions for setup of TDA8366, TDA6612 and SAA7283. (Stereo Models Only)

TDA8366 1	INIT VALUE	TDA8366 2	INIT VALUE
Hue	31	Interlace	00
H Shift	Adj	Sync Mode	00
H Size	Adj	Col Dec	00
Pin Amp	Adj	Vert Div	00
Corn Pin	Adj	Vid ID	00
Tilt	Adj	EHT Track	01
V.Linear	Adj	En V Grd	00
V.Size	Adj	Serv Blk	00
S.Corr	Adj	OVP Mode	00
V.Cent	Adj	Aspect R	00
HWB Red	Adj	Start Freq	00
HWB Green	Adj	Y/C Input	00
HWB Blue	Adj	PAL/NTSC	00
Peaking	8	Xtal PLL	00
Bright	32	Y Delay	07
Colour	32	RGB Blk	00
Picture	37	Noise Cor	00
AGC Set	00	Fast Blk	01
Src Sel 1	00	AFC Wind	00
Src Sel 2	00	IF Sensity	00
Time Con	03	Mod Std	00
Xtal Ind	03	Vid Mute	01
FF Freq	02		

TDA6612	INIT VALUE	TDA6612	INIT VALUE
MPX Per	00	Mute 2	01
Quasi St	00	C1/2LS	00
Bass Exp	00	C1/2KH	00
H Pulse	00	Mono	01
Matrix St	00	Scart	00
Bypass	00	Scart D	00
Vol L Sp	07	AM	00
Vol R Sp	07	SAA7283	INIT VALUE
Vol HP	00	Mon M1/M2	01
PII Sync	00	DM Select	01
Mute 3	01	SSWIT 123	07
Treble	08	Port 2	00
Bass	09	Mute Def	00
X Talk Adj	Adj	AMDIS	00
Mute 1	00	E Max	80
		E Min	01

4-2. TEST MODE 2 :

Is available by pressing Test button twice, OSD 'TT' appears. The functions described below are available by pressing the two numbers. To release the Test Mode 2, press 0 twice, or switch the TV into Stand-by Mode.

00	switch Test Mode 2 off
01	picture maximum
02	picture minimum
03	Volume 35%
04	Volume 50%
05	Volume 65%
06	Volume 80%
07	Ageing Condition (Volume min., Picture max., Brightness max.)
08	Shipping Condition (Analog Values are RESET due to factory setting, Prog 1 is selected, TT Mode is switched off)
09	"Menu" Flag request
10	Tenth entry is deleted
11	dummy
12	dummy
13	dummy
14	Forced AV 16:9 detection on/off
15	Read factory setting from NVM Reads Volume, Balance, Treble, Bass, Brightness, Contrast, Hue, Sharpness, Colour values from ROM to the actual used values (Last Power Memory)
16	Save actual used values as RESET values Memorize actual used values Balance, Treble, Bass, Hue, Sharpness at RESET position in NVM.
17	Preset Label for AV Sources
18	RGB Priority on/off
19	Clear all preset labels
20	Tenth entry is deleted
21	Sub Contrast
22	Sub Colour
23	Sub Brightness
24	Set destination = U RGB Priority = Off
25	Set destination = D RGB Priority = Off
26	Set destination = B RGB Priority = On
27	Set destination = K RGB Priority = Off
28	Set destination = L RGB Priority = Off
29	Set destination = E RGB Priority = Off

30	Tenth entry is deleted
31	Set Destination = A RGB Priority = On
32	dummy
33	Auto AGC
34	N/S Pin Adjust
35	Manual AGC Adjust
36	dummy
37	dummy
38	To Activate Rotation Coil Adjustment
39	Check Rotation Coil Adjustment
40	Tenth entry is deleted
41	Re-initialise NVM
42	Production use only
43	Initialise Geom Settings
44	Initialise all favorite pages = 100
45	Channel locks = off
46	IR Channel Presetting Mode The channel presetting can be done by a Special IR Transmitter (Ver 2 and above software only)
47	dummy
48	Set NVM testbyte to 44h
49	Erase the NVM Testbyte (this byte detects already stored NVM's) After selecting this function, switch TV Off and On -> the NVM will be preset by μ -Controller.

In Test Mode the Menu display is switchable by the Speaker-Off button.

Note : For Test Modes 41 - 49 it is necessary to ensure that the TV is set to Prog 59.

SUB BRIGHTNESS ADJUSTMENT


1. Input a Phillips pattern.
2. Enter into service mode and press 23.
3. Adjust data so that 0-IRE of grey scale and CUT-OFF 20-IRE are only slightly visible on screen.

SUB CONTRAST ADJUSTMENT

1. Input a video that contains a small 100% area on a Black Background.
2. Enter into service mode and press 01 to have PIC max followed by 21.
3. Connect oscilloscope to pin ① of CN703 (R OUT) and adjust HWB Red data of TDA8366 1 to obtain 2.3Vp-p.

SUB COLOR ADJUSTMENT

1. Input a PAL color bar signal.
2. Connect an oscilloscope to pin ③ of CN703 (B OUT) on the C board.
3. Enter into service mode and press 22.
4. Adjust data so that the right sides of the waveform are set to the same level.

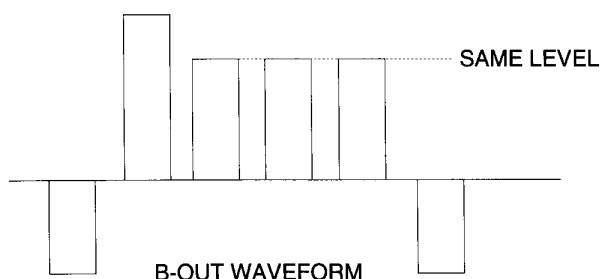**STEREO SEPARATION ADJUSTMENT**

1. Input a 1KHz stereo signal to the L-ch and a 400Hz stereo signal to the R-ch.
2. Enter into service mode and select the "Test Menu" to be TDA6612.
3. Select the Stereo Xtalk Adjustment Menu, by using the Red (Next) and Green (Previous) buttons.
4. Monitor the Scart 1 L-channel output and adjust the data so that the R-channel sound is not detected in the L-channel.

I.F. COIL ADJUSTMENT

1. Apply a 38.9MHz signal at 100dBuV to the input of SWF101.
2. Receive a channel so that the I.C. is selected for negative modulation.
3. Measure the voltage at the AFT test point and adjust (T101) to obtain 2.4V +/- 0.2V.


L, BAND 1 ADJUSTMENT (RV102) - L, STANDARD FOR FRENCH MODEL

1. Apply a 33.95MHz signal at 100dBuV to the input of SWF101.
2. Receive a channel so that the I.C. is selected for positive modulation and system L band 1.
3. Measure the voltage at the AFT test point and adjust (RV102) to obtain 2.4V +/- 0.2V.

Note : Only adjust RV102 after T101 has been correctly adjusted.

AGC ADJUSTMENT

1. Receive an off- air signal.
2. Enter the service mode, ("Test" "Test") and 35.
3. Adjust the data so that there is no snow or cross - modulation visible on the screen.
4. Change the receiving off-air channel, and confirm the above status.

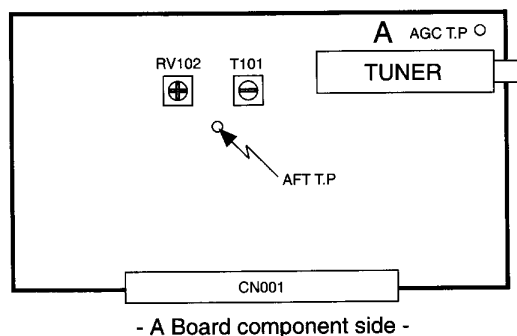


DEFLECTION SYSTEM ADJUSTMENT

1. Enter into service mode.
2. Select and adjust each item in order to obtain the optimum image.

Item No	Adjustment item.	Data Amount
03	H SHIFT	ADJ.
04	H SIZE	ADJ.
05	PIN AMP	ADJ.
06	CORR PIN	ADJ.
07	TILT	ADJ.
08	V LINEAR	ADJ.
09	V SIZE	ADJ.
0A	S CORR	ADJ.
0B	V CENTER	ADJ.

Note : V ANGLE is adjusted by a Variable Resistor on the 'D' Board (RV301)

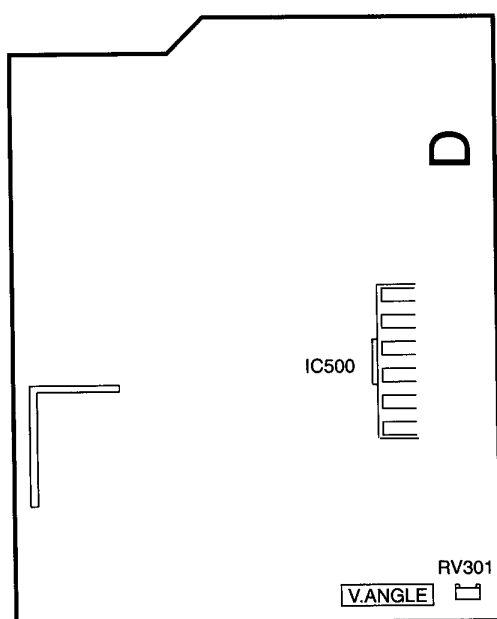


- D Board Component Side -

V SIZE



V CENTER




S CORR




V LIN




H SIZE




PIN AMP




TILT




CORR PIN



V ANGLE



H SHIFT



4-3. BE-3B SELF DIAGNOSTIC SOFTWARE

The identification of errors within the BE-3B chassis is triggered in 1 of 2 ways :- 1: Bus busy or 2: Device failiure to respond to IIC. In the event of one of these situations arrising the software will first try to release the bus if busy (Failiure to do so will report with continous flashing LED) and then communicate with each device in turn to establish if a device is faulty. If a device is found to be faulty the relevant device number will be displayed through the led (Series of flashes which must be counted) See Table 1., on fatal errors are reported with this method.


If a fatal error is found the set will simply stay in whichever state it was when the error occured, but if a non fatal error occurs the set will try to continue operation.

Table 1

Device	LED Error Count	Fatal Error
NVM	2 .. 9	√
Teletext	10	
Jungle	11	√
Video_sw	12	
Tuner	13	√
Nicam	14	
Audio_cont	15	√



Flash Timing Example : e.g. error number 3.

Stby LED




5-1. BLOCK DIAGRAM

SECTION 5 DIAGRAMS

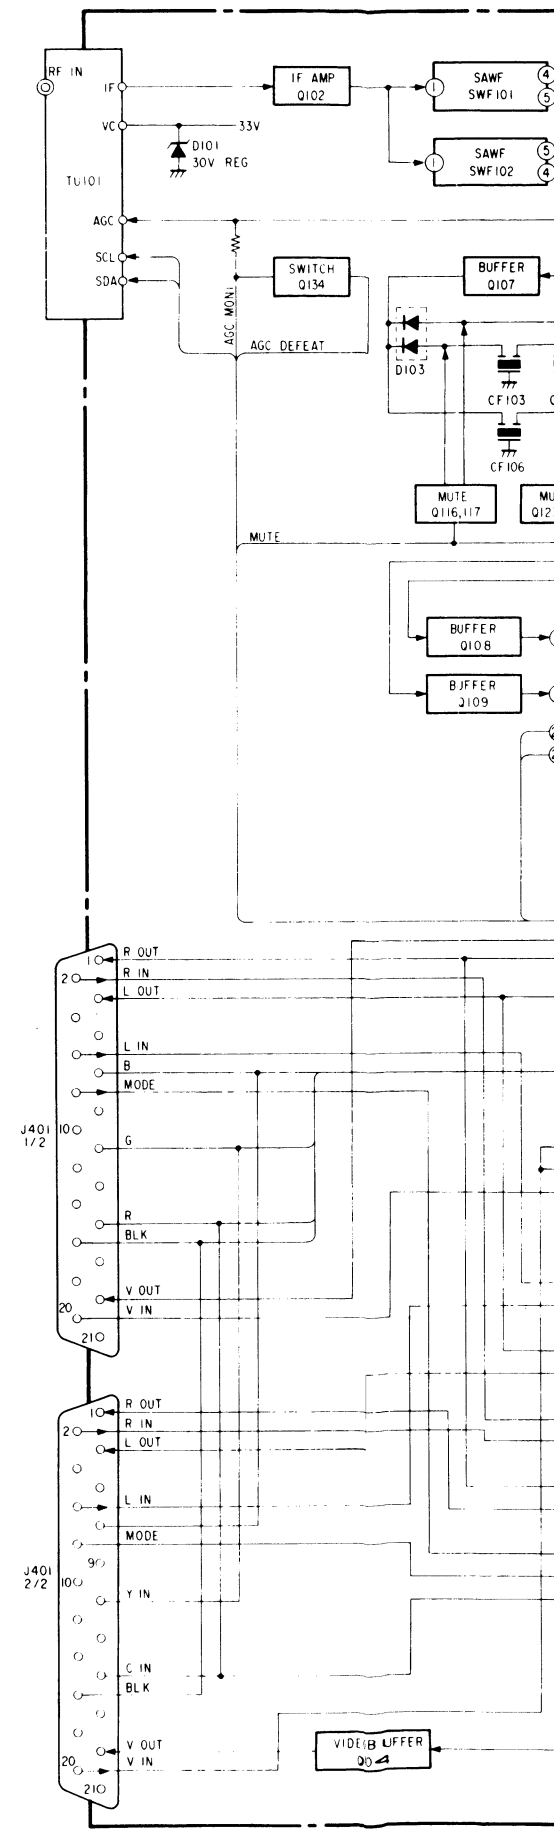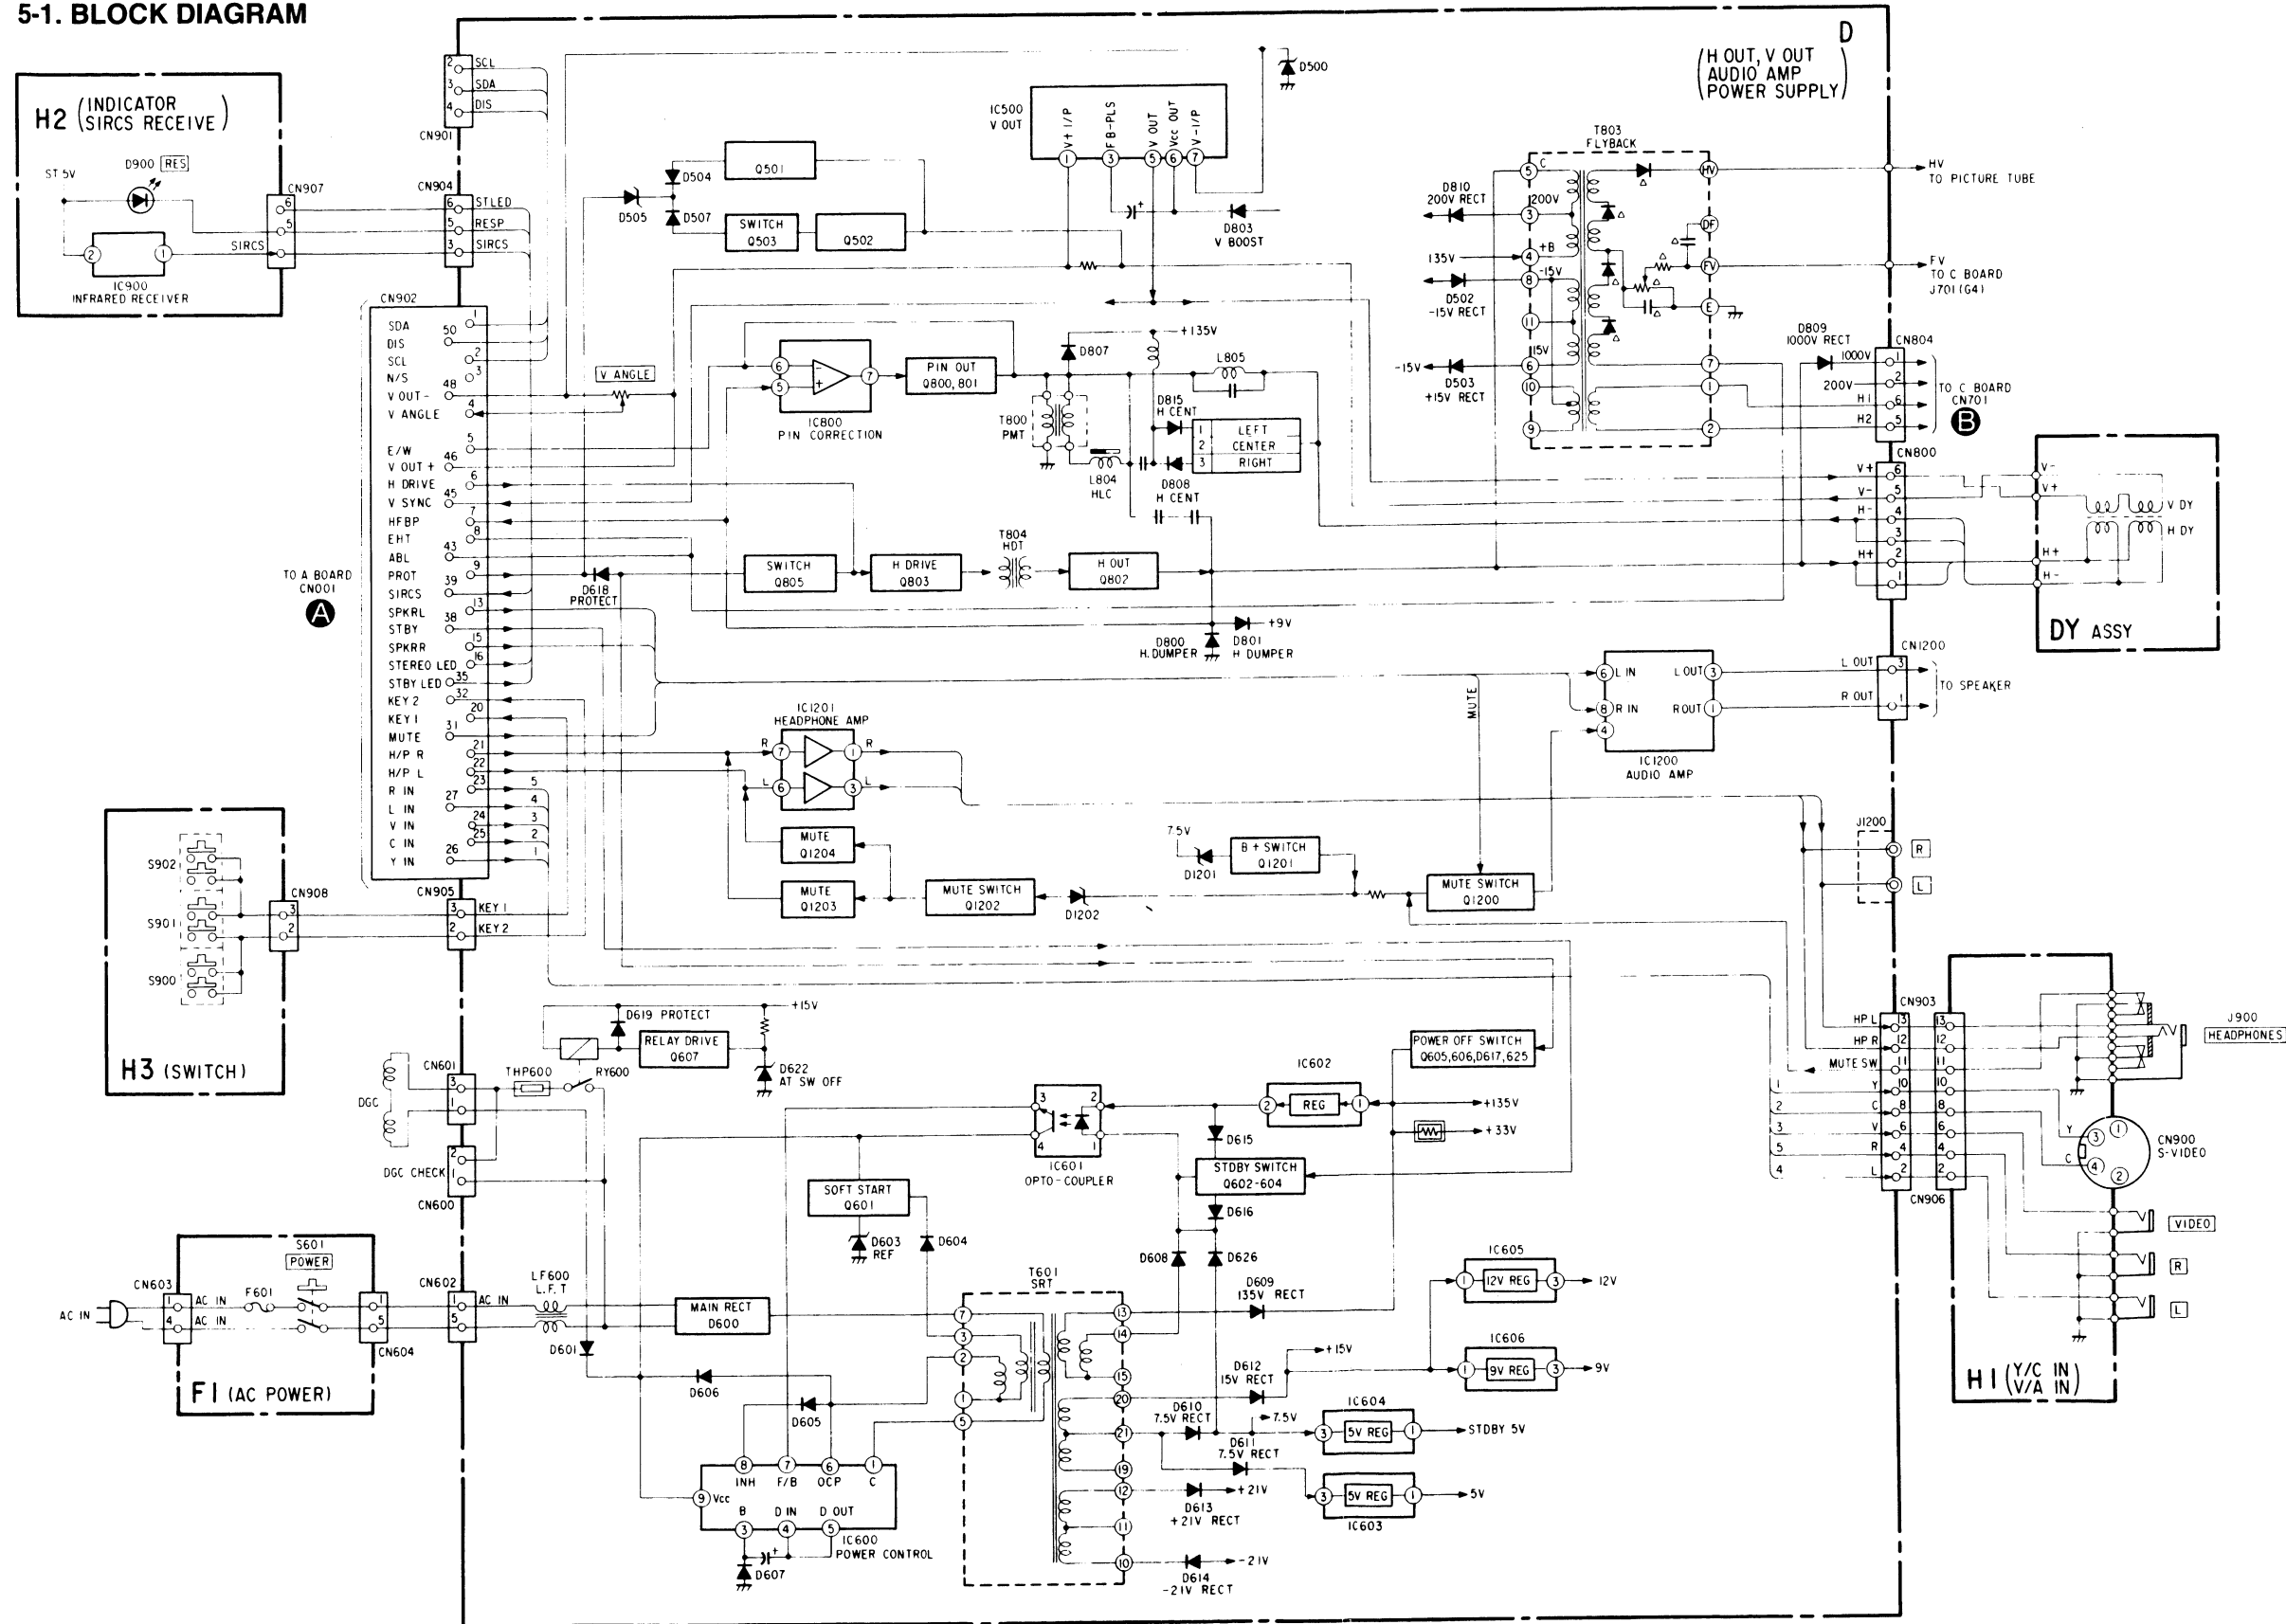



5-2. CIRCUIT BOARDS LOCATION

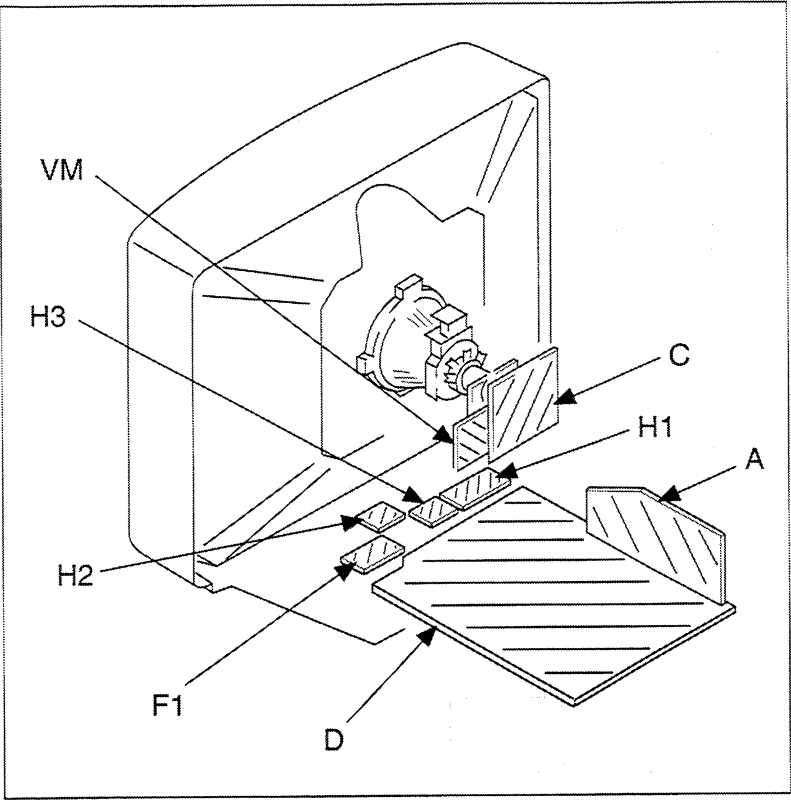

Reference information



RESISTOR	RN	: METAL FILM
	RC	: SOLID
	FPRD	: NONFLAMMABLE CARBON
	FUSE	: NONFLAMMABLE FUSIBLE
	RS	: NONFLAMMABLE METAL OXIDE
	RB	: NONFLAMMABLE CEMENT
	RW	: NONFLAMMABLE WIREWOUND
	*	: ADJUSTMENT RESISTOR
COIL	LF-8L	: MICRO INDUCTOR
CAPACITOR	TA	: TANTALUM
	PS	: STYROL
	PP	: POLYPROPYLENE
	PT	: MYLAR
	MPS	: METALIZED POLYESTER
	MPP	: METALIZED POLYPROPYLENE
	ALB	: BIPOLAR
	ALT	: HIGH TEMPERATURE
	ALR	: HIGH RIPPLE

Note: The components identified by shading and mark are critical for safety. Replace only with part number specified.

Note: Les composants identifiés par une trame et par une marque sont d'une importance critique pour la sécurité. Ne les remplacer que par des pièces de numéro spécifié.

5-3. SCHEMATIC DIAGRAMS AND PRINTED WIRING BOARDS


- Note :
- All capacitors are in μF unless otherwise noted.
 pF : $\mu \mu F$ 50WV or less are not indicated except for electrolytic.
 - Indication of resistance, which dose not have one for rating electrical power, is as follows.
Pitch: 5mm
Rating electrical power: $\frac{1}{4}W$
 - Chip resistor is in $1/10W$.
 - All resistors are in ohms.
 $k\Omega = 1000\Omega$, $M\Omega = 1000K\Omega$
 - : nonflammable resistor.
 - : fusible resistor.
 - Δ : internal component.
 - : panel designation or adjustment for repair.
 - All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
 - All voltages are in V.
 - Readings are taken with a $10M\Omega$ digital multimeter.
 - Readings are taken with a color-bar signal input.
 - Voltage variations may be noted due to normal production tolerances.
 - : B+ bus.
 - : B- bus.
 - : signal path.(RF)
 - : earth - ground
 - : earth - chassis

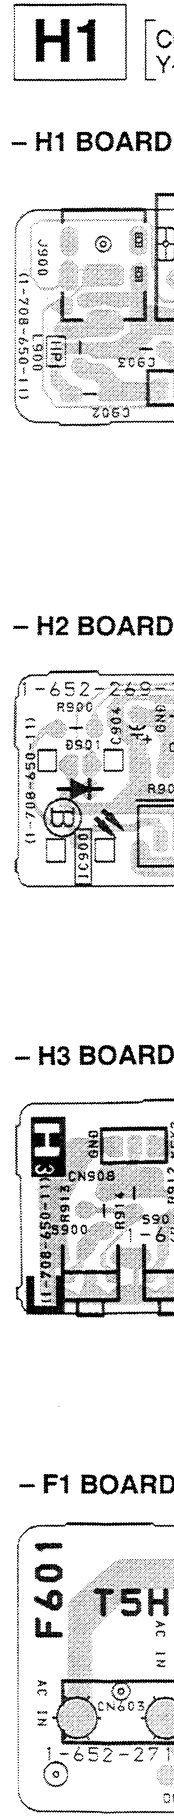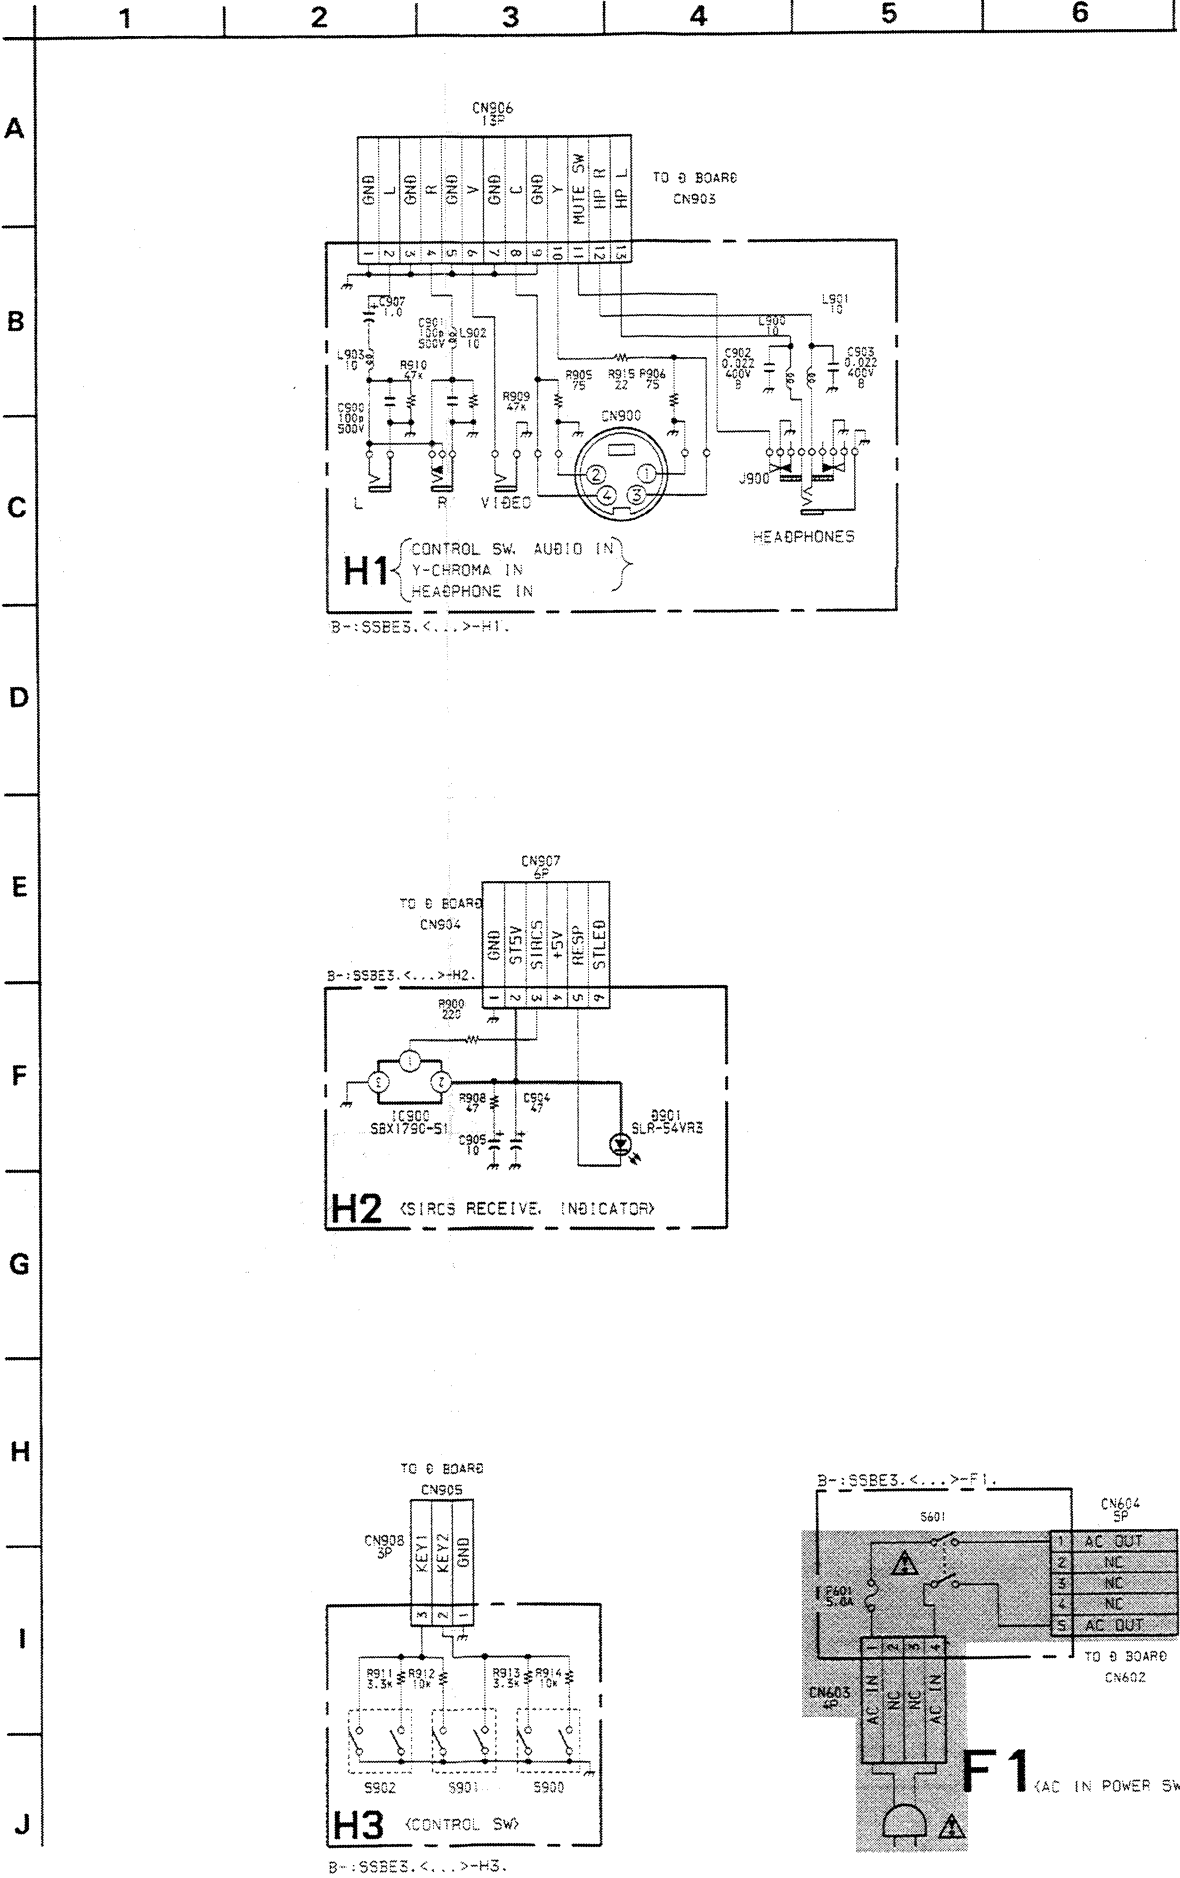


- H1
- CONTROL SW, AUDIO IN
Y-CHROMA IN, HEADPHONE IN
- H2
- SIRCS RECEIVE
INDICATOR
- H3
- CONTROL SW
- F1
- AC IN POWER SW
- D
- HV OUT
PIN OUT
POWER SUPPLY

NOTE:
The circuit in
600 Vp-p. Car
inspection or r


- H1 BOARD -

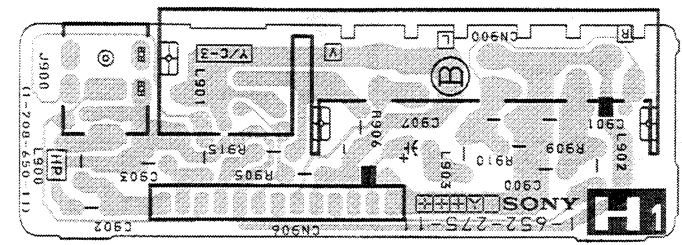


- H2 BOARD -

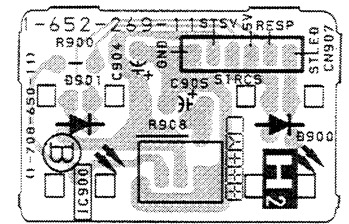


- H3 BOARD -

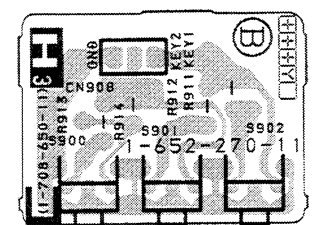

- F1 BOARD -

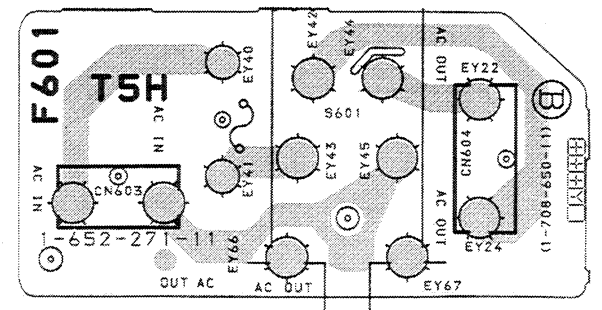

- D BOARD -

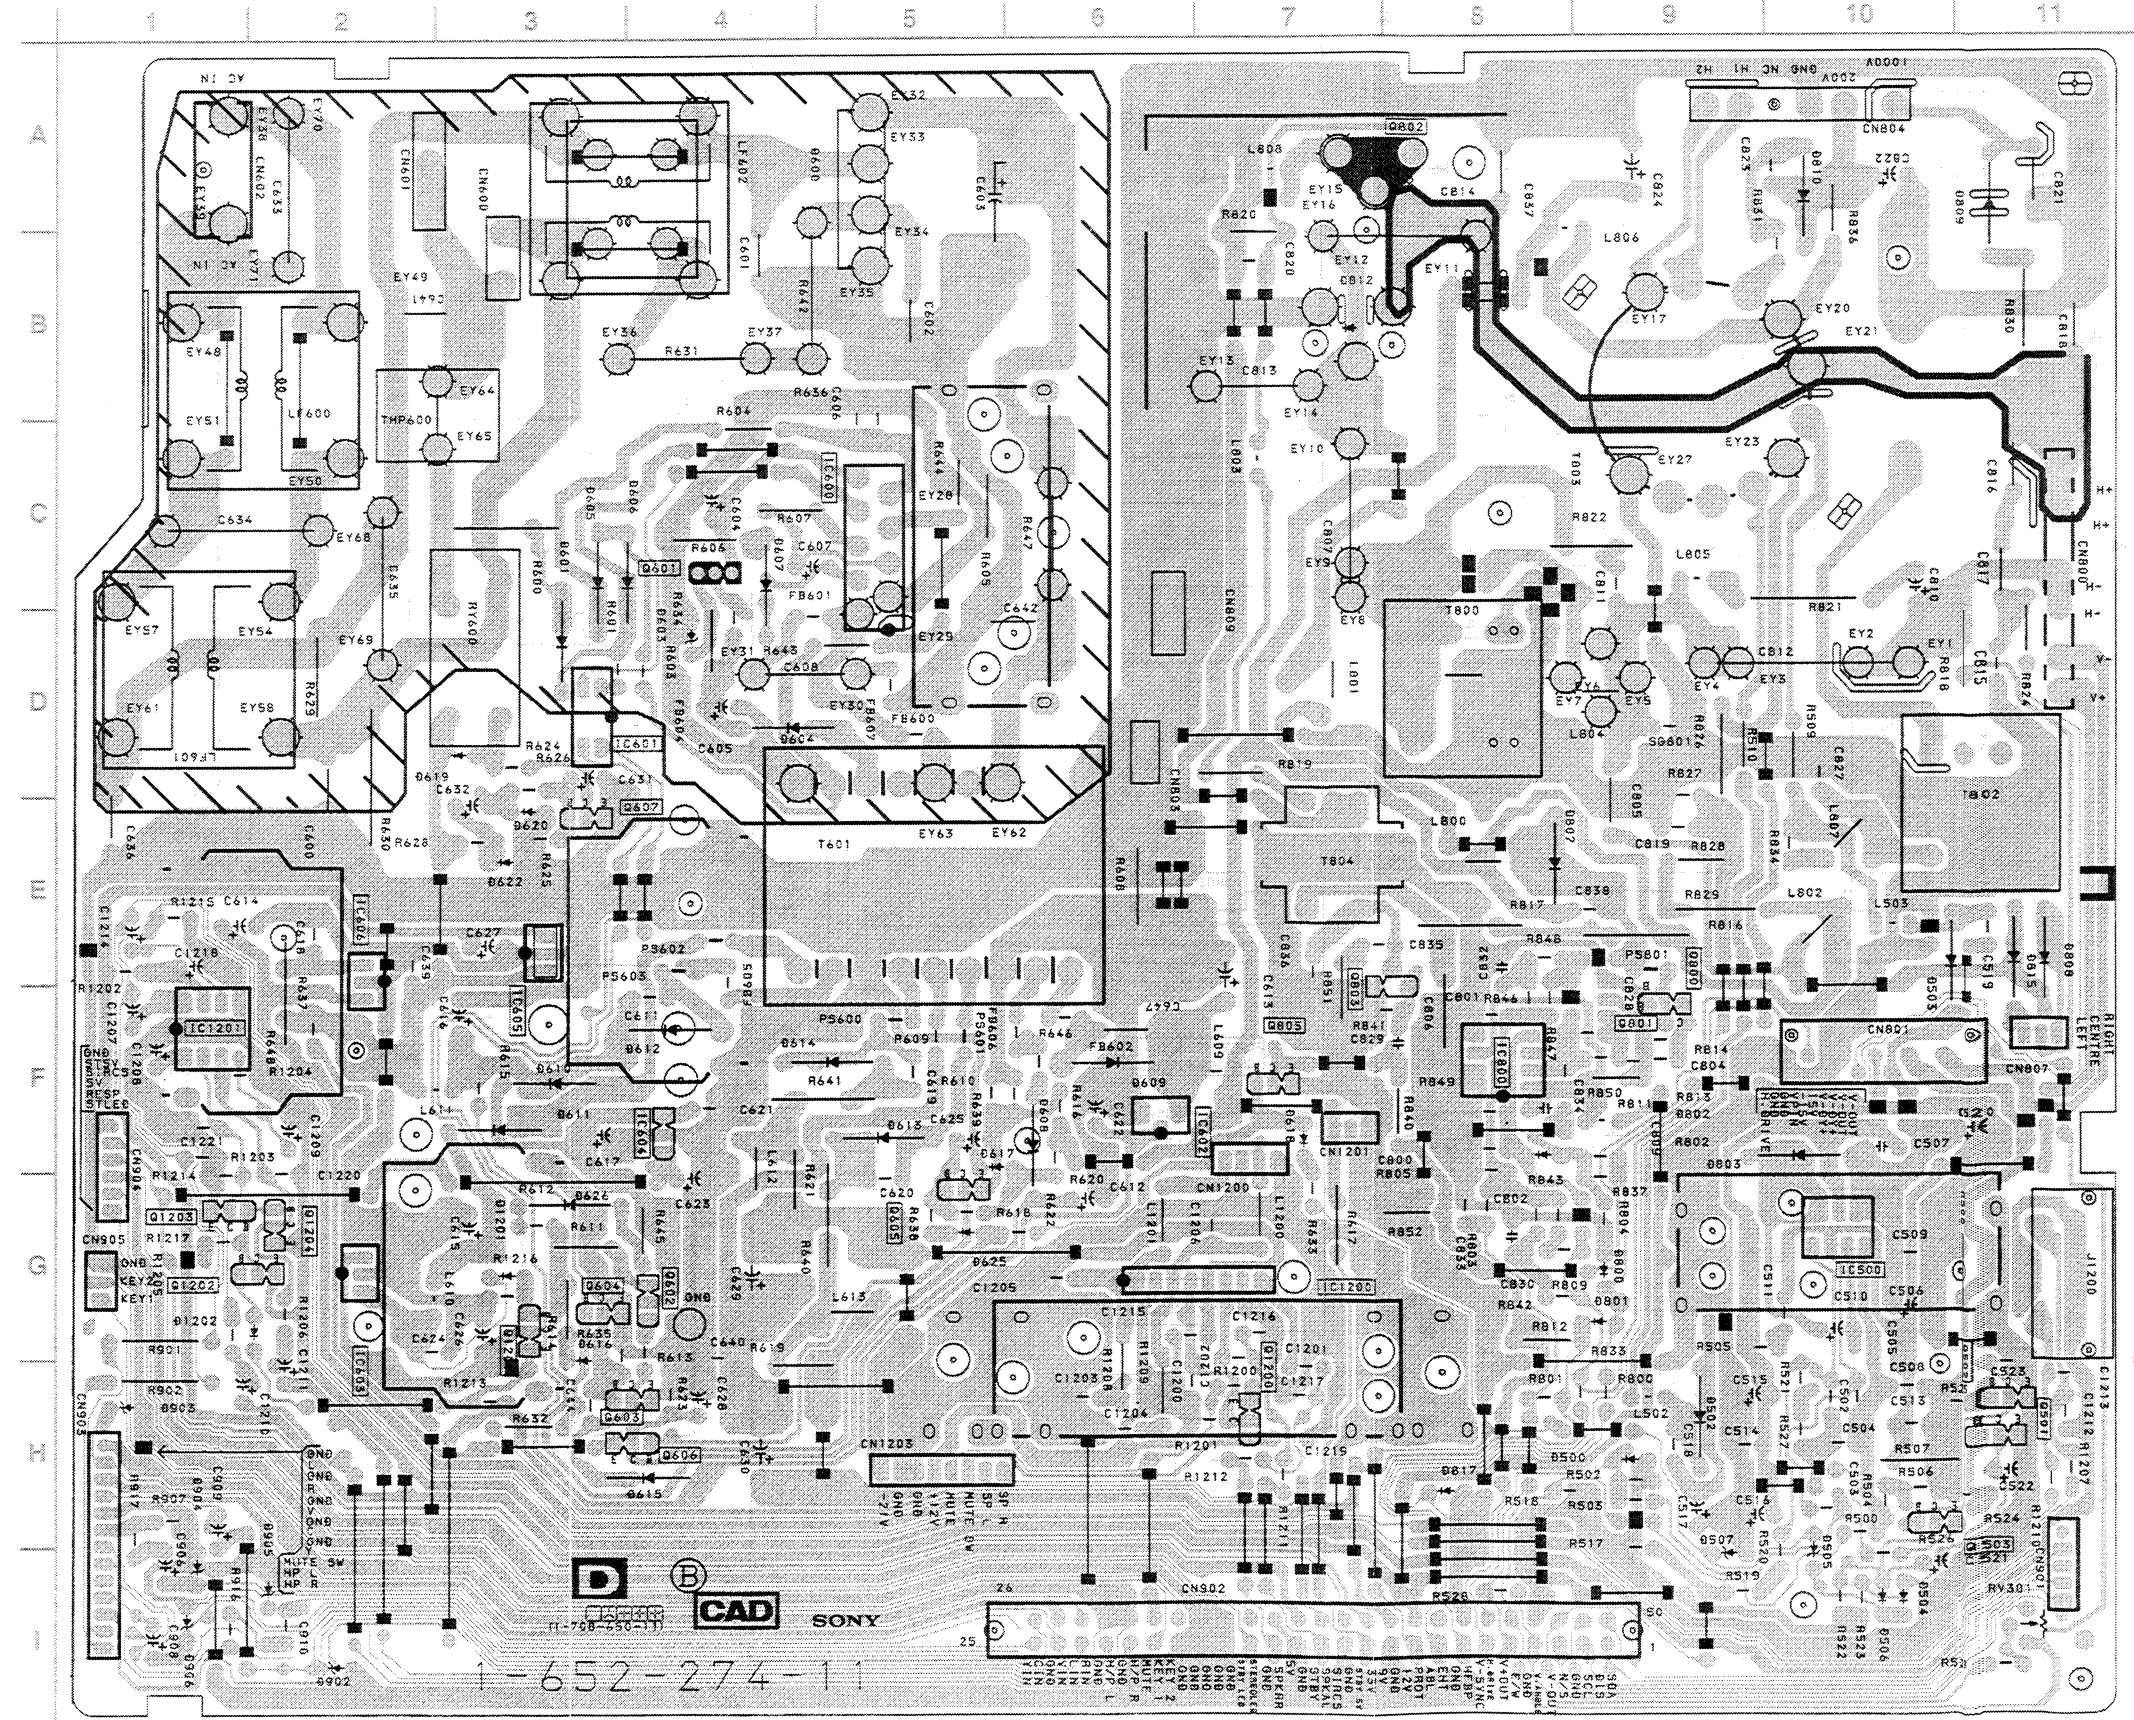

12SIRCS RECEIVE
INDICATOR**H3**


CONTROL SW

F1

AC IN POWER SW



DHV OUT
PIN OUT
POWER SUPPLY


- D BOARD -

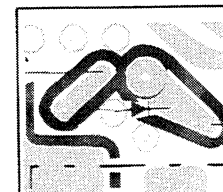**NOTE:**

The circuit indicated as left contains high voltage of over 600 Vp-p. Care must be paid to prevent an electric shock in inspection or repairing.

IC		D600	A - 4
IC500	G - 10	D601	C - 3
IC600	C - 5	D603	D - 4
IC601	D - 4	D604	D - 4
IC602	F - 7	D605	C - 3
IC603	H - 2	D606	C - 4
IC604	F - 4	D607	C - 4
IC605	F - 3	D608	F - 6
IC606	E - 2	D609	F - 6
IC800	F - 8	D610	F - 3
IC1200	G - 7	D611	F - 3
IC1201	F - 1	D612	F - 4
TRANSISTOR		D613	F - 5
Q501	H - 11	D614	F - 4
Q502	H - 11	D615	H - 4
Q503	I - 11	D616	G - 3
Q601	C - 4	D617	F - 5
Q602	G - 4	D618	F - 7
Q603	H - 3	D619	D - 2
Q604	G - 3	D620	E - 3
Q605	G - 5	D622	E - 3
Q606	H - 4	D625	G - 5
Q607	E - 4	D626	G - 3
Q800	E - 9	D800	G - 9
Q801	F - 9	D801	G - 9
Q802	A - 8	D802	F - 9
Q803	F - 7	D803	F - 9
Q805	F - 7	D807	E - 9
Q1200	H - 7	D808	E - 11
DIODE		D809	A - 11
D500	G - 9	D810	A - 10
D502	G - 9	D812	B - 7
D503	F - 10	D815	E - 11
D504	I - 10	D817	H - 8
D505	I - 10	D902	I - 2
D506	I - 10	D903	H - 1
D507	G - 9	D904	H - 1
		D905	H - 2
		D906	I - 1

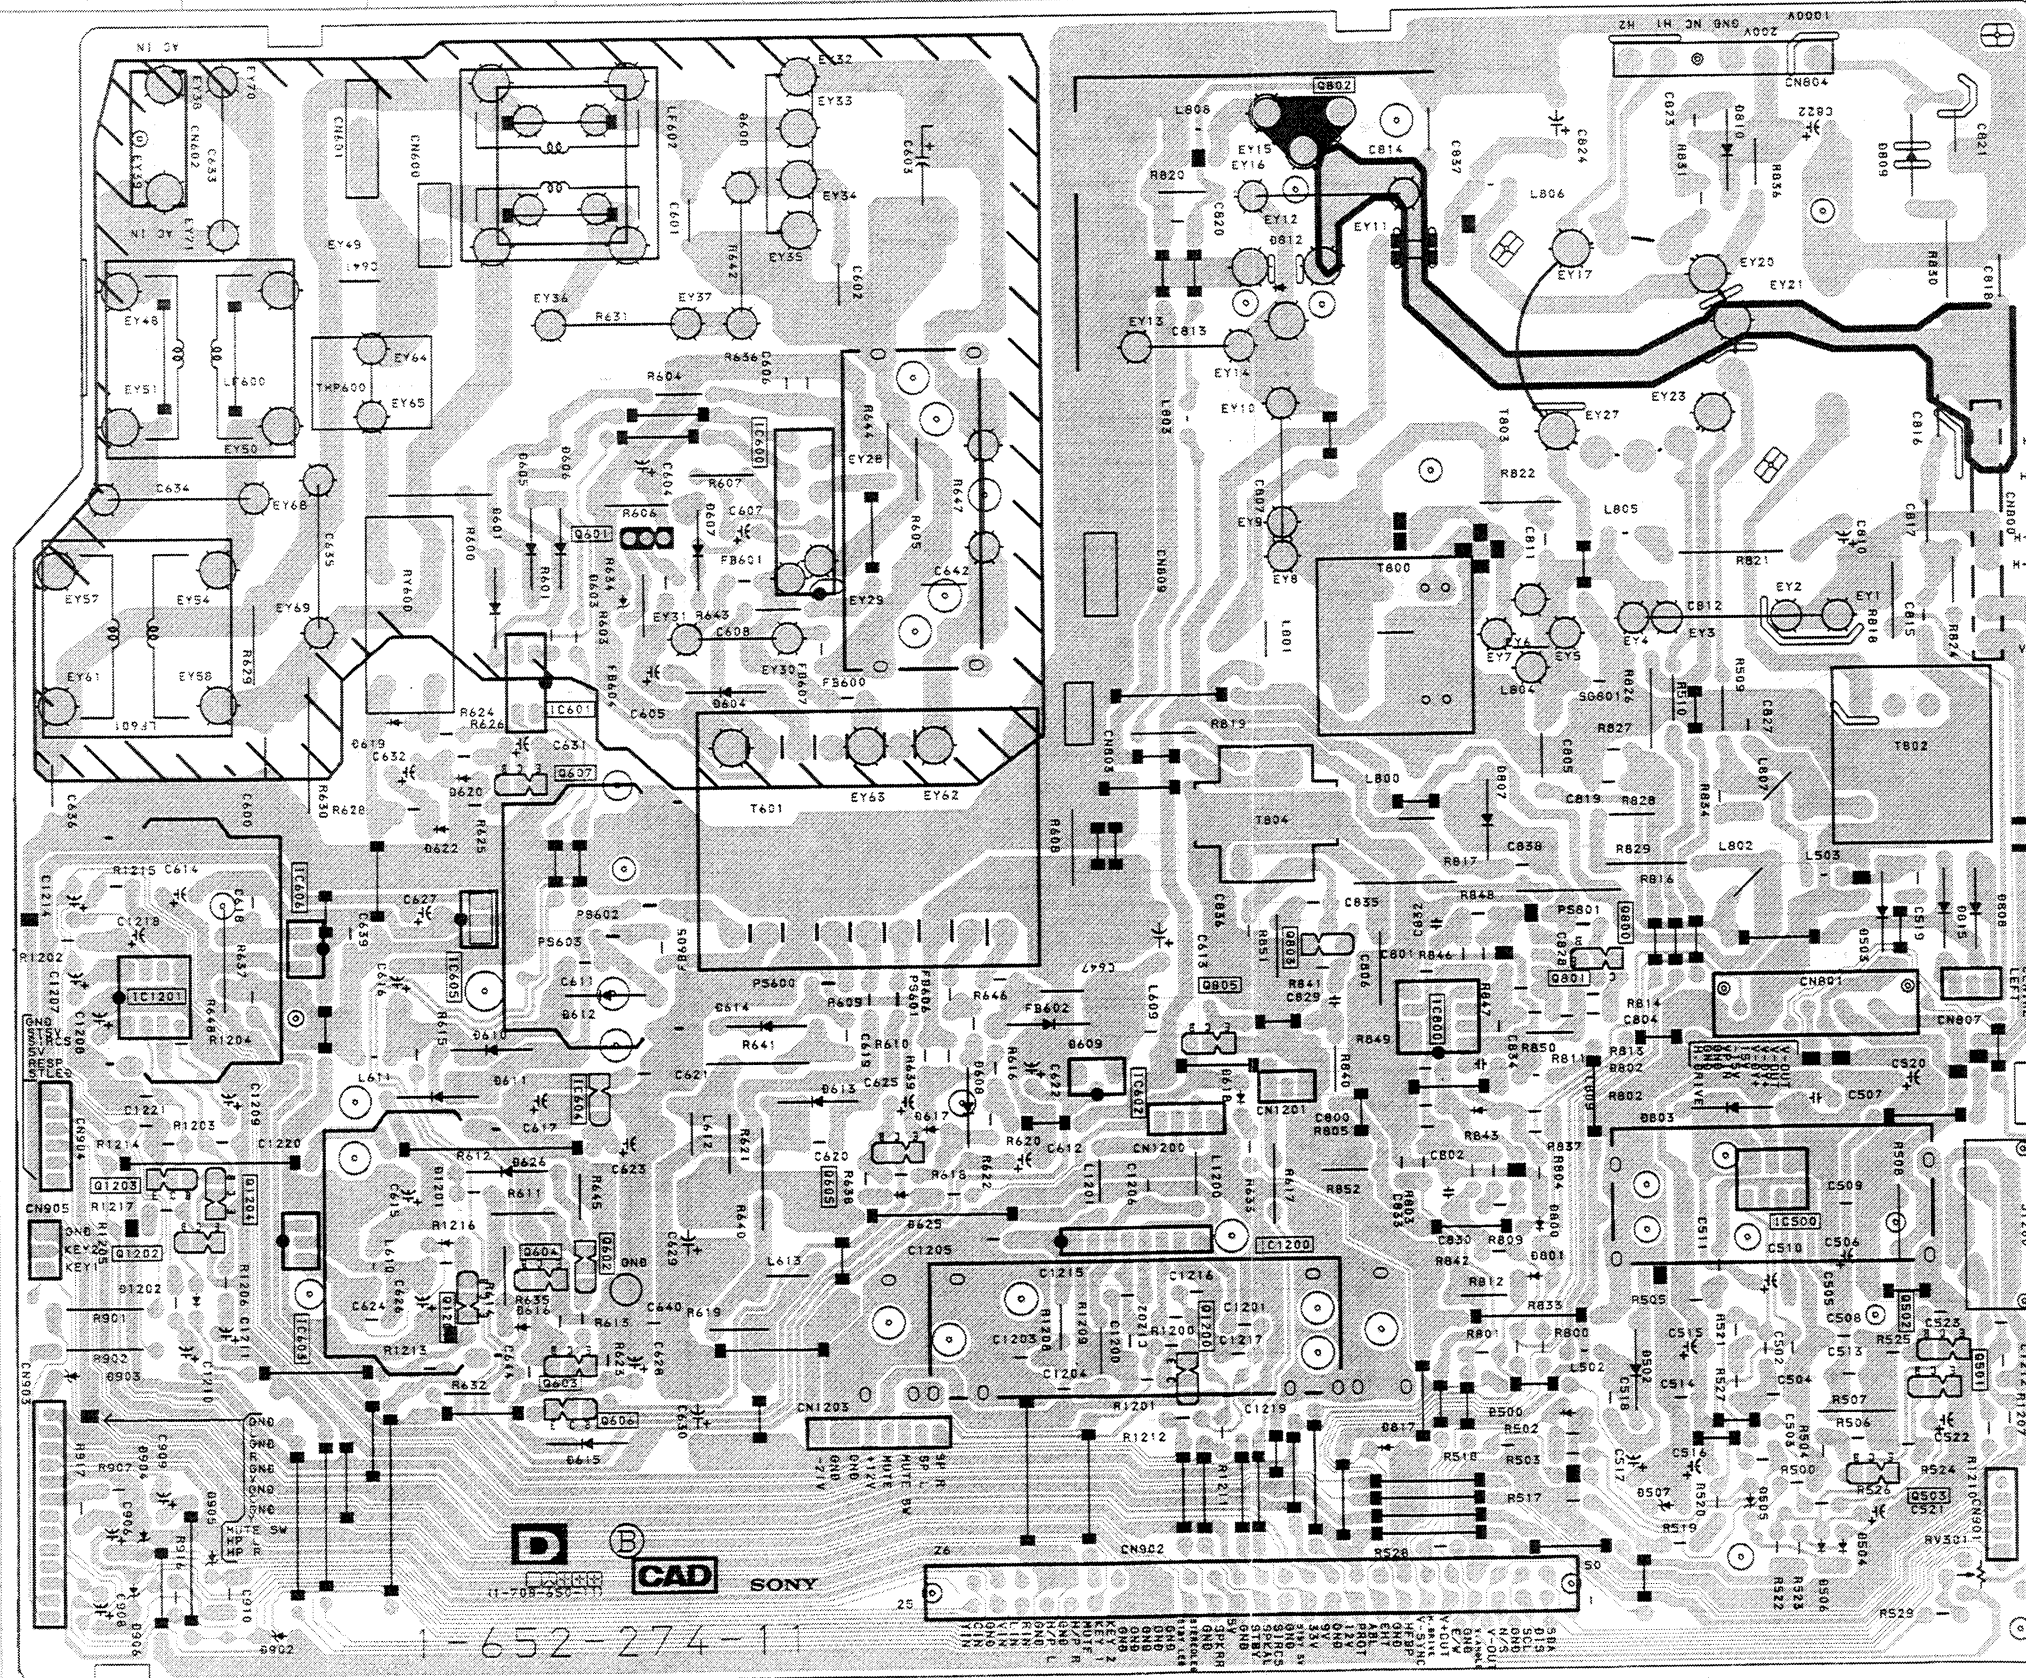**H1**

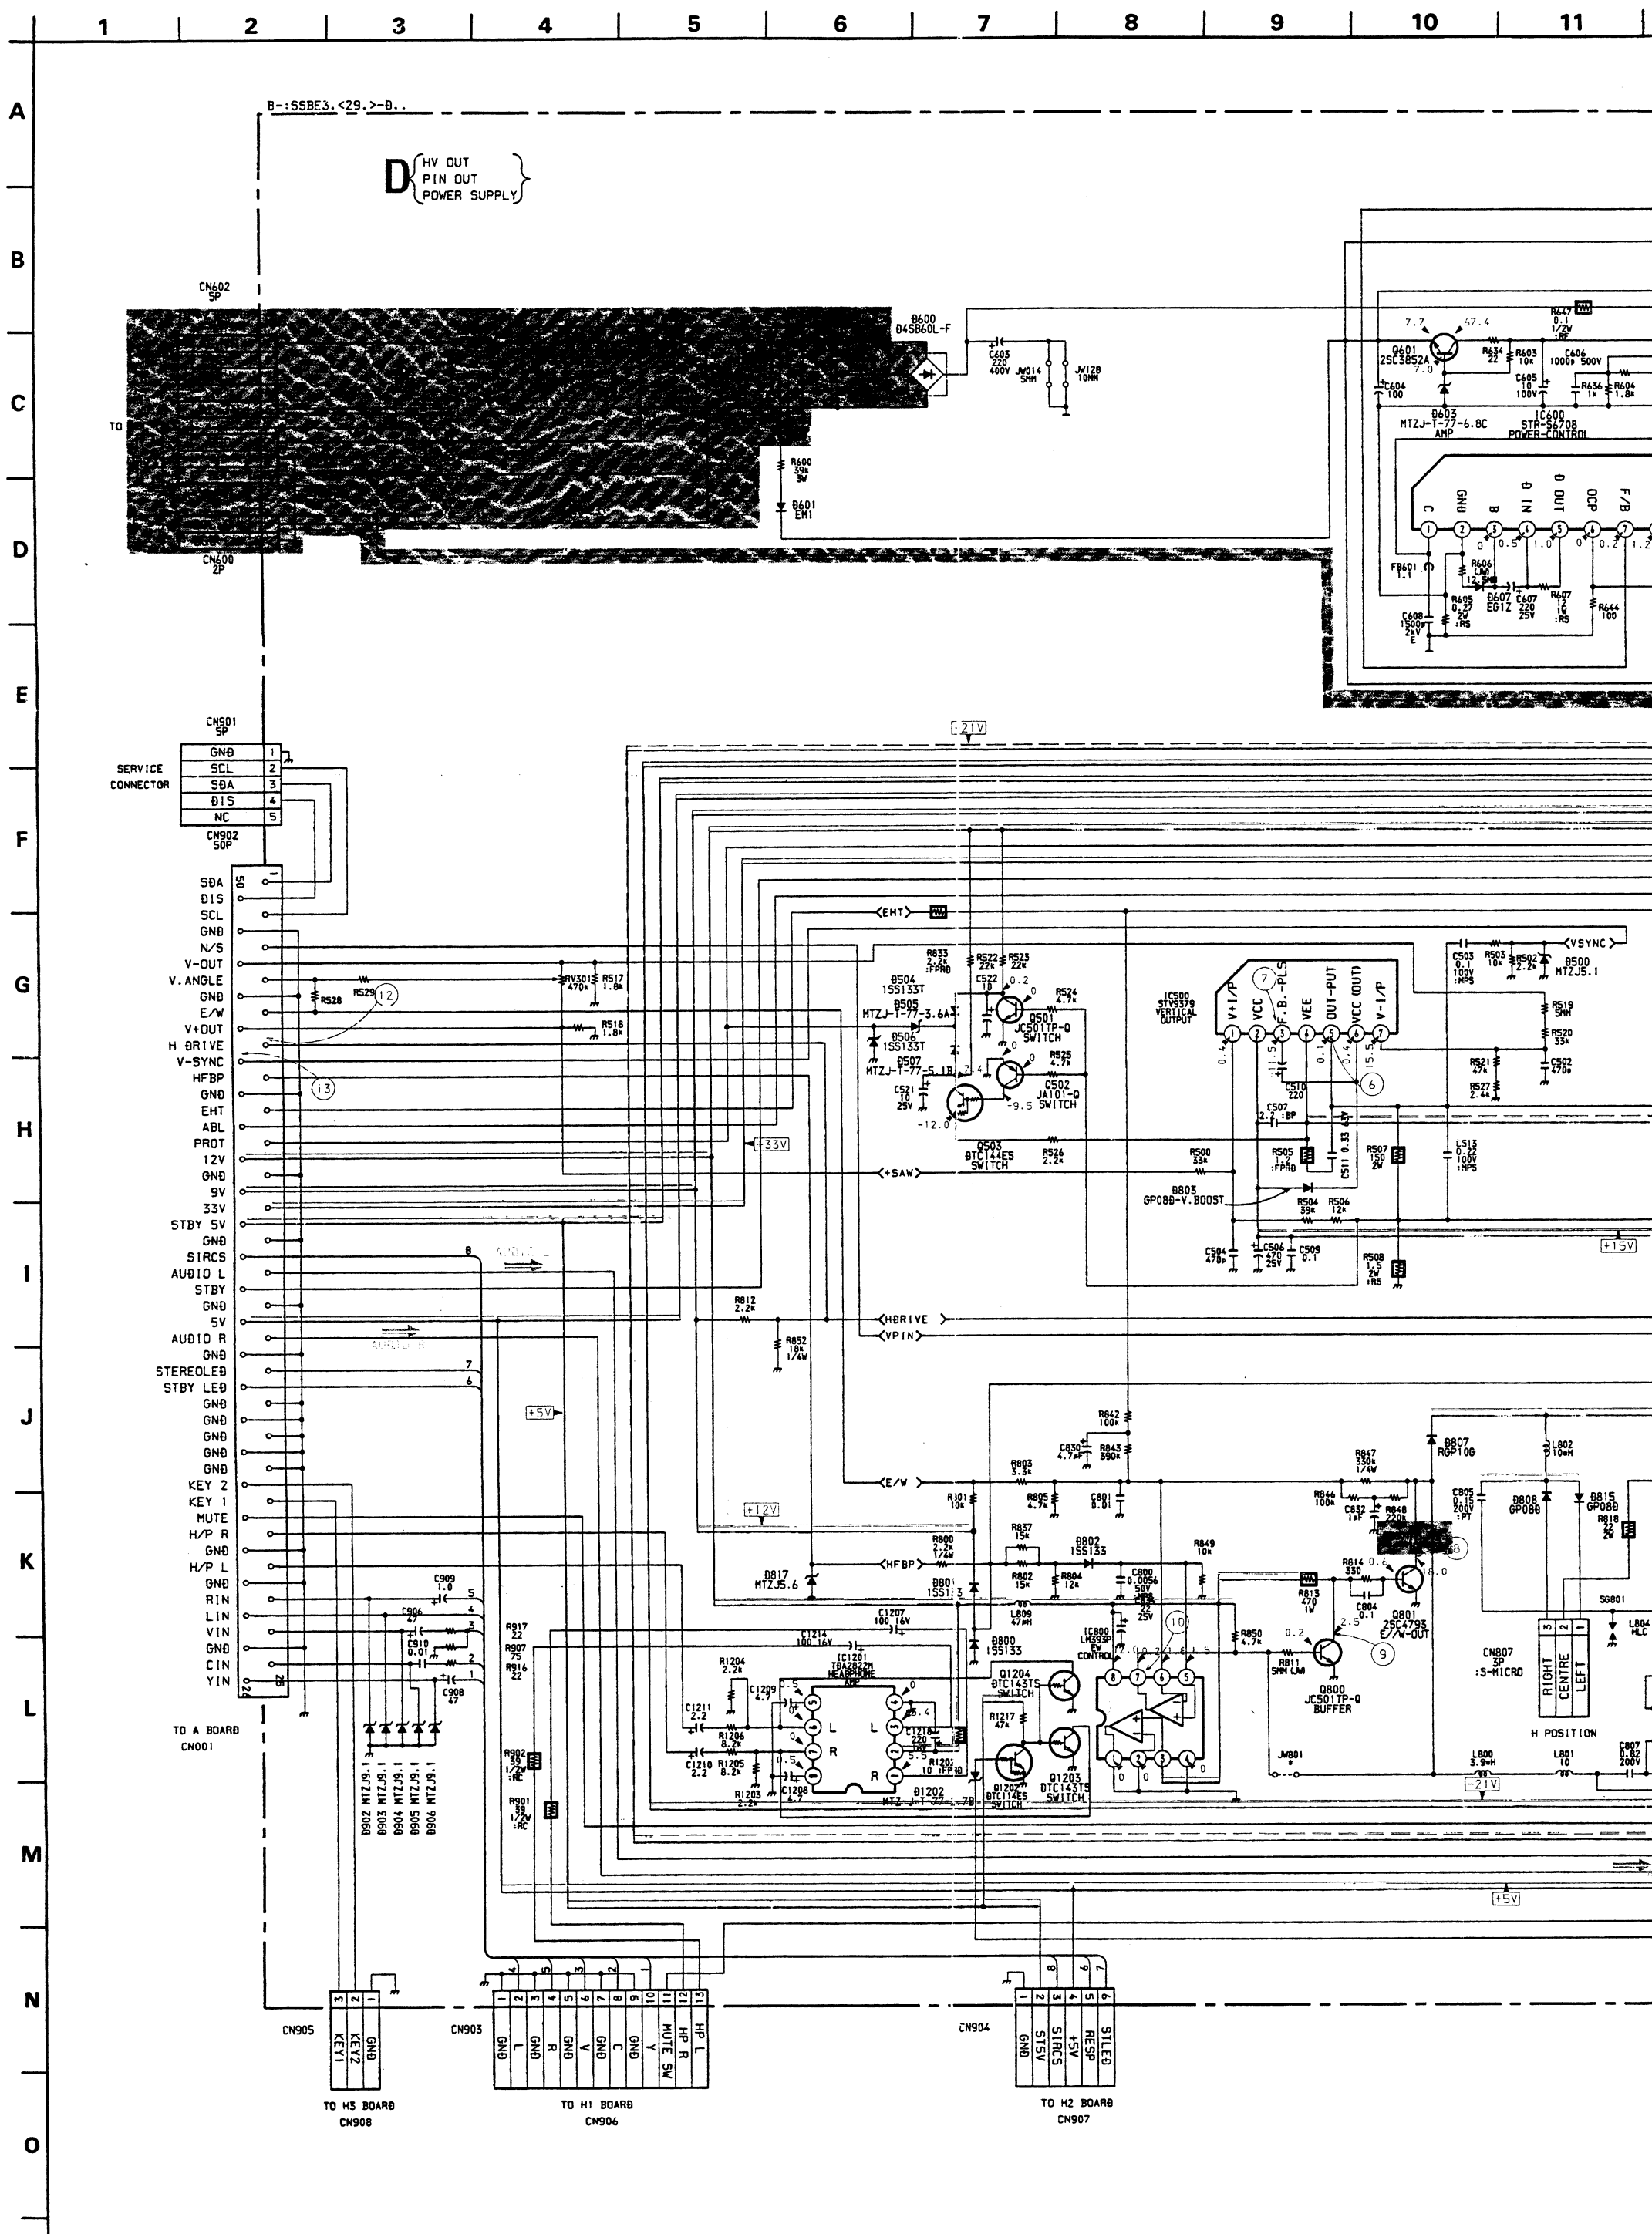

B-SSBE3.<29>-D..

D HV OUT
PIN OUT
POWER SUPPLY

CN602
SP

CN600
2P

CN901
SP

CN902
50P

TO A BOARD
CN001

CN905

TO H3 BOARD
CN908

CN903

TO H1 BOARD
CN906

CN904

TO H2 BOARD
CN907

CN906

CN907

CN908

CN909

CN910

CN911

CN912

CN913

CN914

CN915

CN916

CN917

CN918

CN919

CN920

CN921

CN922

CN923

CN924

CN925

CN926

CN927

CN928

CN929

CN930

CN931

CN932

CN933

CN934

CN935

CN936

CN937

CN938

CN939

CN940

CN941

CN942

CN943

CN944

CN945

CN946

CN947

CN948

CN949

CN950

CN951

CN952

CN953

CN954

CN955

CN956

CN957

CN958

CN959

CN960

CN961

CN962

CN963

CN964

CN965

CN966

CN967

CN968

CN969

CN970

CN971

CN972

CN973

CN974

CN975

CN976

CN977

CN978

CN979

CN980

CN981

CN982

CN983

CN984

CN985

CN986

CN987

CN988

CN989

CN990

CN991

CN992

CN993

CN994

CN995

CN996

CN997

CN998

CN999

CN1000

CN1001

CN1002

CN1003

CN1004

CN1005

CN1006

CN1007

CN1008

CN1009

CN1010

CN1011

CN1012

CN1013

CN1014

CN1015

CN1016

CN1017

CN1018

CN1019

CN1020

CN1021

CN1022

CN1023

CN1024

CN1025

CN1026

CN1027

CN1028

CN1029

CN1030

CN1031

CN1032

CN1033

CN1034

CN1035

CN1036

CN1037

CN1038

CN1039

CN1040

CN1041

CN1042

CN1043

CN1044

CN1045

CN1046

CN1047

CN1048

CN1049

CN1050

CN1051

CN1052

CN1053

CN1054

CN1055

CN1056

CN1057

CN1058

CN1059

CN1060

CN1061

CN1062

CN1063

CN1064

CN1065

CN1066

CN1067

CN1068

CN1069

CN1070

CN1071

CN1072

CN1073

CN1074

CN1075

CN1076

CN1077

CN1078

CN1079

CN1080

CN1081

CN1082

CN1083

CN1084

CN1085

CN1086

CN1087

CN1088

CN1089

CN1090

CN1091

CN1092

CN1093

CN1094

CN1095

CN1096

CN1097

CN1098

CN1099

CN1100

CN1101

CN1102

CN1103

CN1104

CN1105

CN1106

CN1107

CN1108

CN1109

CN1110

CN1111

CN1112

CN1113

CN1114

CN1115

CN1116

CN1117

CN1118

CN1119

CN1120

CN1121

CN1122

CN1123

CN1124

CN1125

CN1126

CN1127

CN1128

CN1129

CN1130

CN1131

CN1132

CN1133

CN1134

CN1135

CN1136

CN1137

CN1138

CN1139

CN1140

CN1141

CN1142

CN1143

CN1144

CN1145

CN1146

CN1147

CN1148

CN1149

CN1150

CN1151

CN1152

CN1153

CN1154

CN1155

CN1156

CN1157

CN1158

CN1159

CN1160

CN1161

CN1162

CN1163

CN1164

CN1165

CN1166

CN1167

CN1168

CN1169

CN1170

CN1171

CN1172

CN1173

CN1174

CN1175

CN1176

CN1177

CN1178

CN1179

CN1180

CN1181

CN1182

CN1183

CN1184

CN1185

CN1186

CN1187

CN1188

CN1189

CN1190

CN1191

CN1192

CN1193



CN1194

CN1195


CN1196

CN1197


WAVEFORMS D BOARD

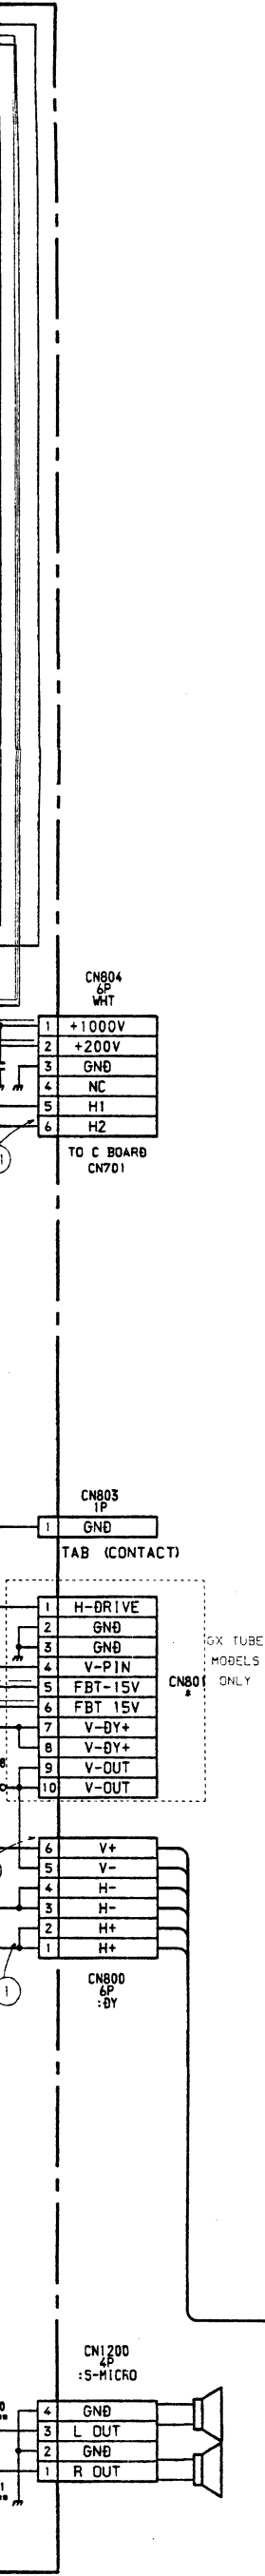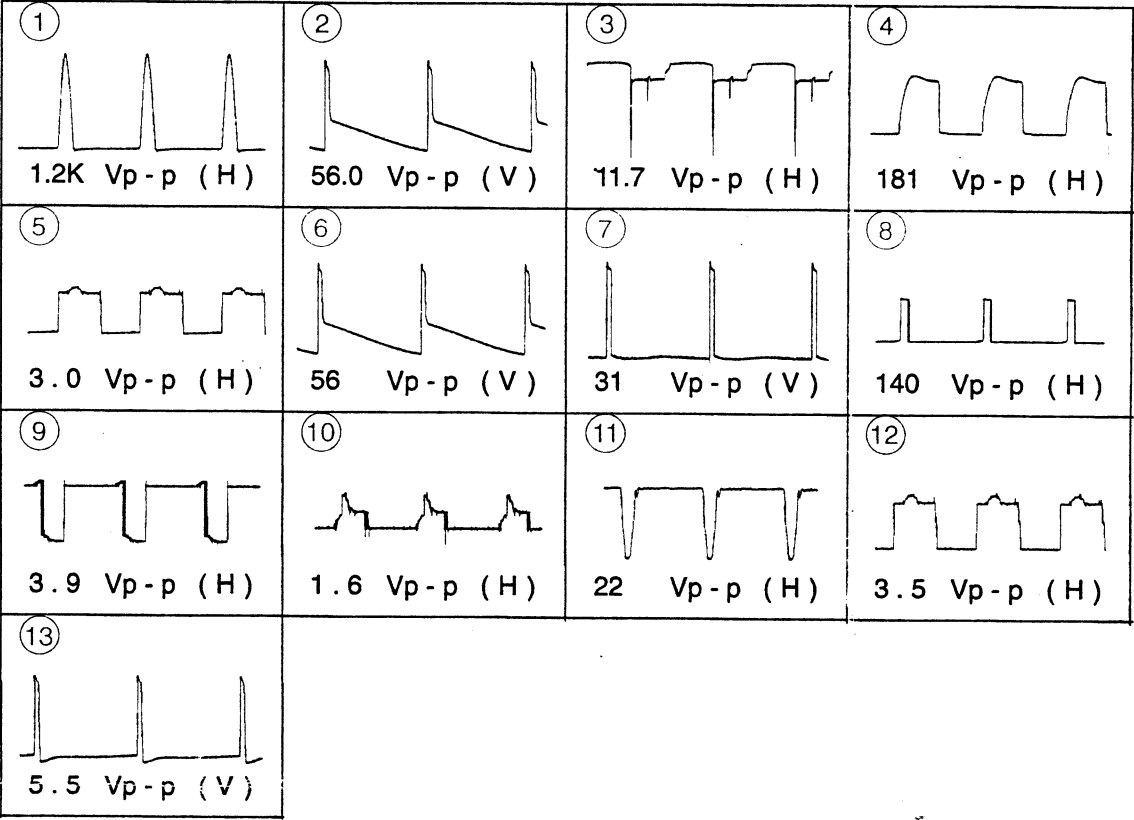


D BOARD IC1200 TDA7264

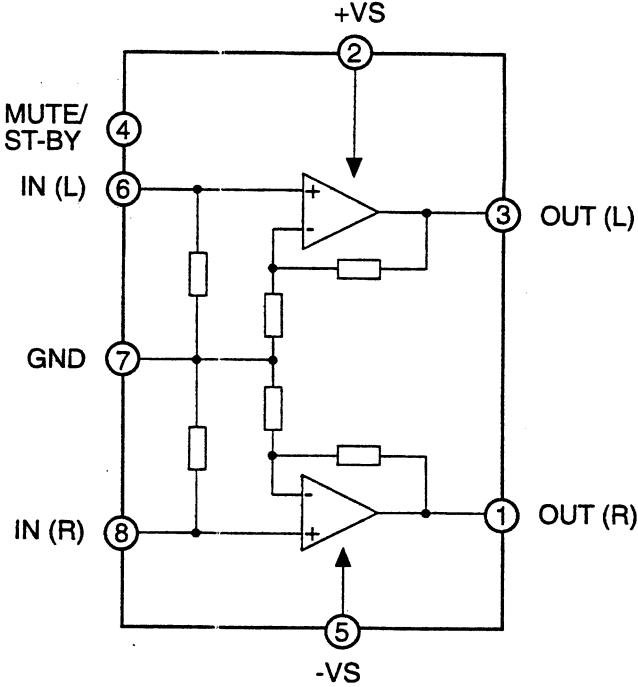



D BOARD IC500 STV9379

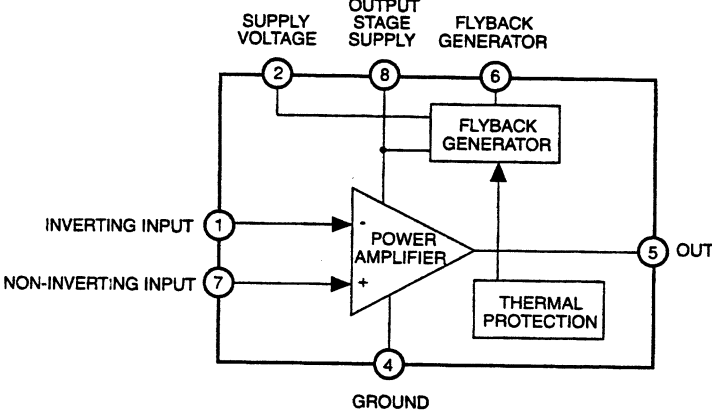

D BOARD IC600 STR-S6708

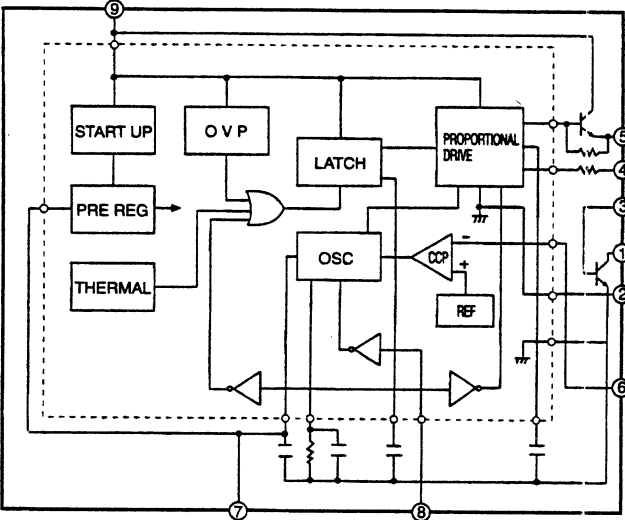

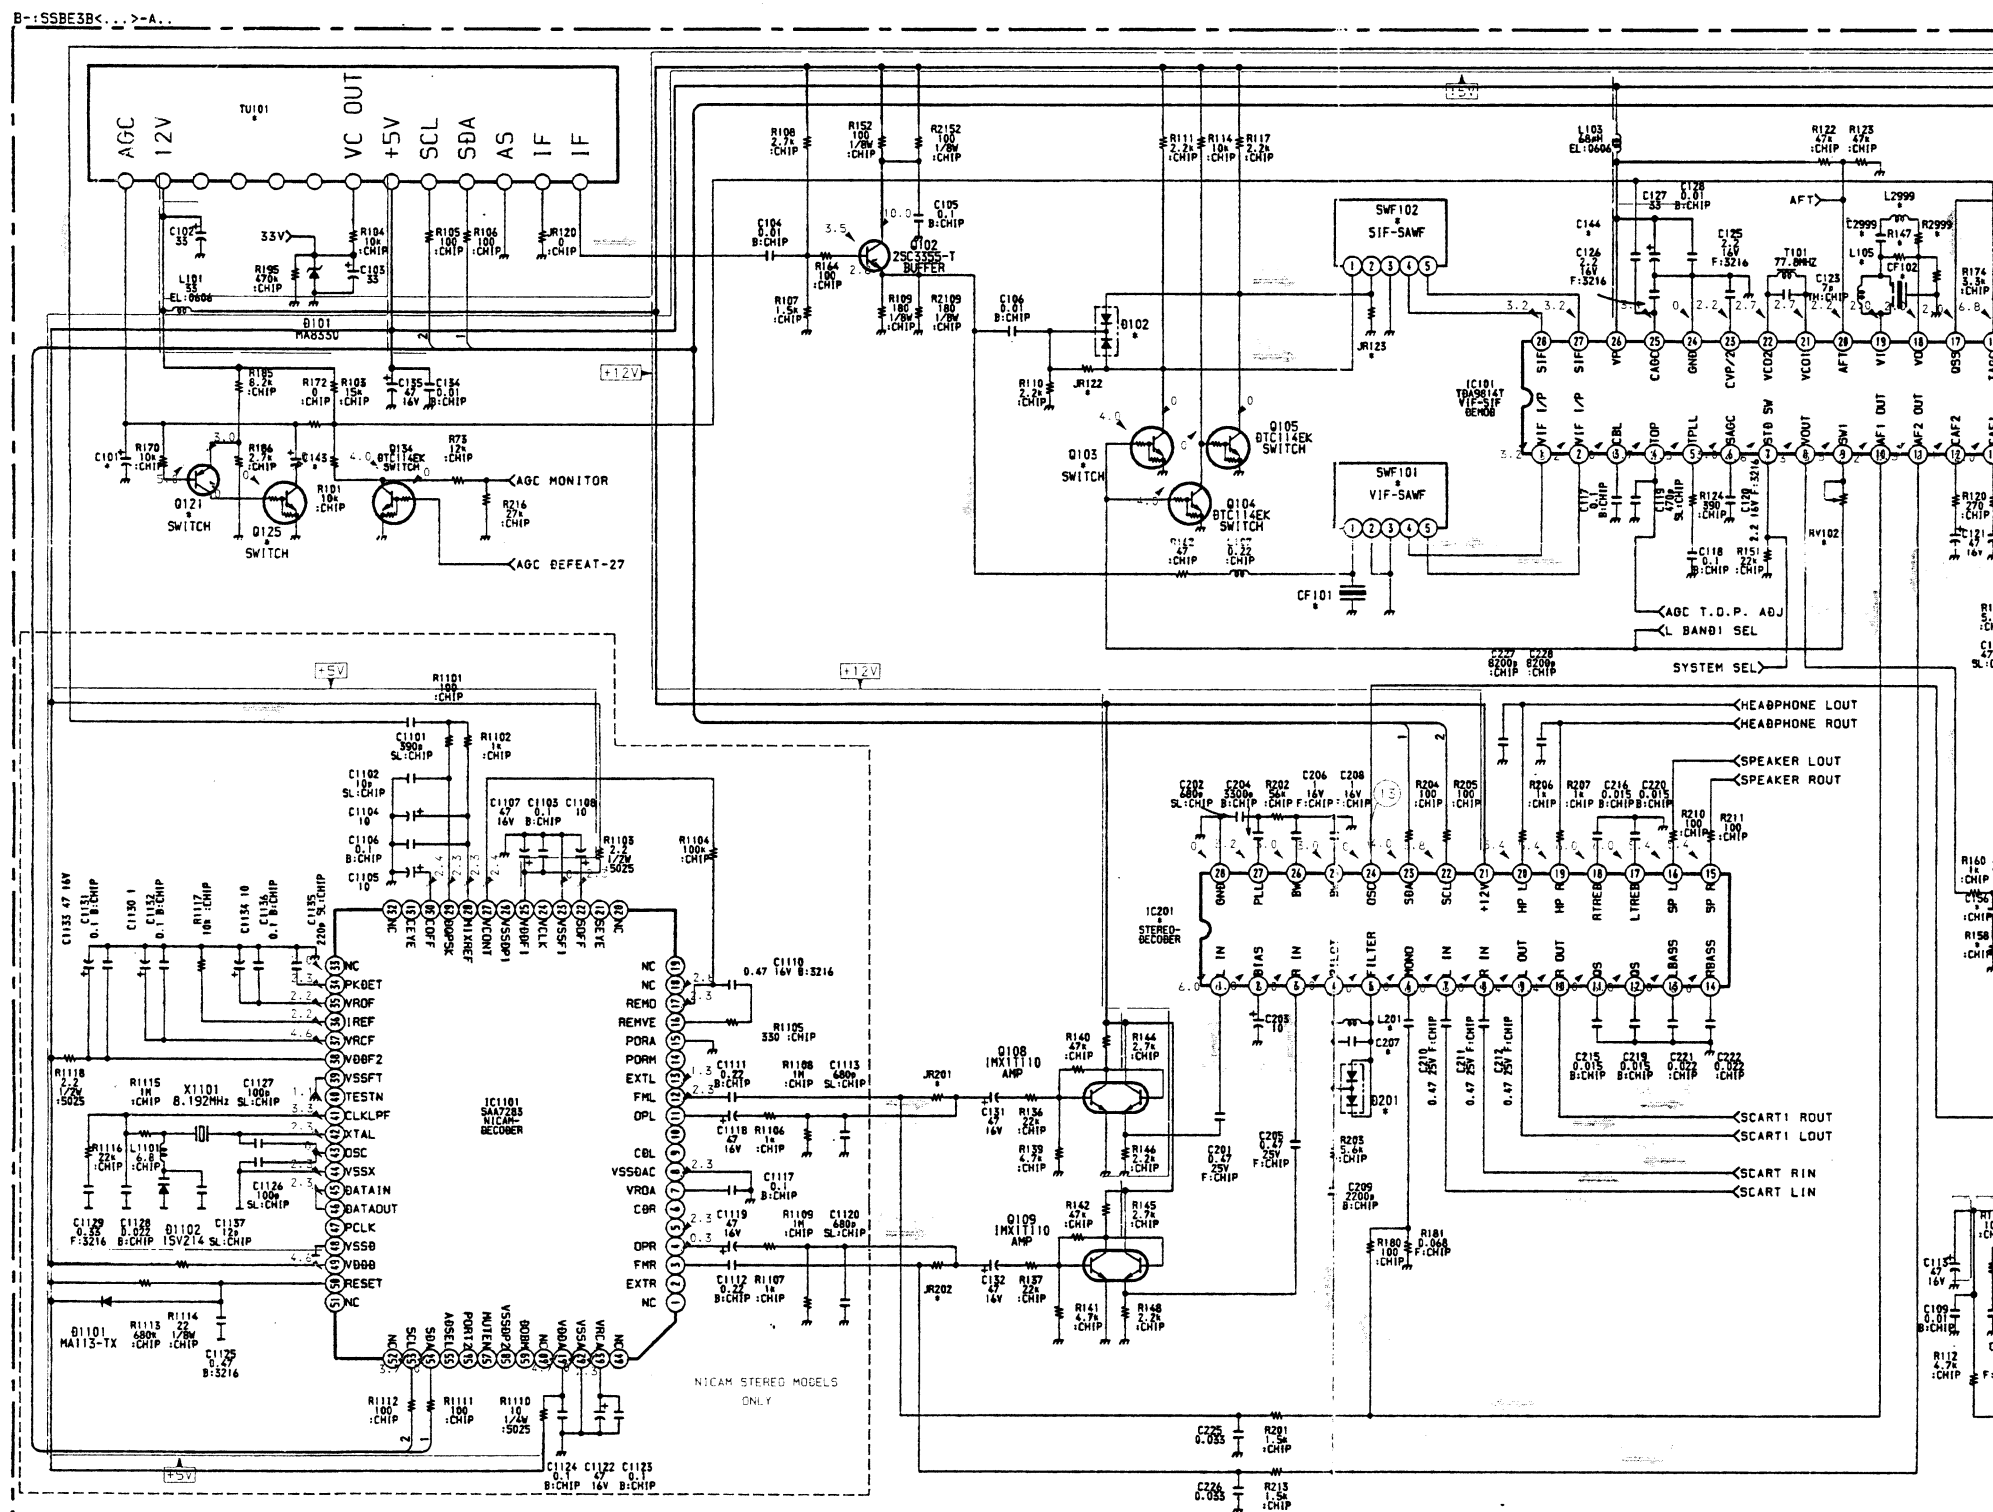


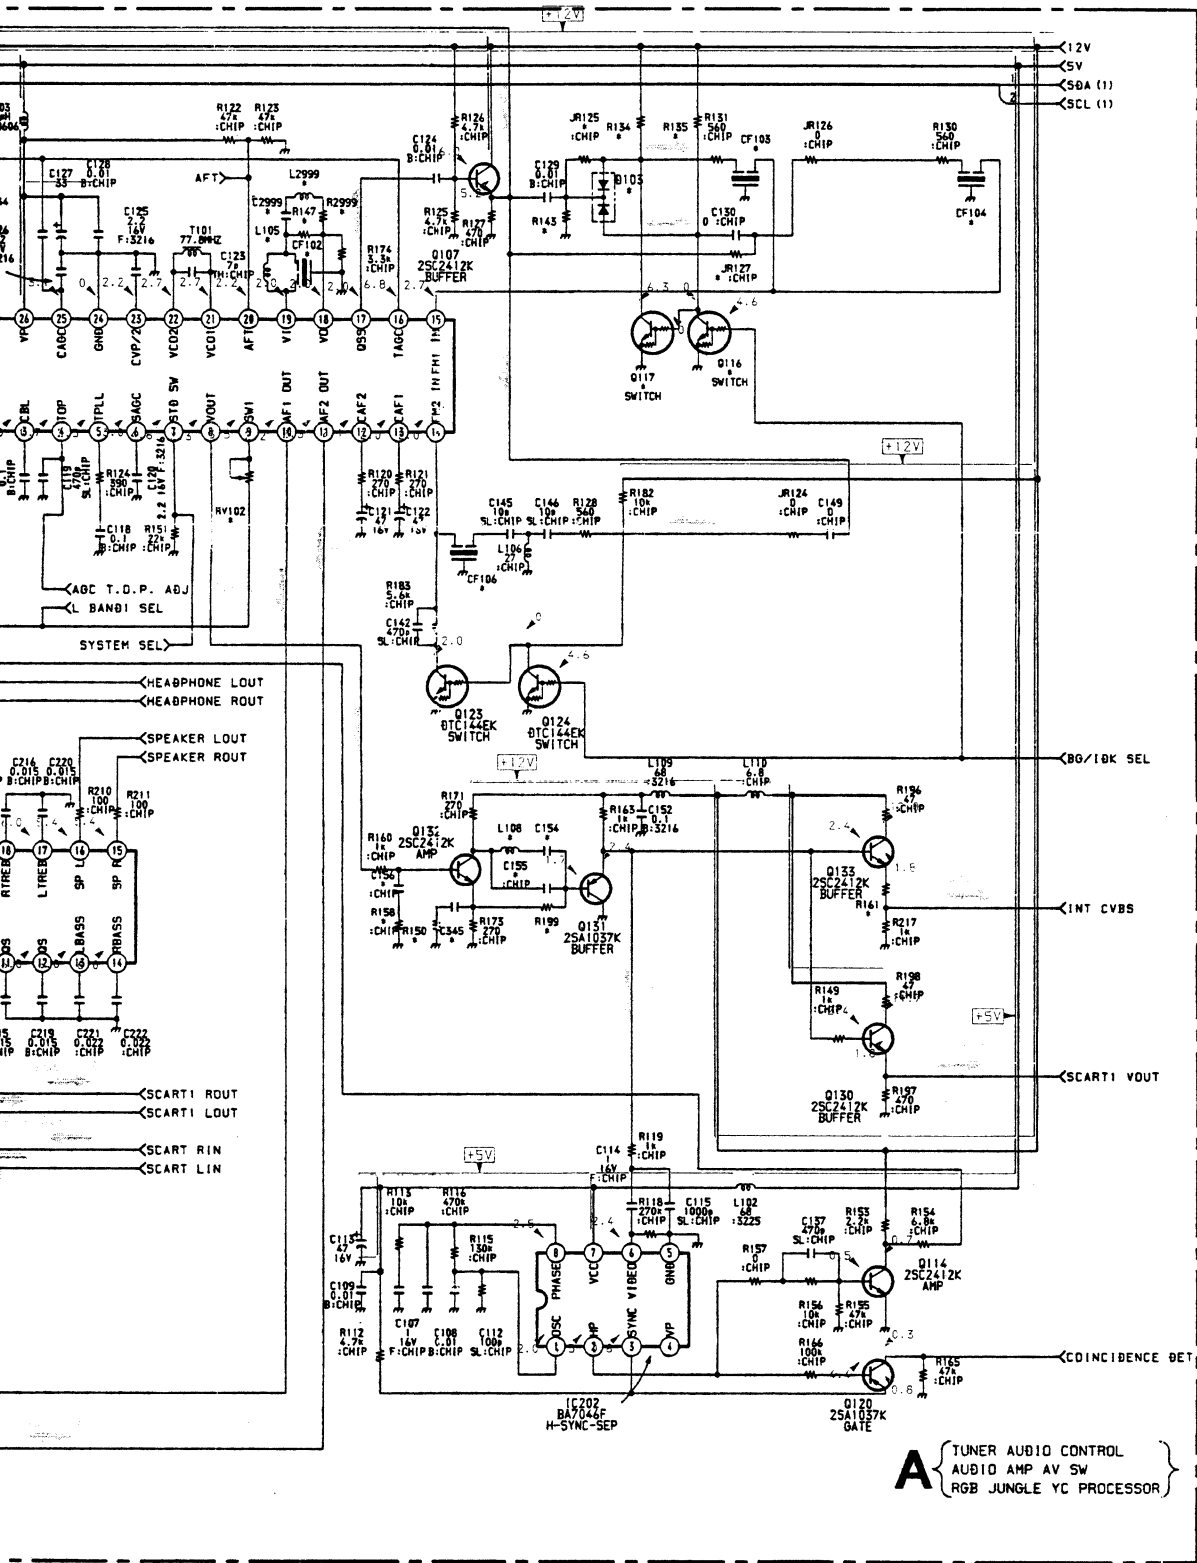



Voltages indicated with the mark ※ on the schematic diagram are shown in the table below.

A BOARD

IC	Pin	PAL	SECAM	NTSC 3.58	NTSC 4.43
IC301	17	4.0	4.0	4.0	0
	35	3.6	2.5	3.5	3.5
	44	1.5	3.1	1.5	1.5
	45	1.5	3.0	1.5	1.5
	48	1.7	4.4	1.6	1.7
IC303	49	1.4	1.4	2.0	1.4
	50	2.0	2.0	1.4	2.0
	63	3.4	2.5	2.2	2.5
	1	1.7	4.4	1.6	1.7
	11	1.5	3.0	1.5	1.5
IC303	12	1.5	3.1	1.5	1.5

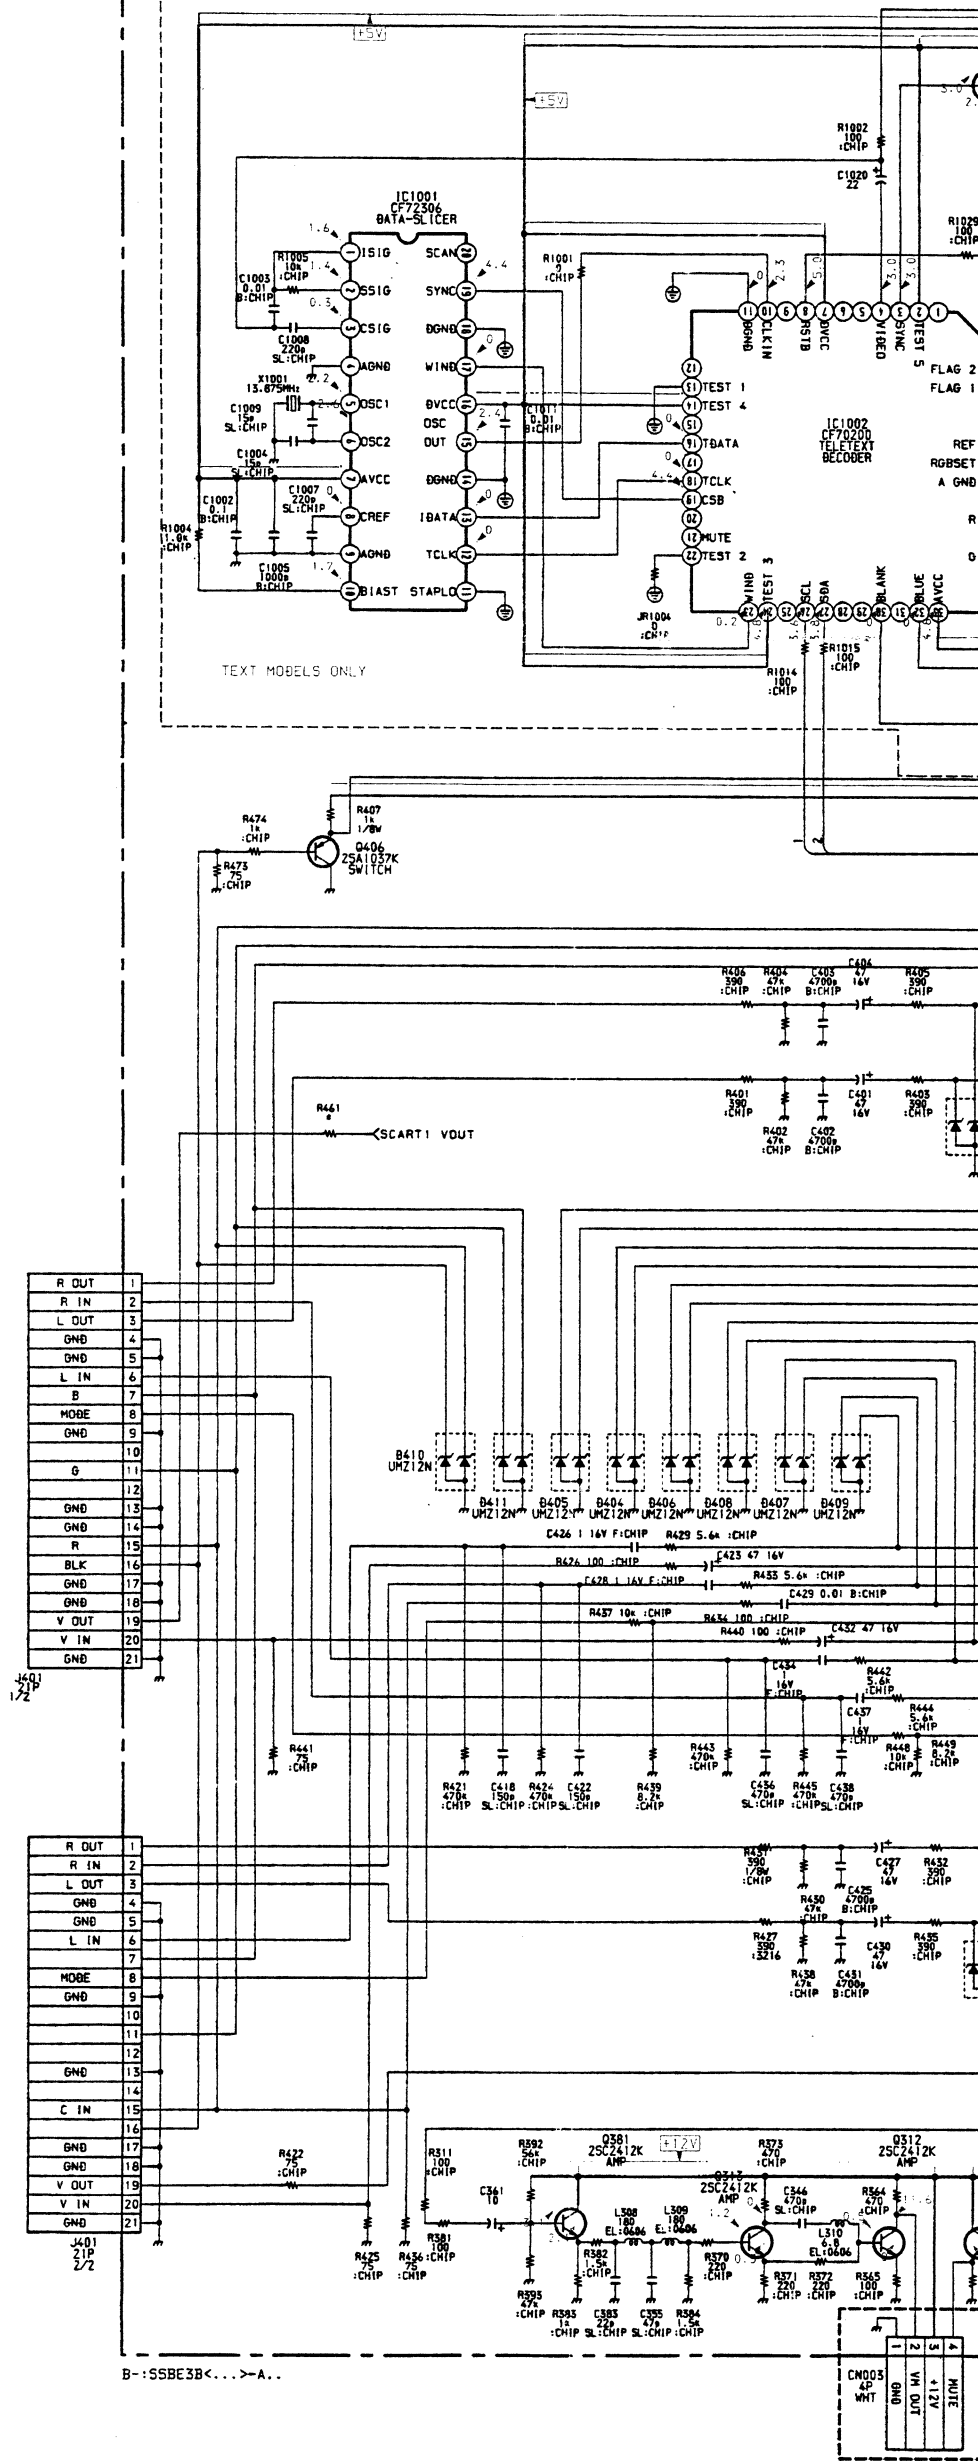

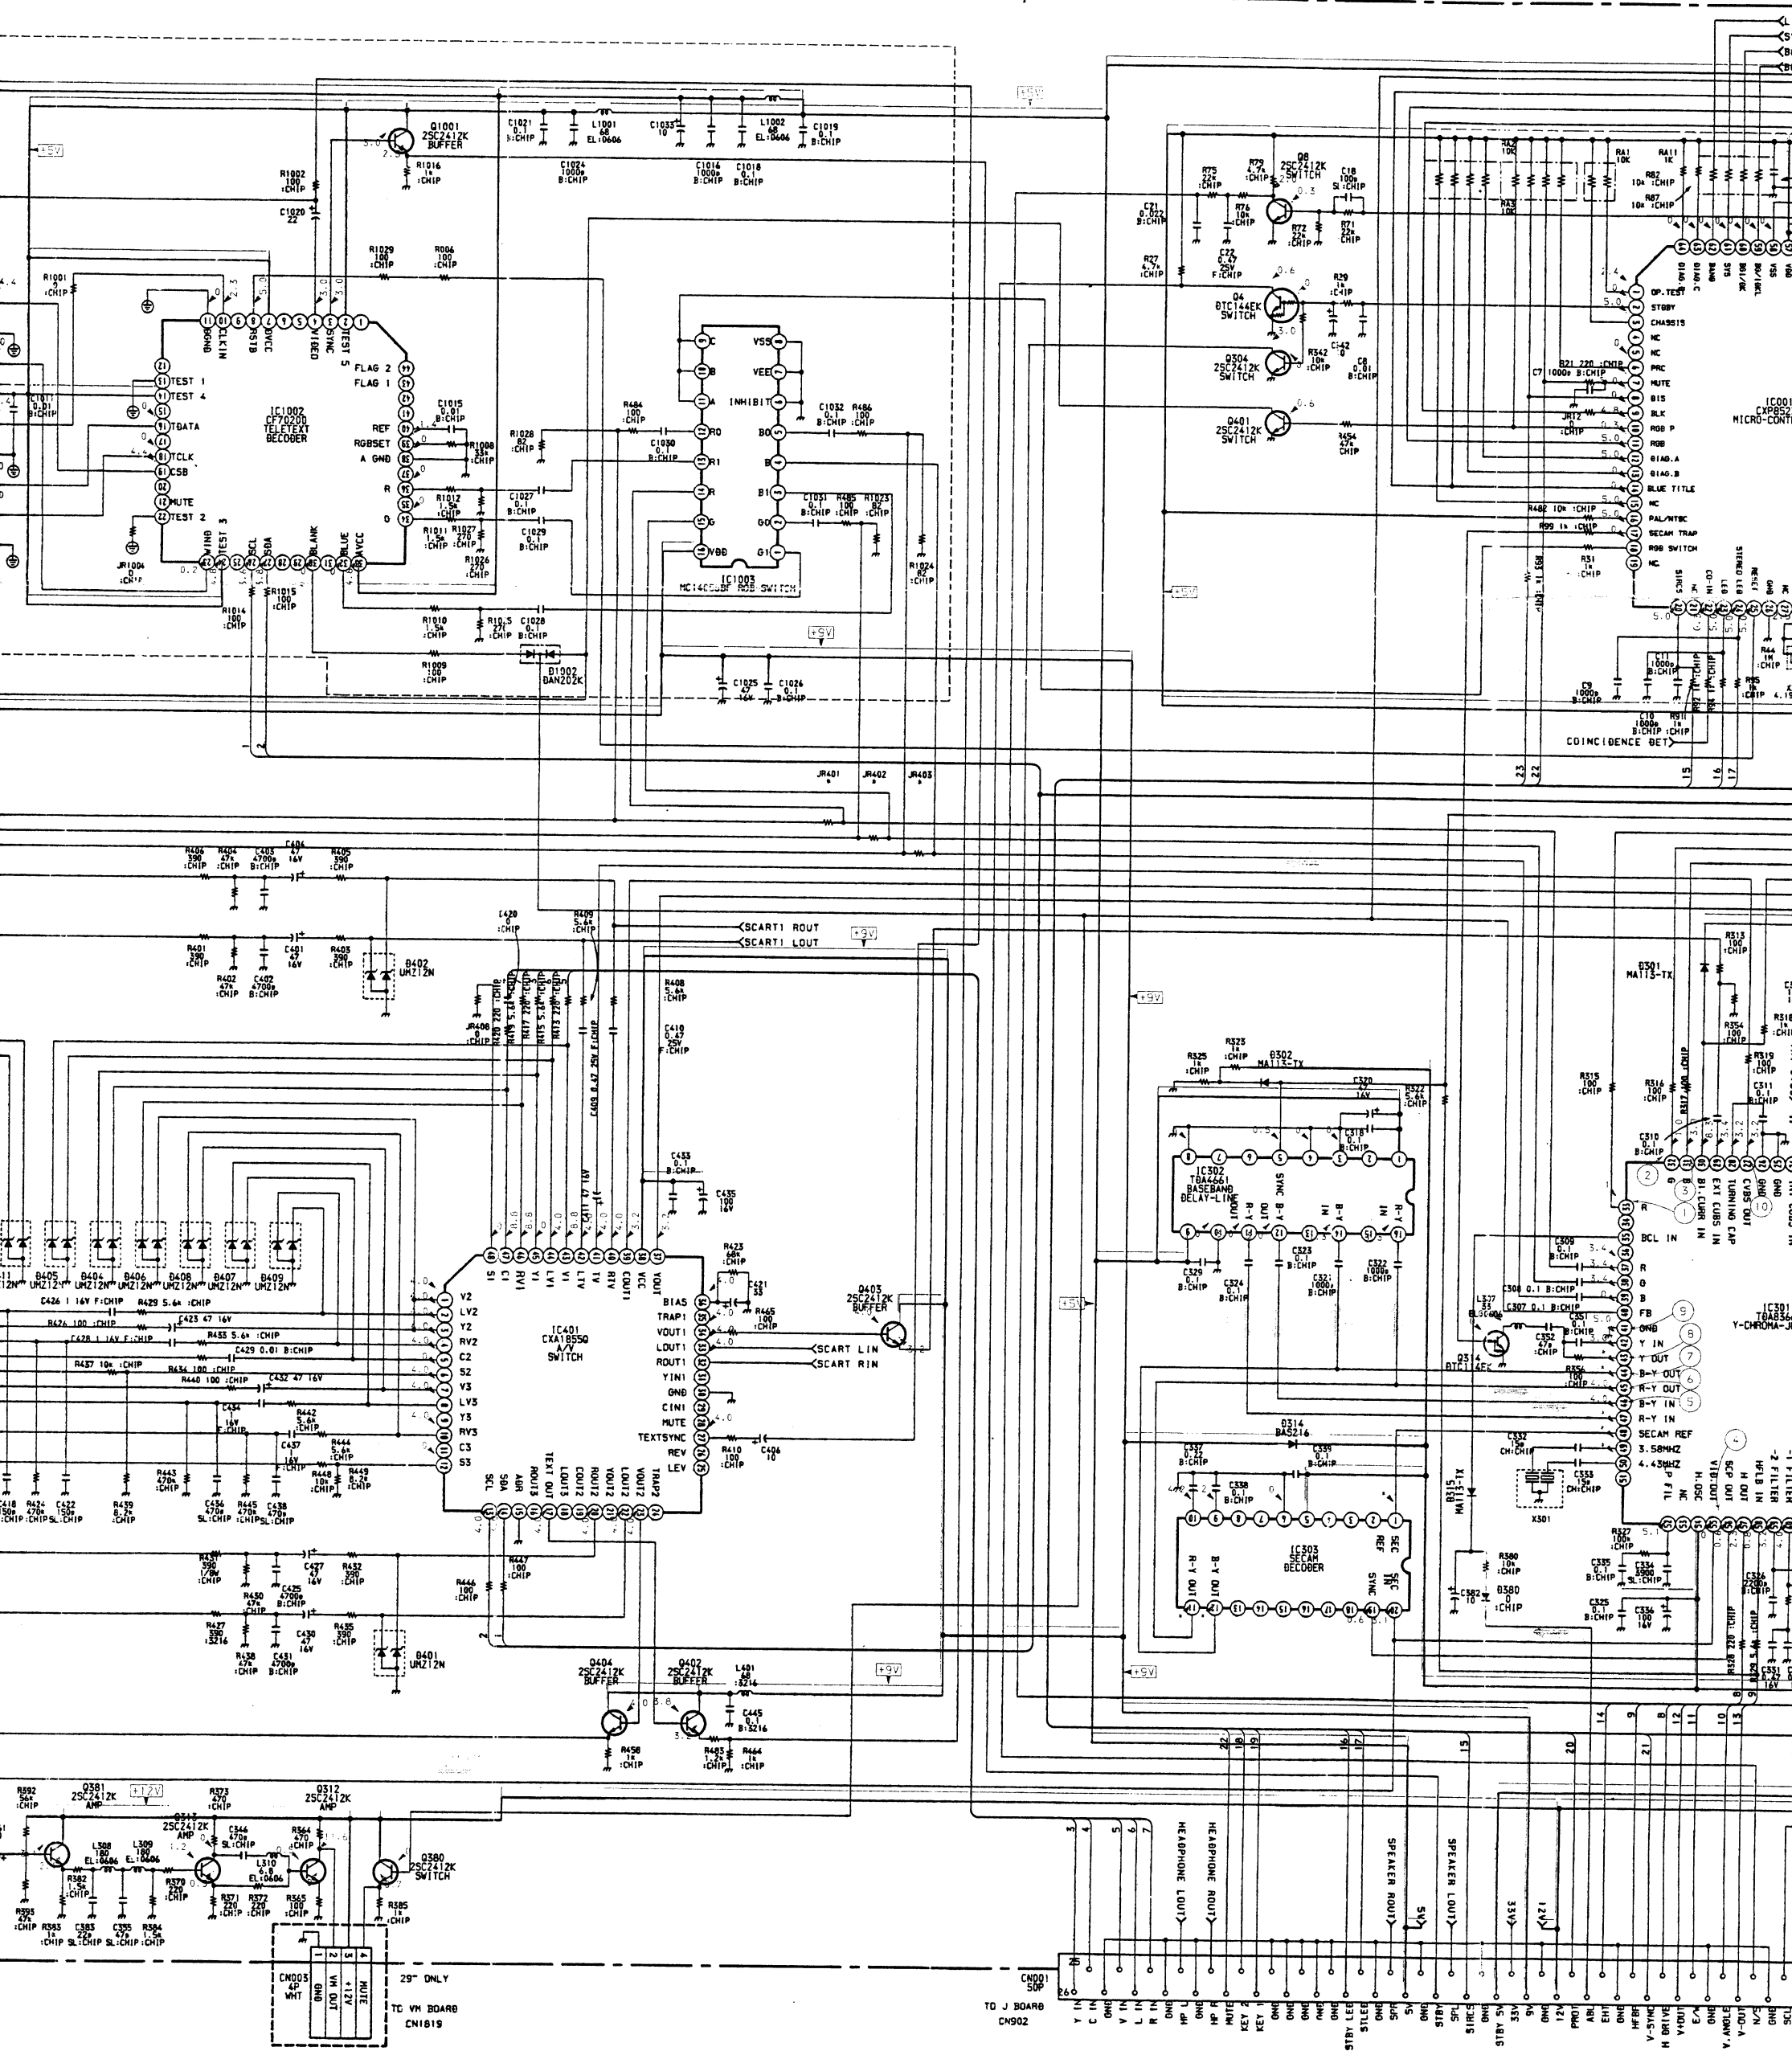


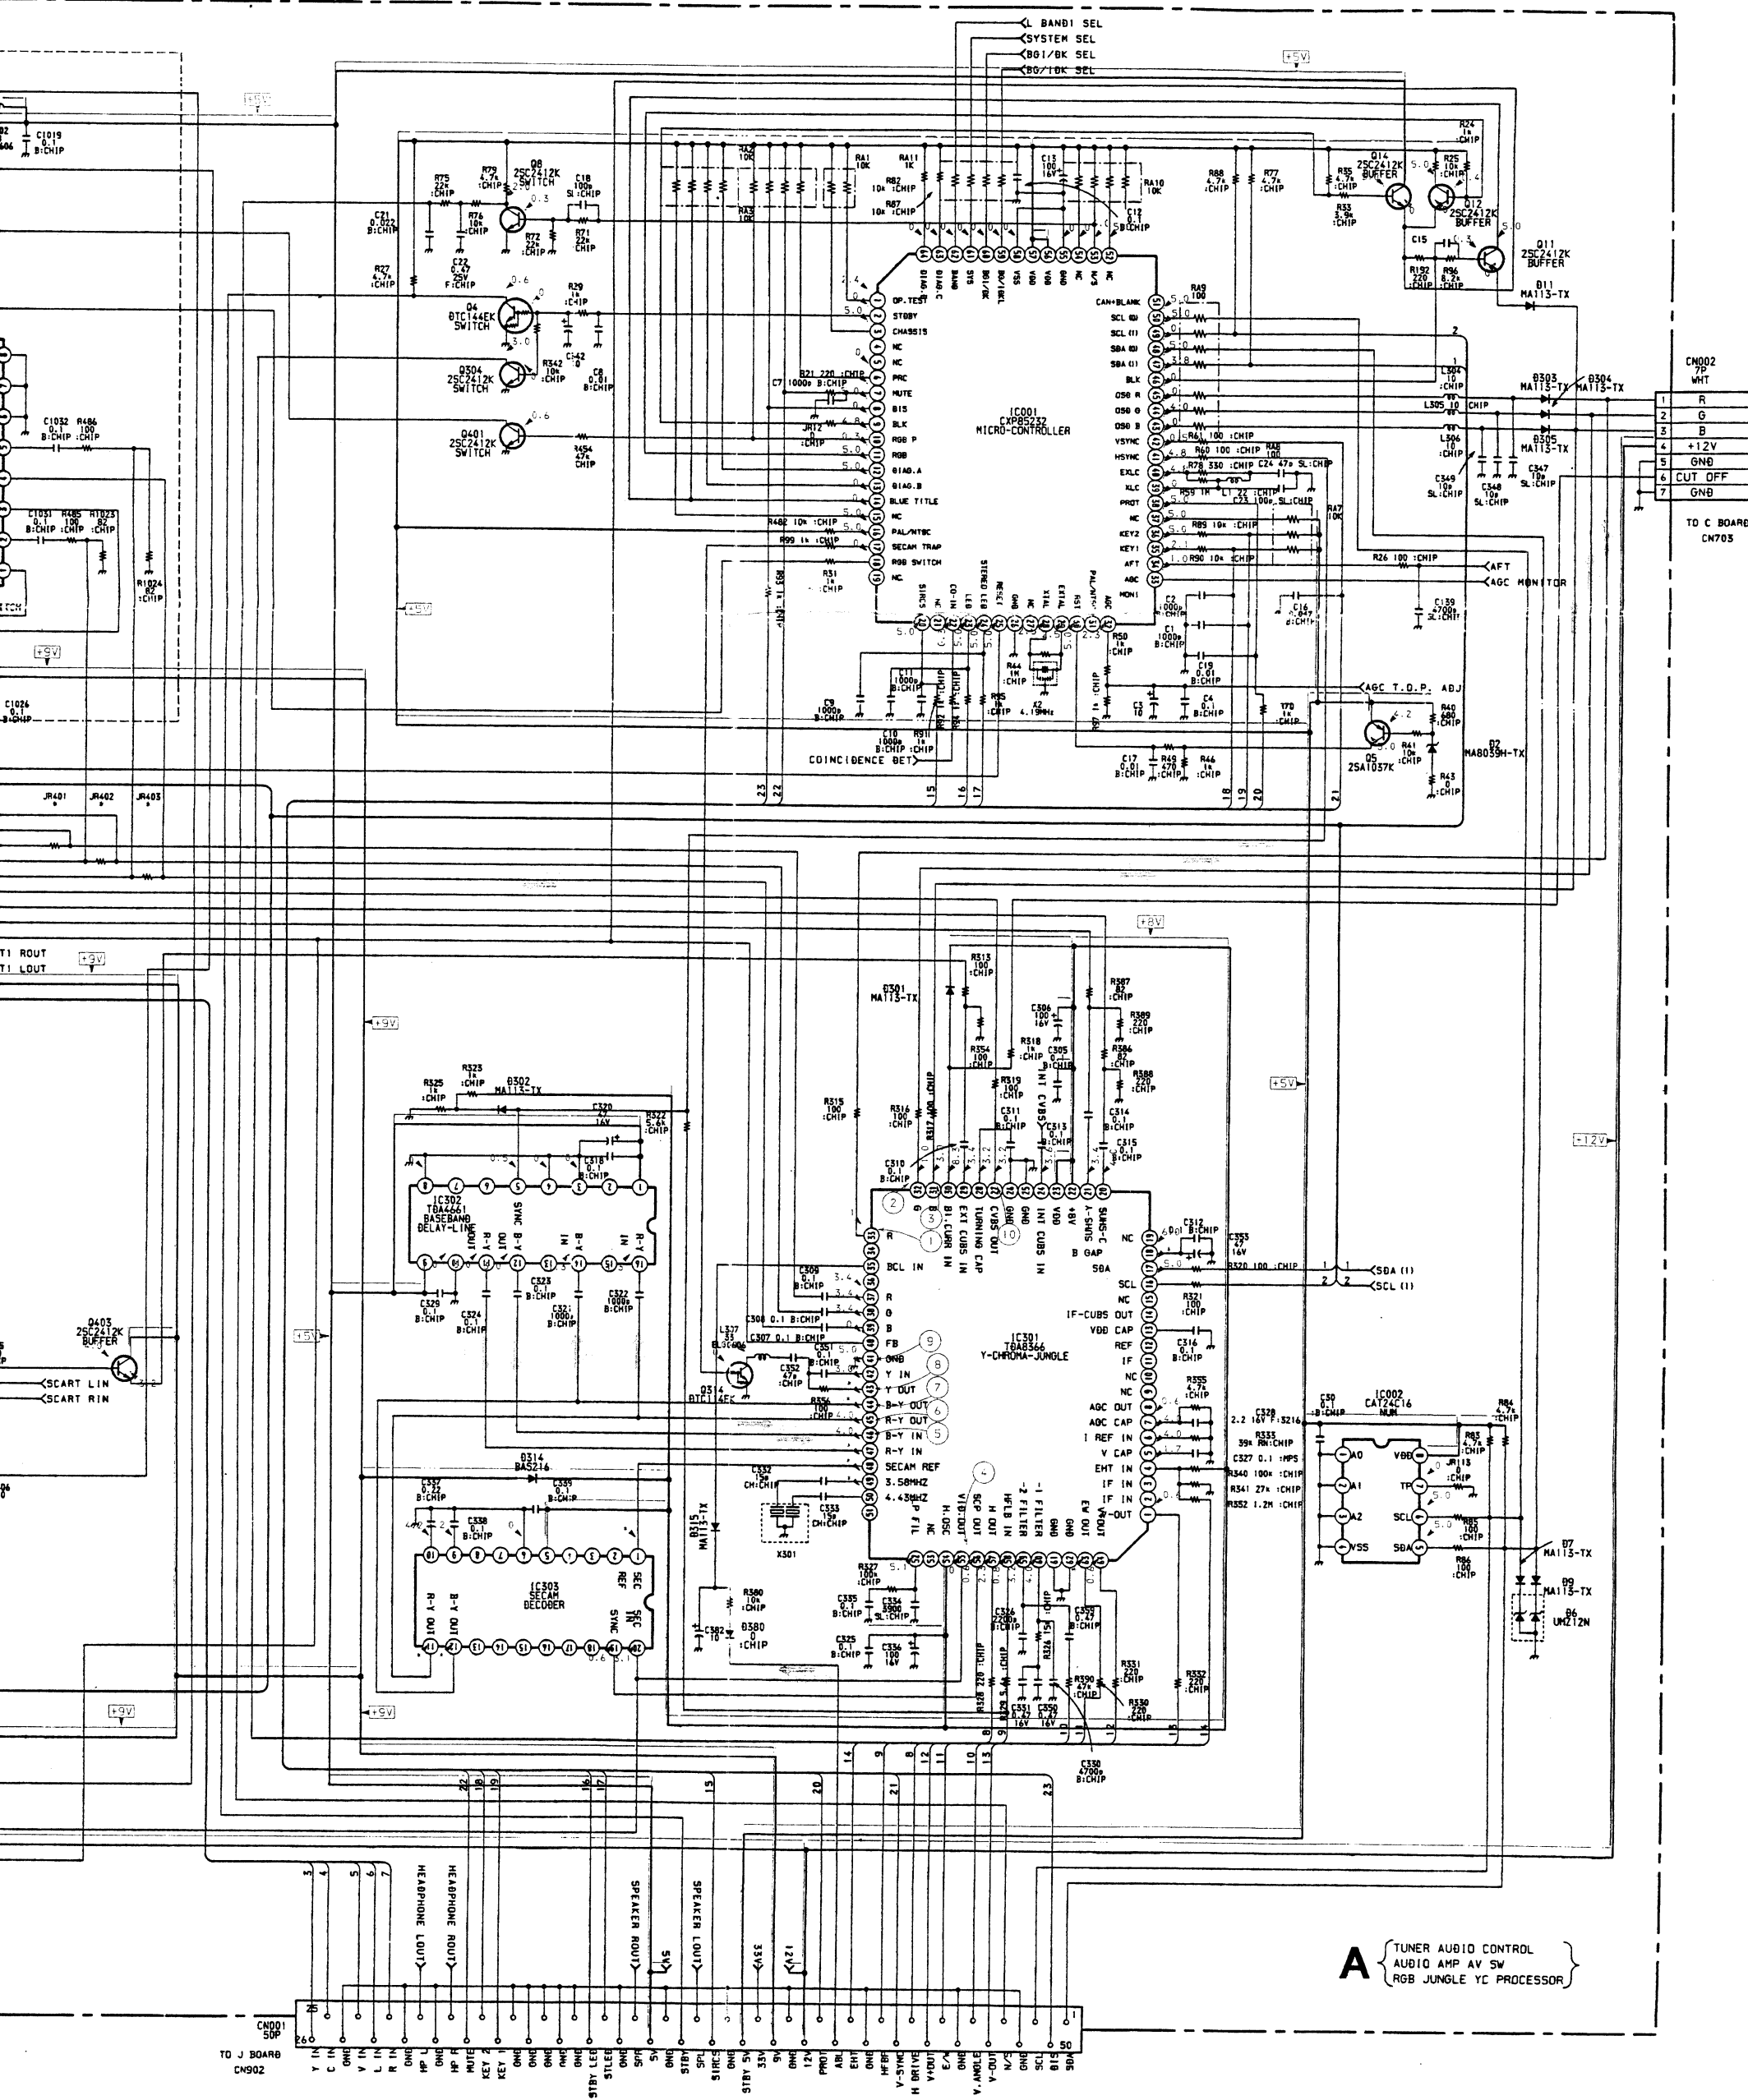


A BOARD * MARK

Ref	X2901D	X2901A	X2900B	X2901B	X2903E	X2902L	X2902U	X2901K
C101	22mF	22mF	4.7mF	4.7mF	22mF	22mF	22mF	22mF
C143	-	-	100mF 16V	100mF 16V	-	-	-	-
C144	-	-	1mF	1mF	-	-	-	-
C154	180pF	180pF	150pF	150pF	180pF	-	-	180pF
C155	47pF	47pF	33pF	33pF	47pF	-	-	47pF
C156	18pF	18pF	-	-	18pF	-	-	18pF
C207	0.0018mF 100V	0.0018mF 100V	0.0018mF 100V	0.0018mF 100V	0.0018mF 100V	-	-	0.0018mF 100V
CF101	EFCV4045A4	EFCV4045A4	EFCV4045A4	EFCV4045A4	EFCV4045A4	-	-	EFCV4045A4
CF102	5.5mHz	5.5mHz	5.5mHz/6.6mHz	5.5mHz/6.6mHz	5.5mHz	6.0mHz	6.0mHz	5.5mHz
CF103	5.5mHz	5.5mHz	5.5mHz	5.5mHz	5.5mHz	-	-	5.5mHz
CF104	6.5mHz	-	6.0mHz	6.0mHz	-	SFE6.0MB	SFE6.0MB	6.5mHz
CF106	5.75mHz	5.75mHz	5.75mHz	5.75mHz	5.75mHz	-	-	5.75mHz
D102	-	-	DAN202K	DAN202K	-	-	-	-
D103	DAN202K	-	DAN202K	DAN202K	-	-	-	DAN202K
D201	DA204K	DA204K	DA204K	DA204K	DA204K	-	-	DA204K
IC201	TDA6612	TDA6612	TDA6612	TDA6612	TDA6612	TDA6622	TDA6622	TDA6612
IC303	TDA8395T	-	TDA8395T	TDA8395T	-	-	-	TDA8395T
JR122	0 :CHIP	0 :CHIP	-	-	0 :CHIP	0 :CHIP	0 :CHIP	0 :CHIP
JR123	0 :CHIP	0 :CHIP	-	-	0 :CHIP	0 :CHIP	0 :CHIP	0 :CHIP
JR125	-	0 :CHIP	-	-	0 :CHIP	-	-	-
JR127	-	-	-	-	-	0 :CHIP	-	-
JR201	0 :CHIP	0 :CHIP	0 :CHIP	0 :CHIP	-	-	-	0 :CHIP
JR202	0 :CHIP	0 :CHIP	0 :CHIP	0 :CHIP	-	-	-	0 :CHIP
JR401	-	-	0 :CHIP	-	-	-	-	-
JR402	-	-	0 :CHIP	-	-	-	-	-
JR403	-	-	0 :CHIP	-	-	-	-	-
L105	15µH	15µH	8.2µH	8.2µH	15µH	15µH	15µH	15µH
L108	15µH	15µH	27µH	27µH	15µH	-	-	15µH
L201	4.7mmH	4.7mmH	4.7mmH	4.7mmH	4.7mmH	-	-	4.7mmH
Q103	-	-	DTC114EK	DTC114EK	-	-	-	-
Q116	DTC144EK	-	DTC144EK	DTC144EK	-	-	-	DTC144EK
Q117	DTC144EK	-	DTC144EK	DTC144EK	-	-	-	DTC144EK
Q121	-	-	2SA1037K	2SA1037K	-	-	-	-
Q125	-	-	DTC114EK	DTC114EK	-	-	-	-
R134	2.2K	-	2.2K	2.2K	-	-	-	2.2K
R135	2.2K	-	2.2K	2.2K	-	-	-	2.2K
R143	2.2K	-	2.2K	2.2K	-	-	-	2.2K
R147	270	270	150	150	270	270	270	270
R158	12K	12K	-	-	12K	-	-	12K
R199	330	330	470	470	330	-	-	330
RV102	-	-	22K	22K	-	-	-	-
SWF101	K3953M	K3953M	K3953M	K3953M	K3953M	J3950M	J3950M	K3953M
SWF102	K9350M	K9350M	K9453M	K9453M	K9350M	K9350M	K9350M	K9350M
TU101	UV-916H	UV-916H	UV-916H	UV-916H	UV-916H	U-944C	U-944C	UV-916H




A BOARD IC301 TDA8366T

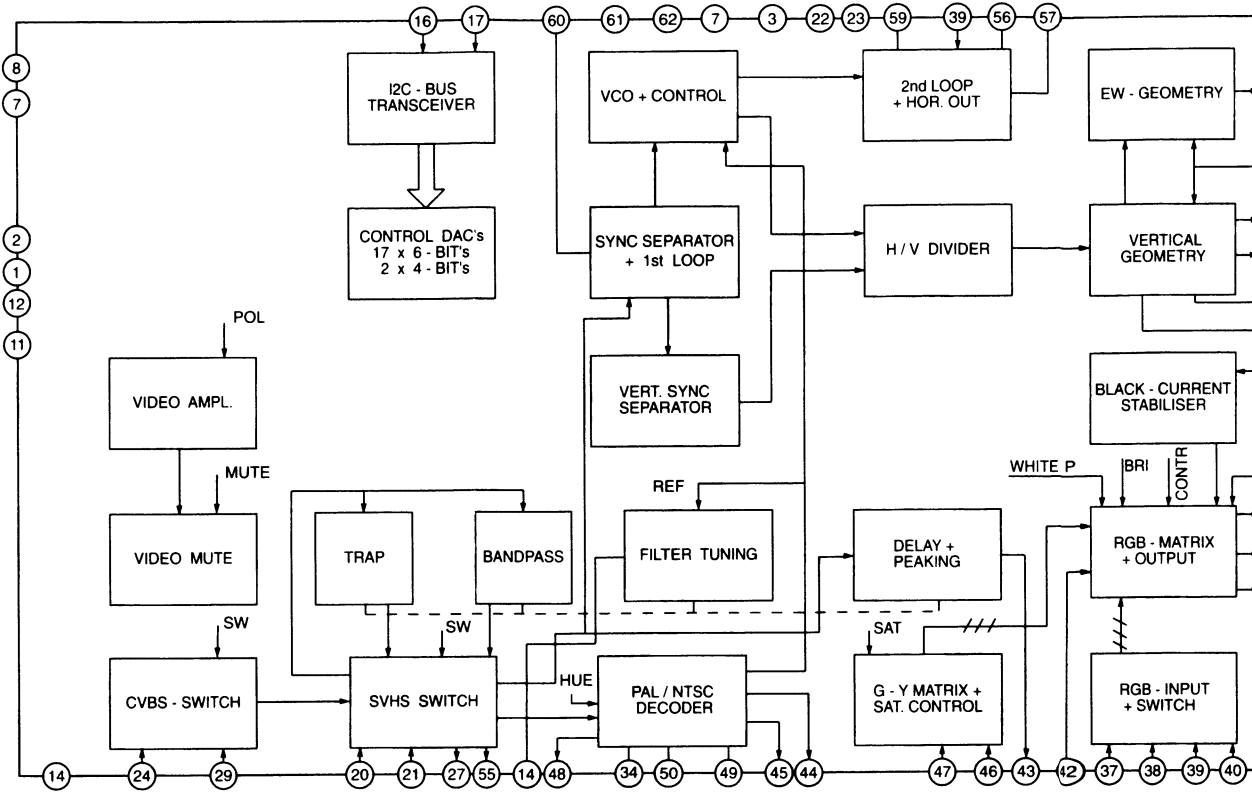

WAVEFORMS A BOARD

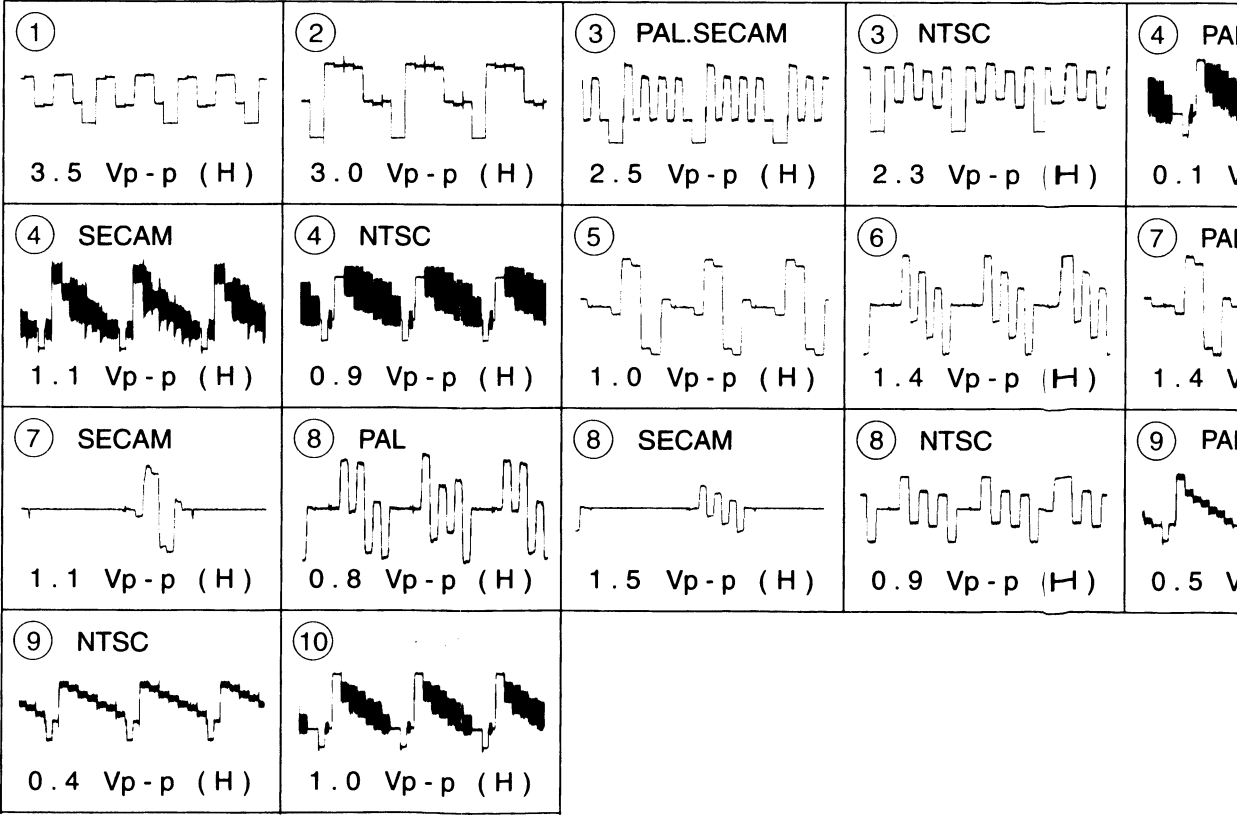

- A BOARD -

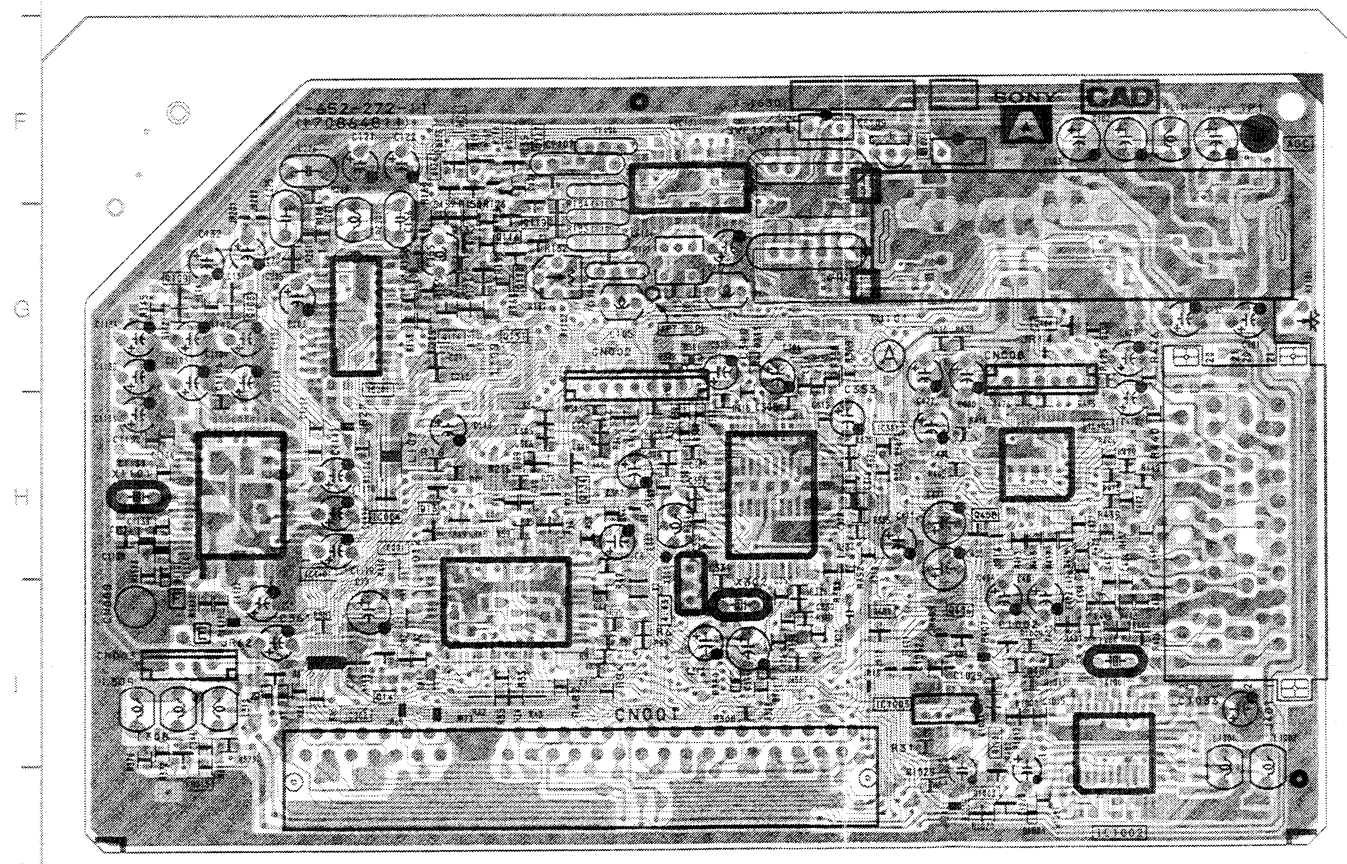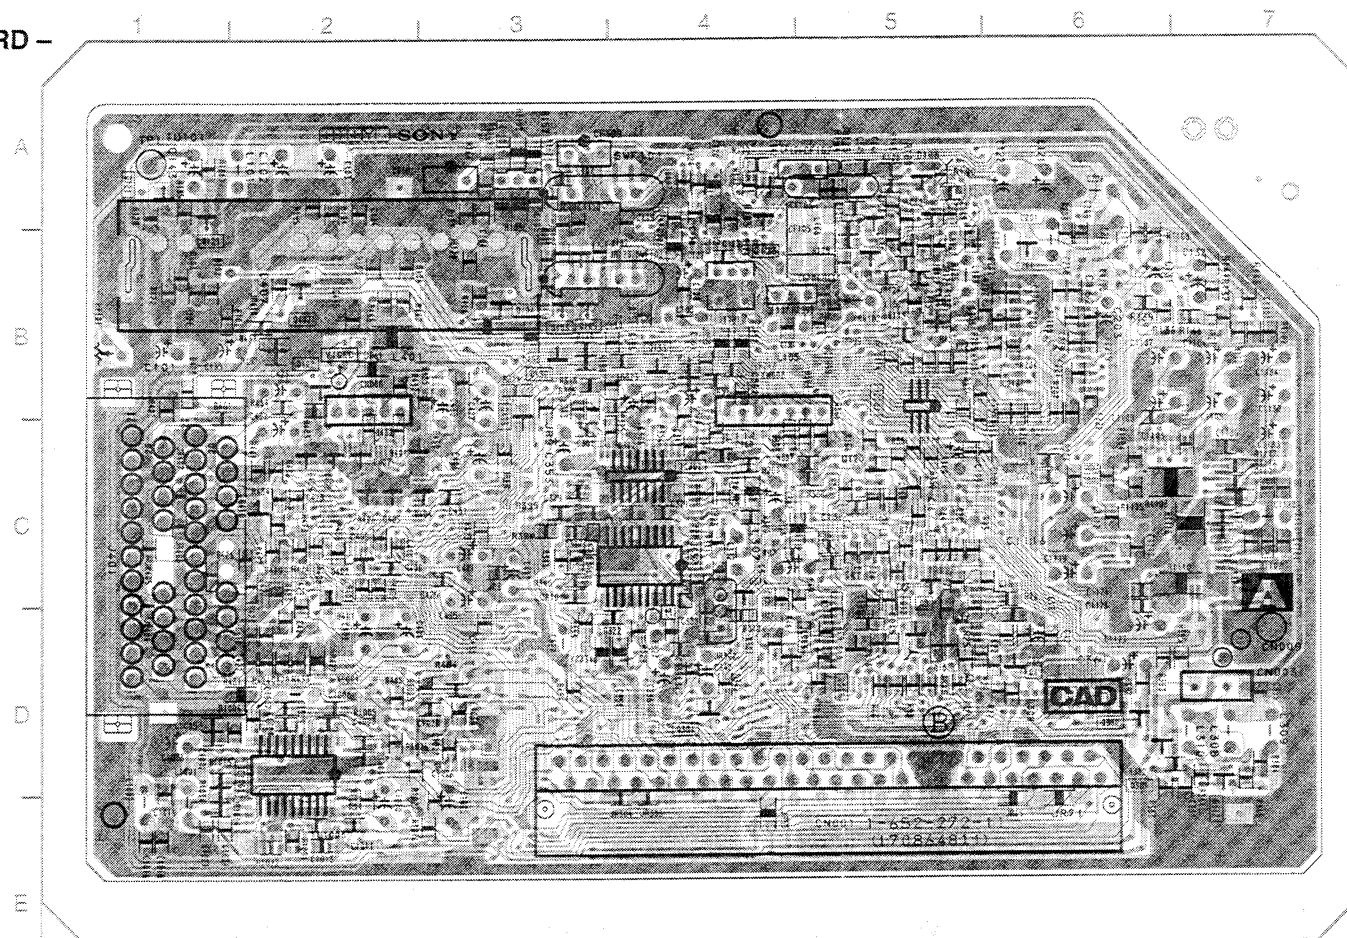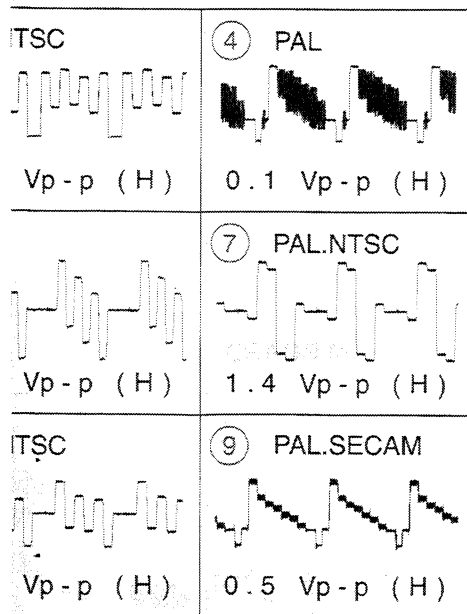


IC		Q313 J - 1	
IC001	H - 2	Q314	C - 4
IC002	I - 2	Q380	D - 6
IC101	F - 4	Q381	D - 6
IC201	G - 2	Q401	I - 5
IC202	B - 5	Q402	B - 2
IC301	H - 5	Q403	B - 3
IC302	C - 4	Q404	G - 6
IC303	C - 4	Q1001	I - 6
IC401	H - 6	Q1003	J - 5
IC1001	D - 2	DIODE	
IC1002	J - 6	D6	I - 2
IC1003	I - 5	D7	I - 2
IC1101	H - 2	D9	I - 2
TRANSISTOR		D11	D - 5
Q4	D - 6	D101	B - 2
Q8	C - 5	D102	B - 4
Q11	D - 5	D103	A - 5
Q12	C - 5	D201	B - 6
Q14	I - 2	D301	G - 4
Q102	F - 5, A - 3	D302	C - 4
Q103	B - 3	D303	H - 3
Q104	B - 3	D304	B - 5
Q105	B - 3	D305	C - 4
Q107	B - 5	D314	B - 3
Q108	G - 2	D380	I - 4
Q109	G - 1	D401	C - 2
Q114	G - 3	D402	C - 2
Q116	G - 3	D404	C - 2
Q117	F - 3	D405	C - 2
Q120	C - 5	D406	C - 2
Q121	A - 1	D407	C - 2
Q123	B - 4	D408	C - 2
Q124	F - 3	D409	C - 2
Q125	B - 1	D410	C - 2
Q130	B - 3	D411	D - 2
Q131	G - 3	D1002	I - 6
Q132	G - 3	D1003	J - 6
Q133	B - 4	D1101	H - 1
Q304	D - 4	D1102	C - 7
Q312	E - 7		

Note :


-  : Pattern from the side which enables seeing.
-  : Pattern of the rear side.

C [RGB OUT] **VM** [VM AMP]



- C BOARD -

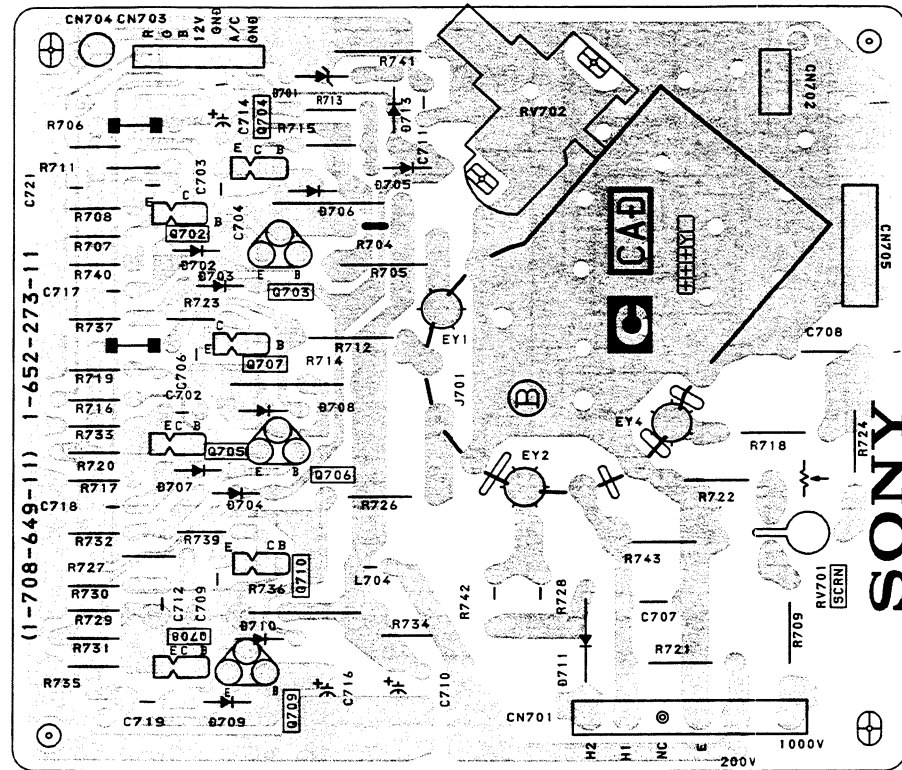


- VM BOARD -

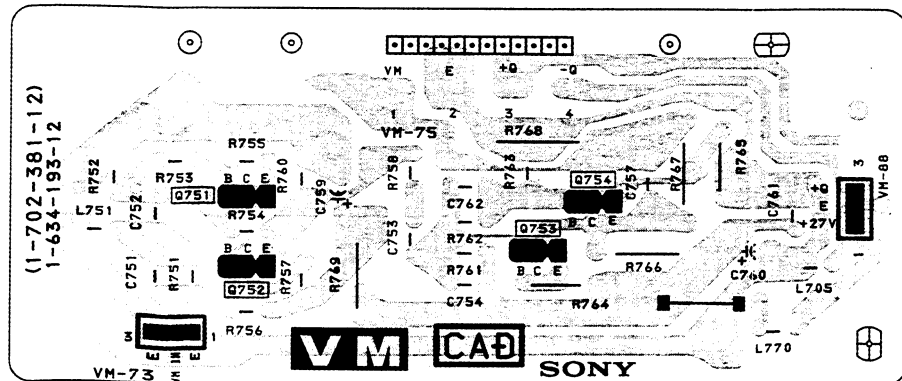


5.4 SEMICONDUCTORS

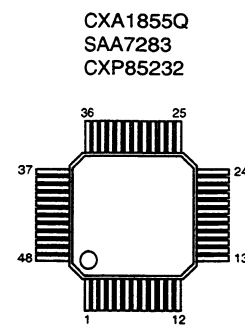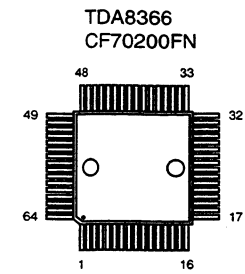


LM393
TDA7264




TDA7264




STRS6708

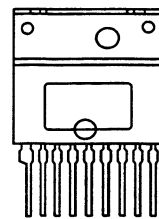


TDA6622

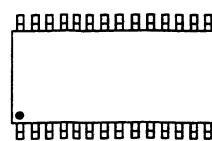


TDA9814

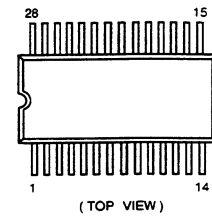


CF72306DW

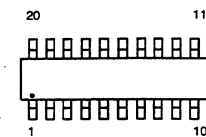


CAT24C16J

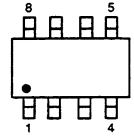


BA7046
TDA2822



MC7812
MC7805CT
LM2940T
SE135N

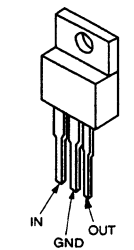


MC14053BF




2SA10910
2SC2551-0
JA101
JC501TP




STV9379




TDA4661/V2

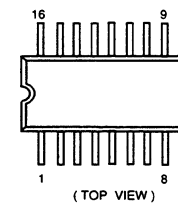


DTC144EK
DTA144EK
2SC2412K
2SA1037-G




1MX1T110




BF871



2SA1837
2SC4793



2SD774-34




2SC2688-LK




TL750L05CLP




DTZ3.6A




TLP621GR




2SC4927-01




RGP10GPKG23
RGP15GPKG23
GP08DPKG23
RU-4AM
EL1Z
EU-1-V1
EU-1ZV1

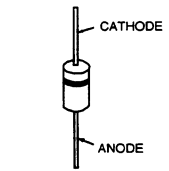


MTZJ-9.1C
MTZJ-5.1B
MTZJ-9.1
MTZJ-3.6A
MTZJ-6.8C
MTZJ-39C
1SS133

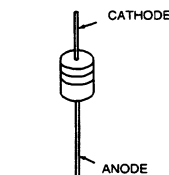


MA704WK




DA204K




UMZ12N




MA8039
MA113




SLR-54VR3

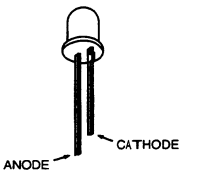


2SA1667
2SA1837
2SC3852A




2SC2688-LK




2SC2785-HFE




2SC3779C




2SC4793




2SC4927-01




2SD774-34




AU-01Z-V1 GP08D
EGP20G RGP02-20E
EL1Z RGP10GPKG23
EM1-V1 RGP15GPKG23
EU-1-V1 RU-3YX-V1
EU-1Z RU4AM
EU-1Z-V1 RU4DS
FML-G12S




BAS216
DTZ33B
MA8330
1SS355
1SV214

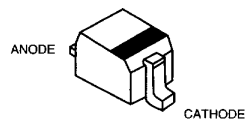



DAN202K
UMZ12N




DA204K




D4SB60L

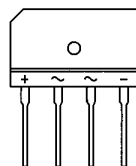



ERA85-009 MTZJ-16B
MTZJ-3.6A MTZJ-39C
MTZJ-3.9B RD3.9ESB2
MTZJ-4.7B RD5.1ESB2
MTZJ-5.1B RD5.6ESB2
MTZJ-5.6B RD6.8ESB2
MTZJ-6.8C RD7.5ESB2
MTZJ-7.5C RD9.1ESB3
MTZJ-9.1 UZ-4.7BSC
MTZJ-9.1A 1SS133
MTZJ-9.1C




FMS-3FU



MA704WK




SLA-570KT3F

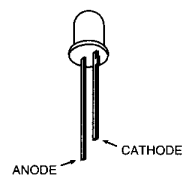

6-1. CHASSIS


■ : BVTP 4X16 7-685-663-79

● : BVTP 3X12 7-685-648-79

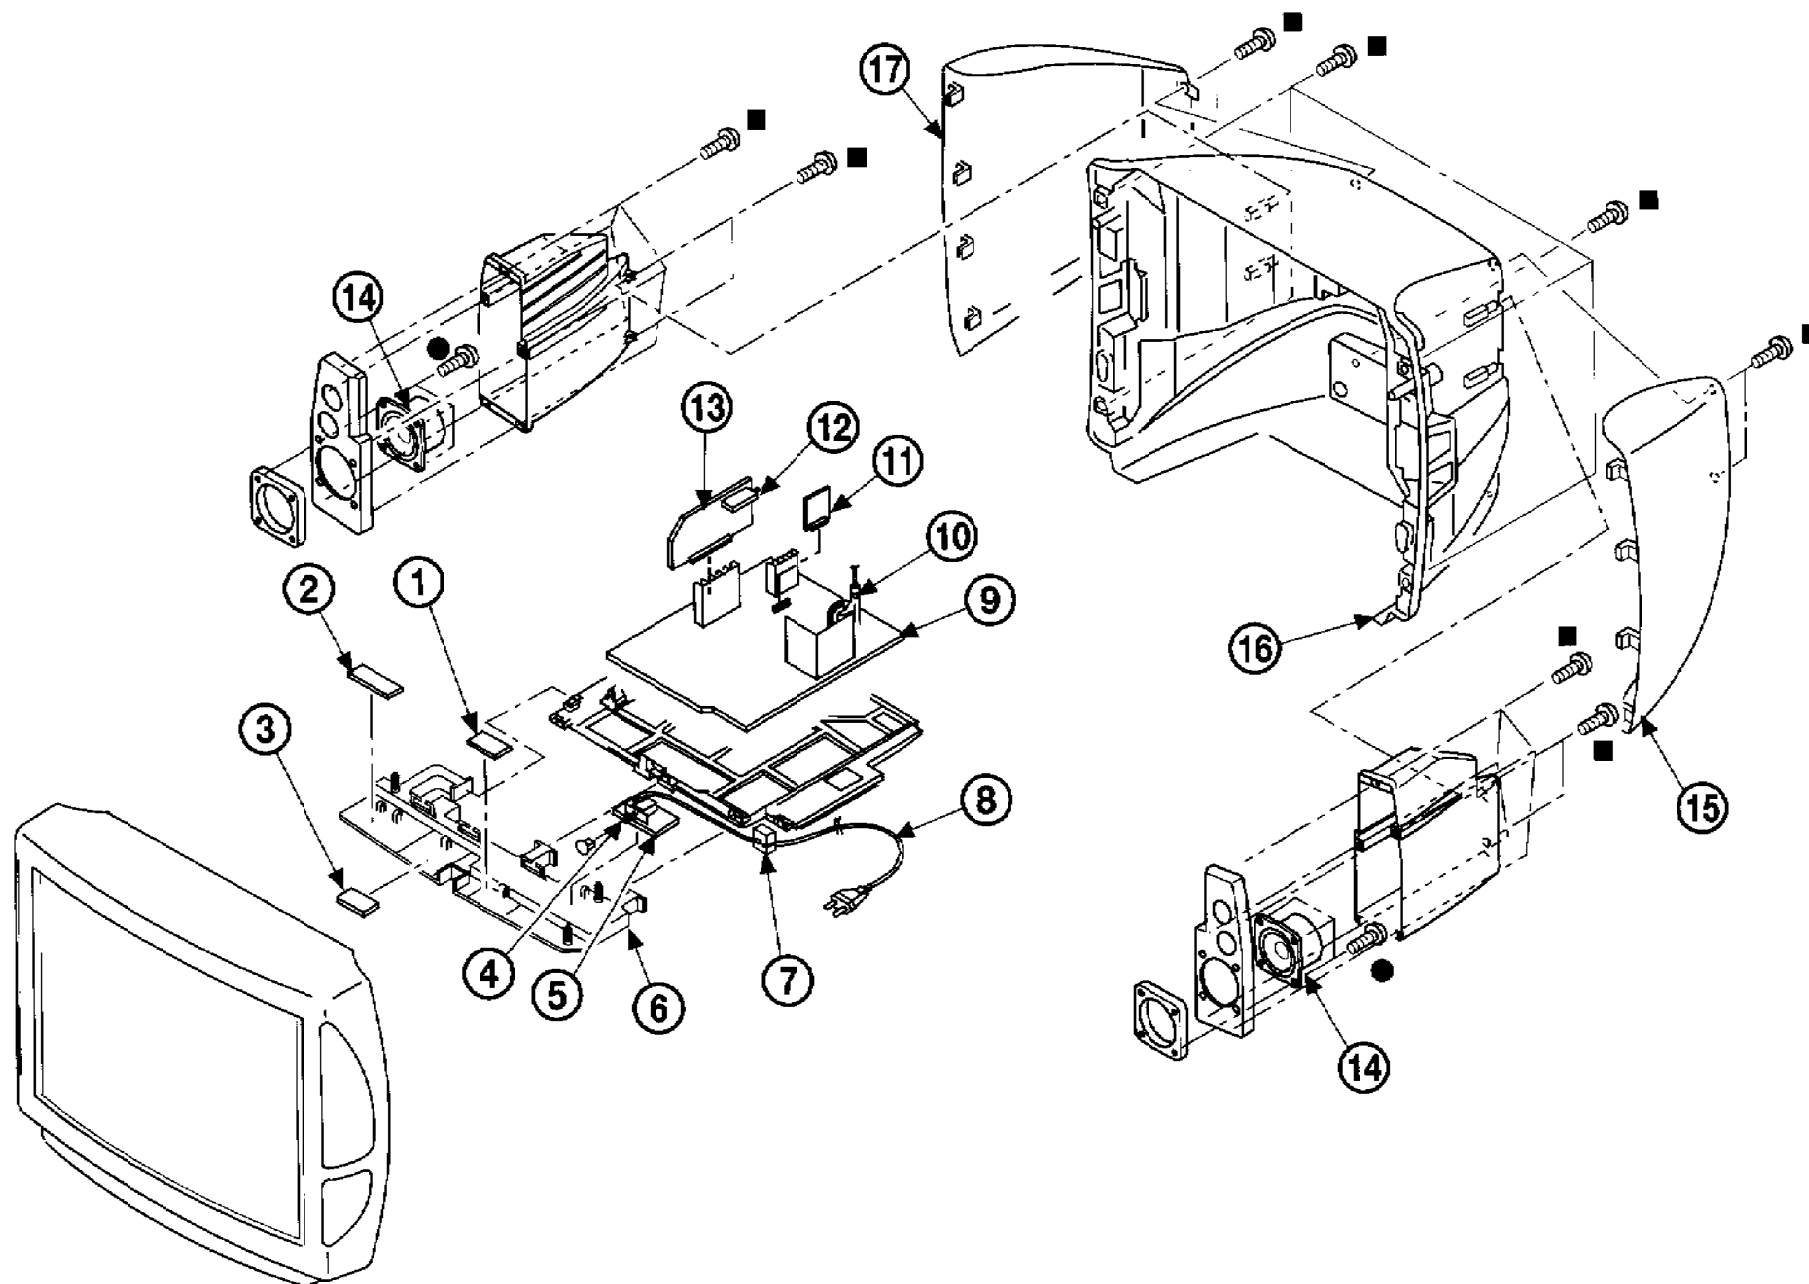

6-2. PICTURE TUBE

● : BVTP 3X12 7-685-648-79

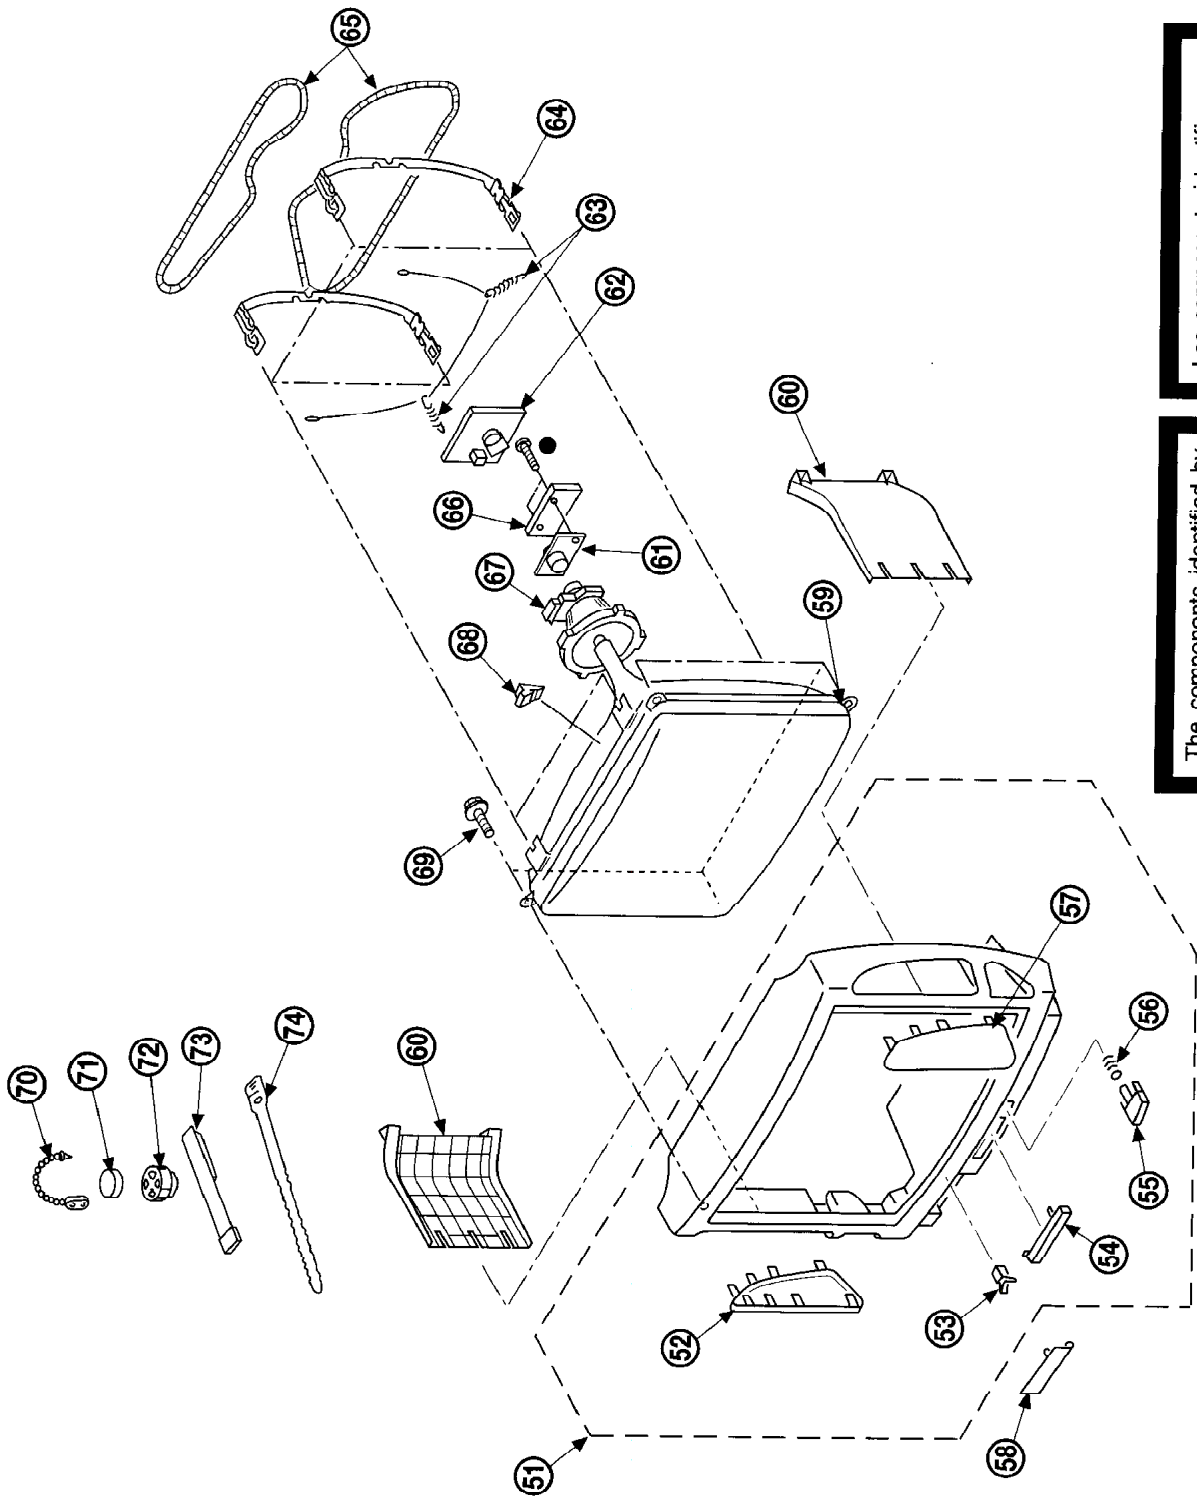

Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifique.

The components identified by shading and marked Δ are critical for safety. Replace only with the part number specified.